

Rae Dunn YRDAF52

Rae Dunn 1200W 4-Quart Glass Air Fryer Instruction Manual

Model: YRDAF52

INTRODUCTION

Thank you for purchasing the Rae Dunn 1200W 4-Quart Glass Air Fryer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before first use and retain for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure the glass basket is properly seated before operation.
- Do not block any ventilation openings.

PRODUCT OVERVIEW

The Rae Dunn 4-Quart Glass Air Fryer is designed for efficient and versatile cooking. It features a powerful 1200W heating element, a transparent glass frying basket, and intuitive digital controls.

Components

- Main Unit with Digital Touch Display
- 4-Quart Glass Frying Basket
- 2 Stackable Trays (for multi-level cooking)
- Handle for Glass Basket



Image: The Rae Dunn 4-Quart Glass Air Fryer, showcasing its compact design and transparent glass basket.

4 QT. GLASS
FRYING BASKET

2 STACKABLE
TRAYS INCLUDED



R A E D U N N .

Image: A close-up view of the 4-quart glass frying basket and the two stackable trays included for versatile cooking.

Key Features

- **Power:** 1200 Watts for fast and consistent cooking.
- **Capacity:** 4 Quarts, suitable for family meals.
- **Temperature Control:** Variable temperature from 175°F to 400°F (approximately 79°C to 204°C).
- **Timer:** 60-minute timer for precise cooking duration.
- **Digital Display:** Intuitive digital touch display with 6 preset cooking modes.
- **Easy Cleaning:** Glass frying basket and trays are dishwasher safe.

RAE DUNN.

4 QT GLASS AIR FRYER



Image: Visual representation of key features including the 60-minute timer, digital touch display with presets, 175°F-400°F temperature control, and dishwasher-safe components.

SETUP

1. **Unpacking:** Carefully remove the air fryer and all accessories from the packaging. Retain packaging for storage or shipping if needed.
2. **Initial Cleaning:** Before first use, wash the glass frying basket and the two stackable trays with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is adequate space (at least 6 inches) around the back and sides for proper ventilation. Do not place it directly under cabinets or near flammable materials.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of your appliance.

OPERATING INSTRUCTIONS

Follow these steps for optimal cooking results with your Rae Dunn Air Fryer.

General Operation

1. **Prepare Food:** Place your desired food items into the glass frying basket. You can use one or both stackable trays depending on the quantity and type of food. Do not overfill the basket.
2. **Insert Basket:** Carefully slide the glass frying basket back into the main unit until it clicks securely into place.
3. **Power On:** Plug the air fryer into a power outlet. The digital display will illuminate.
4. **Set Temperature and Time:**
 - **Manual Setting:** Use the temperature control buttons to set the desired cooking temperature (175°F - 400°F). Use the timer buttons to set the cooking time (up to 60 minutes).
 - **Preset Modes:** Alternatively, select one of the 6 preset cooking modes for common dishes. The air fryer will automatically set the optimal temperature and time for that preset.
5. **Start Cooking:** Press the Start/Pause button to begin the cooking process. The heating indicator light will turn on.
6. **Shake/Flip Food (Optional):** For even cooking, especially with items like fries or chicken wings, you may need to shake or flip the food halfway through the cooking time. Carefully pull out the basket, shake or flip, and reinsert. The air fryer will resume cooking automatically.
7. **End of Cooking:** The air fryer will beep when the set time has elapsed, and the heating element will turn off.
8. **Remove Food:** Carefully pull out the glass frying basket using the handle. Use heat-resistant tongs or utensils to remove the cooked food. Be cautious of hot steam.
9. **Power Off:** Unplug the appliance from the wall outlet after use.

RAE DUNN.



Image: The Rae Dunn Air Fryer in operation, showing a batch of crispy fries cooking in the glass basket.



Image: The Rae Dunn Air Fryer on a kitchen counter, with cooked chicken wings displayed on the included trays, demonstrating its cooking capabilities.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Glass Basket and Trays:** The glass frying basket and stackable trays are dishwasher safe. Alternatively, wash them with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before storing or next use.
3. **Exterior:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the surface.
4. **Interior (Heating Element):** If necessary, gently wipe the interior of the main unit and around the heating element with a damp cloth. Ensure no water enters the electrical components. For stubborn residue, a soft brush can be used.

after ensuring the unit is unplugged and cool.

5. **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; basket not properly inserted.	Ensure the power cord is securely plugged into a working outlet. Check if the glass basket is fully inserted and clicked into place.
Food is not cooked evenly.	Basket is overcrowded; food not shaken/flipped; incorrect temperature/time.	Do not overcrowd the basket. Cook in smaller batches if necessary. Shake or flip food halfway through cooking. Adjust temperature and time as needed for specific recipes.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food.	Clean the basket and trays thoroughly after each use. For high-fat foods, drain excess fat during cooking. This is usually harmless but indicates residue.
Food is not crispy.	Basket overcrowded; insufficient cooking time/temperature; too much moisture.	Ensure food is in a single layer or not overcrowded. Increase cooking time or temperature slightly. Pat food dry before air frying. A light coating of oil can help.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Detailed technical specifications for the Rae Dunn 4-Quart Glass Air Fryer, Model YRDAF52.

RAE DUNN.

4 QT GLASS AIR FRYER

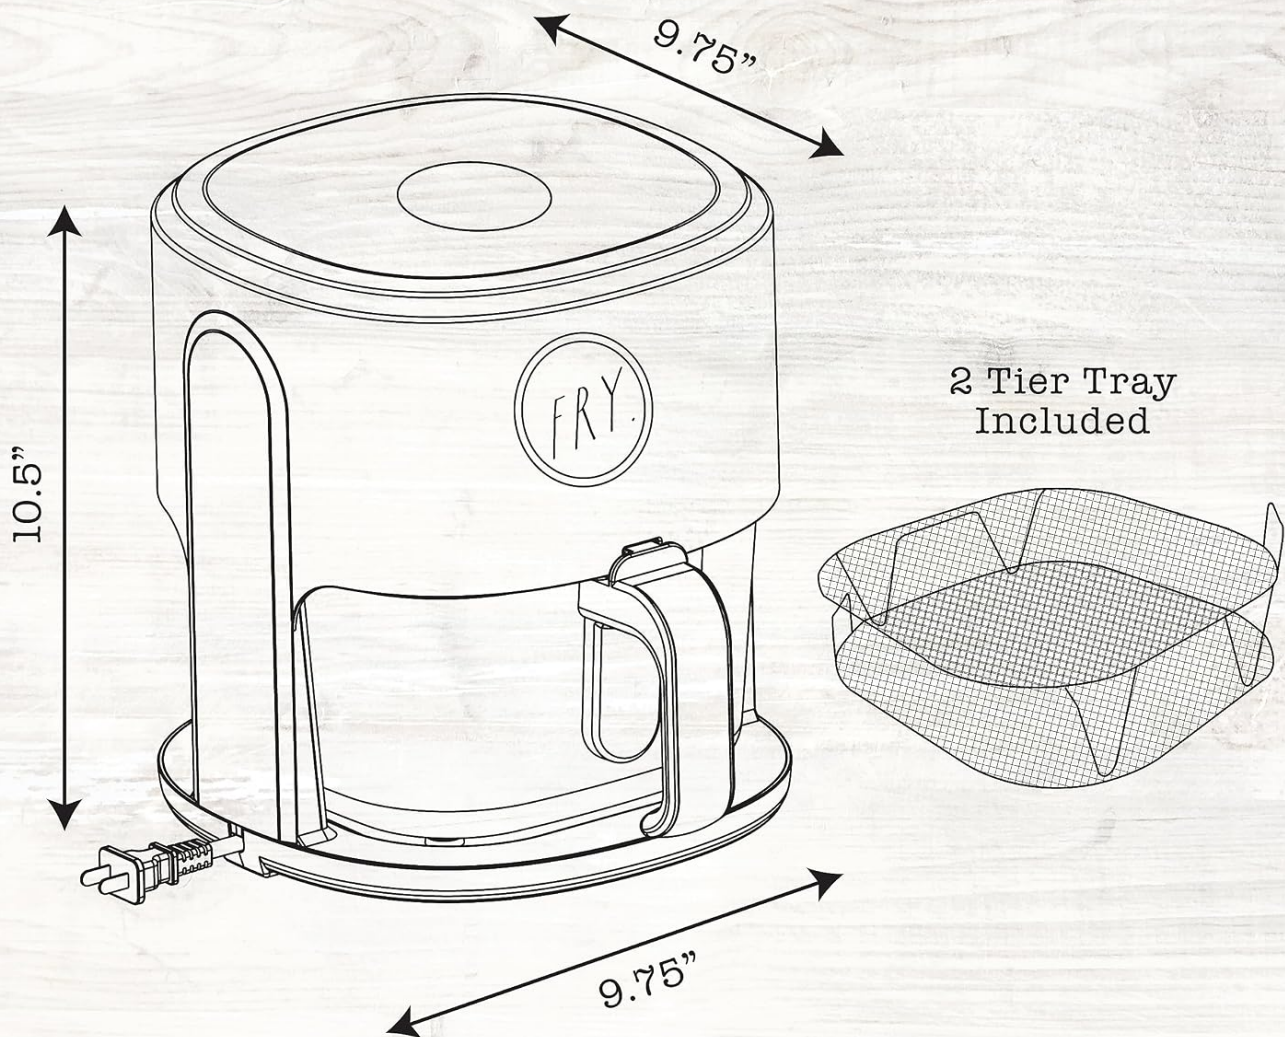


Image: Diagram illustrating the dimensions of the Rae Dunn 4-Quart Glass Air Fryer.

- **Brand:** Rae Dunn
- **Model Number:** YRDAF52
- **Color:** Cream
- **Capacity:** 4 Quarts
- **Power:** 1200 Watts
- **Voltage:** 120 Volts
- **Material:** Glass (basket), other components as specified.
- **Product Dimensions:** Approximately 30.81 cm (L) x 26.01 cm (W) x 28.3 cm (H) (12.13 x 10.24 x 11.14 inches)
- **Product Weight:** Approximately 4.54 kg (10 lbs)
- **Special Features:** Temperature Control, Digital Touch Display, 6 Presets, Dishwasher Safe Glass Basket.
- **Temperature Range:** 175°F - 400°F
- **Timer:** Up to 60 minutes

WARRANTY AND SUPPORT

Specific warranty details are not provided within this manual. For information regarding warranty coverage, product registration, or customer support, please refer to the documentation included with your purchase or visit the official Rae Dunn website. Please have your model number (YRDAF52) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question