

[manuals.plus](#) /› [GOURMETmaxx](#) /› [GOURMETmaxx Nutrition Mixer Power 500W M-Set User Manual](#)**GOURMETmaxx 11003**

# **GOURMETmaxx Nutrition Mixer Power 500W M-Set User Manual**

Model: 11003

## **INTRODUCTION**

---

Thank you for choosing the GOURMETmaxx Nutrition Mixer Power 500W M-Set. This versatile appliance is designed to help you prepare a variety of healthy and delicious drinks and dishes quickly and easily. With its powerful 500W motor and 22,000 RPM, you can blend, stir, chop, grind, and puree your favorite ingredients to achieve perfect consistency. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure you get the most out of your new mixer.

NUTRITION MIXER

# BOISSONS RICHES EN VITAMINES PRÉPARÉES RAPIDEMENT



MAX.  
500  
WATTS

CAPACITÉ DE  
700 ML

FACILE À  
NETTOYER

Image: The GOURMETmaxx Nutrition Mixer with various fruits and two prepared smoothies, highlighting its 500W power and 700ml capacity.

## IMPORTANT SAFETY INSTRUCTIONS

Please read all safety warnings and instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor base in water or any other liquid. Clean with a damp cloth only.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender.
- Ensure the blade assembly is securely attached to the blending cup before placing it on the motor base.
- Do not blend hot liquids, as pressure buildup can cause the cup to burst and result in burns.
- This appliance is not suitable for crushing ice cubes.**
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.

- Close supervision is necessary when any appliance is used by or near children.
- Use only attachments and accessories recommended by the manufacturer.

## PRODUCT COMPONENTS

The GOURMETmaxx Nutrition Mixer Power 500W M-Set includes the following parts:

- 1x Motor Base (500W)
- 1x 700ml Blending Cup
- 2x 350ml Blending Cups
- 2x Blade Assemblies (4-blade cross blade)
- 4x Lids (including To-Go lids)
- 1x Recipe Book (may vary by region)



Image: An exploded diagram showing the motor base, blending cup, blade assembly, and lid, along with dimensions and features like the 4-blade design and 700ml capacity.

## SETUP

---

- Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- Clean:** Before first use, wash the blending cups, blade assemblies, and lids in warm, soapy water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth.
- Placement:** Place the motor base on a clean, dry, and stable surface. Ensure it is within reach of a power outlet.

## OPERATING INSTRUCTIONS

---

Follow these steps to prepare your desired recipes:

- Add Ingredients:** Fill your chosen blending cup (700ml or 350ml) with your desired ingredients. Do not exceed the MAX fill line. For best results, add liquids first, then soft ingredients, and finally harder ingredients.
- Attach Blade:** Screw the blade assembly firmly onto the open end of the blending cup. Ensure it is tightly sealed to prevent leaks.
- Place on Base:** Invert the blending cup and place it onto the motor base. Align the tabs on the cup with the slots on the base.
- Blend:** Press down on the blending cup to activate the mixer. Hold it down for continuous blending, or press and release for pulse blending. Blend until desired consistency is achieved. Do not operate continuously for more than 1 minute to prevent overheating. Allow the motor to cool down for several minutes between cycles.
- Remove and Serve:** Once blending is complete, release pressure on the cup and lift it off the motor base. Carefully unscrew the blade assembly from the cup. You can then attach a To-Go lid if you wish to take your drink with you.

Visser  
l'embout,  
MIXER –  
C'EST PRÊT !

100%  
*Fresh & Healthy*



Smoothies



sauces froides



Dips



Shakes

Image: The GOURMETmaxx Nutrition Mixer blending ingredients, with examples of prepared smoothies, cold sauces, dips, and shakes.



Image: A collage demonstrating the mixer's capability to puree, chop, grind, and mix various ingredients, including smoothies, hummus, ground nuts, and baby food.

## MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your GOURMETmaxx Nutrition Mixer.

- 1. Unplug:** Always ensure the mixer is unplugged from the power outlet before cleaning.
- 2. Clean Cups and Lids:** The blending cups and lids are dishwasher safe. Alternatively, wash them with warm, soapy water and a non-abrasive sponge. Rinse thoroughly.
- 3. Clean Blade Assembly:** Carefully rinse the blade assembly under running water immediately after use. Use a brush to remove any food residue. **Handle blades with extreme caution as they are sharp.** Do not put the blade assembly in the dishwasher.
- 4. Clean Motor Base:** Wipe the motor base with a damp cloth. Do not immerse it in water or any other liquid. Do not use abrasive cleaners or scouring pads.
- 5. Storage:** Store the cleaned and dried mixer in a cool, dry place.

# COMPACT ET PORTABLE – POUR LA MAISON ET À EMPORTER



TO-GO-  
COUVERCLE



700-ML-  
GOBELET



LAVABLE AU  
LAVE-VAISSELLE

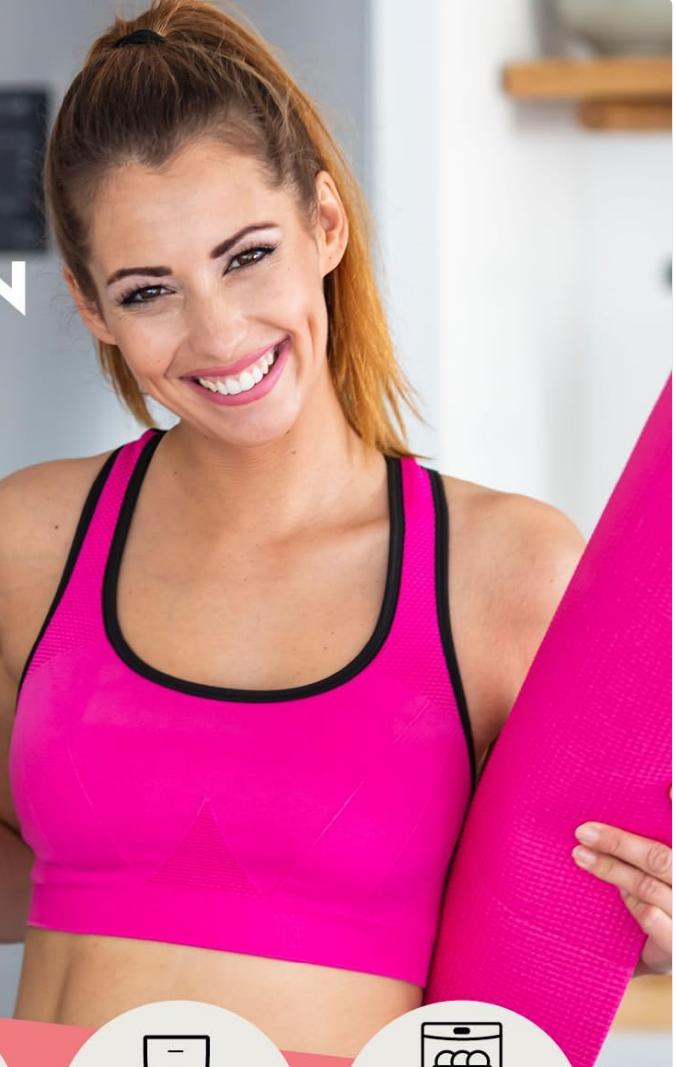


Image: A woman holding a blending cup with a To-Go lid, illustrating the portability and ease of cleaning (dishwasher safe icon visible).

## TROUBLESHOOTING

If you encounter issues with your mixer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet not working; cup not properly seated.	Ensure the power cord is securely plugged into a working outlet. Check if the blending cup is correctly aligned and pressed down on the motor base.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients are too large or hard.	Add more liquid. Reduce the amount of ingredients. Cut larger ingredients into smaller pieces. Use pulse blending to break down stubborn ingredients.
Leakage from the cup.	Blade assembly not tightened; cup overfilled.	Ensure the blade assembly is securely screwed onto the blending cup. Do not fill ingredients past the MAX line.

Problem	Possible Cause	Solution
Motor smells or overheats.	Overuse; blending too long; blending hard ingredients.	Do not operate continuously for more than 1 minute. Allow the motor to cool down for several minutes between blending cycles. Avoid blending excessively hard ingredients.

## SPECIFICATIONS

---

- **Brand:** GOURMETmaxx
- **Model Number:** 11003
- **Color:** Silver | Black
- **Power:** 500 Watts
- **Voltage:** 240 Volts (AC)
- **Capacity:** 700 Milliliters (main cup)
- **Dimensions (Product):** 11.7D x 11.7W x 34.5H cm
- **Item Weight:** 1.2 Kilograms
- **Material:** Stainless Steel, Acrylonitrile Butadiene Styrene (ABS)
- **Special Features:** Removable blade, Multiple accessories, Compact design, Multiple applications
- **Recommended Uses:** Juices, Smoothies, Shakes, Cold Sauces, Dips, Purees
- **Cord Length:** Approximately 120 cm

# 4 fois LAME

Pour des résultats de  
mixage homogènes



env. 22.000  
tr/min

MOTEUR  
PUISSE

.....  
Pour une consistance  
fine et crémeuse

Image: A close-up view of the 4-blade assembly inside the blending cup, demonstrating the powerful mixing action at approximately 22,000 RPM.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact GOURMETmaxx customer service directly.

Spare parts availability information is not provided in the product details.