

Sportspower WP-1002

Sportspower Augusta Wooden Swing Set WP-1002 Instruction Manual

Model: WP-1002

1. INTRODUCTION

Thank you for choosing the Sportspower Augusta Wooden Swing Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor playset. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

The Sportspower Augusta Wooden Swing Set is designed to provide a fun and engaging outdoor play experience. It features a durable wooden frame, a 6-foot double-wall slide, two adjustable-height sling swings, a rock climber, a sandbox area, and a play fort with a canopy. This playset is suitable for children aged 3 to 8 years, with a maximum total weight capacity of 500 pounds.

2. SAFETY INFORMATION

Your child's safety is paramount. Adhere to all safety guidelines to prevent injuries.

- **Adult Supervision Required:** Always supervise children while they are using the swing set.
- **Age and Weight Limits:** This swing set is designed for children aged 3 to 8 years. The maximum total weight capacity is 500 pounds. Do not exceed these limits.
- **Proper Installation:** Ensure the swing set is assembled correctly and securely anchored to the ground as per the instructions.
- **Clearance Area:** Maintain a safe clearance area around the swing set, free from obstacles such as fences, trees, or other structures.
- **Clothing:** Ensure children wear appropriate clothing, avoiding loose items that could get caught on the equipment.
- **Regular Inspections:** Periodically check all components for wear, damage, or loose connections. Tighten hardware as needed.
- **ASTM Safety Standards:** This product meets or exceeds all ASTM (American Society for Testing and Materials) safety standards.

3. PARTS LIST

Before assembly, verify that all parts are present and undamaged. Refer to the included hardware and component list in your packaging for detailed identification.

- Wooden Frame Components (Scandinavian Spruce)
- 6-foot Double-Wall Blow-Molded Slide
- 2 Adjustable-Height Sling Swings with UV-resistant ropes
- Rock Climber Hand Holds and Steps
- Play Fort Structure with Canopy
- Sandbox Base
- 4-piece Anchor Set
- All necessary hardware (bolts, screws, washers, etc.)

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly requires at least two adults and typically takes 4-5 hours. Follow the pictorial instructions provided in your product packaging carefully. All components are labeled for easier identification.

1. **Unpack and Organize:** Lay out all parts and hardware. Group similar components together. Verify against the parts list.
2. **Assemble the A-Frame:** Construct the main A-frame structures. Note that this set features a double A-frame for enhanced stability.
3. **Attach Support Beams:** Connect the A-frames using the main support beams and steel corner supports.
4. **Install Play Fort:** Assemble the play fort structure, including the play deck and canopy.
5. **Mount Rock Climber:** Secure the rock climber steps and handholds to the designated fort access point.
6. **Attach Slide:** Install the 6-foot double-wall blow-molded slide. Ensure it is firmly attached and stable.
7. **Hang Swings:** Attach the two adjustable-height sling swings to the swing beam. Adjust the rope length to suit the children's height.
8. **Assemble Sandbox:** Construct the sandbox base beneath the play fort. (Sand not included).
9. **Anchor the Set:** Use the provided 4-piece anchor set to secure the swing set firmly to the ground. This is crucial for stability and safety during use.
10. **Final Check:** Before first use, double-check all bolts, screws, and connections to ensure they are tight and secure.

DOUBLE A-FRAME

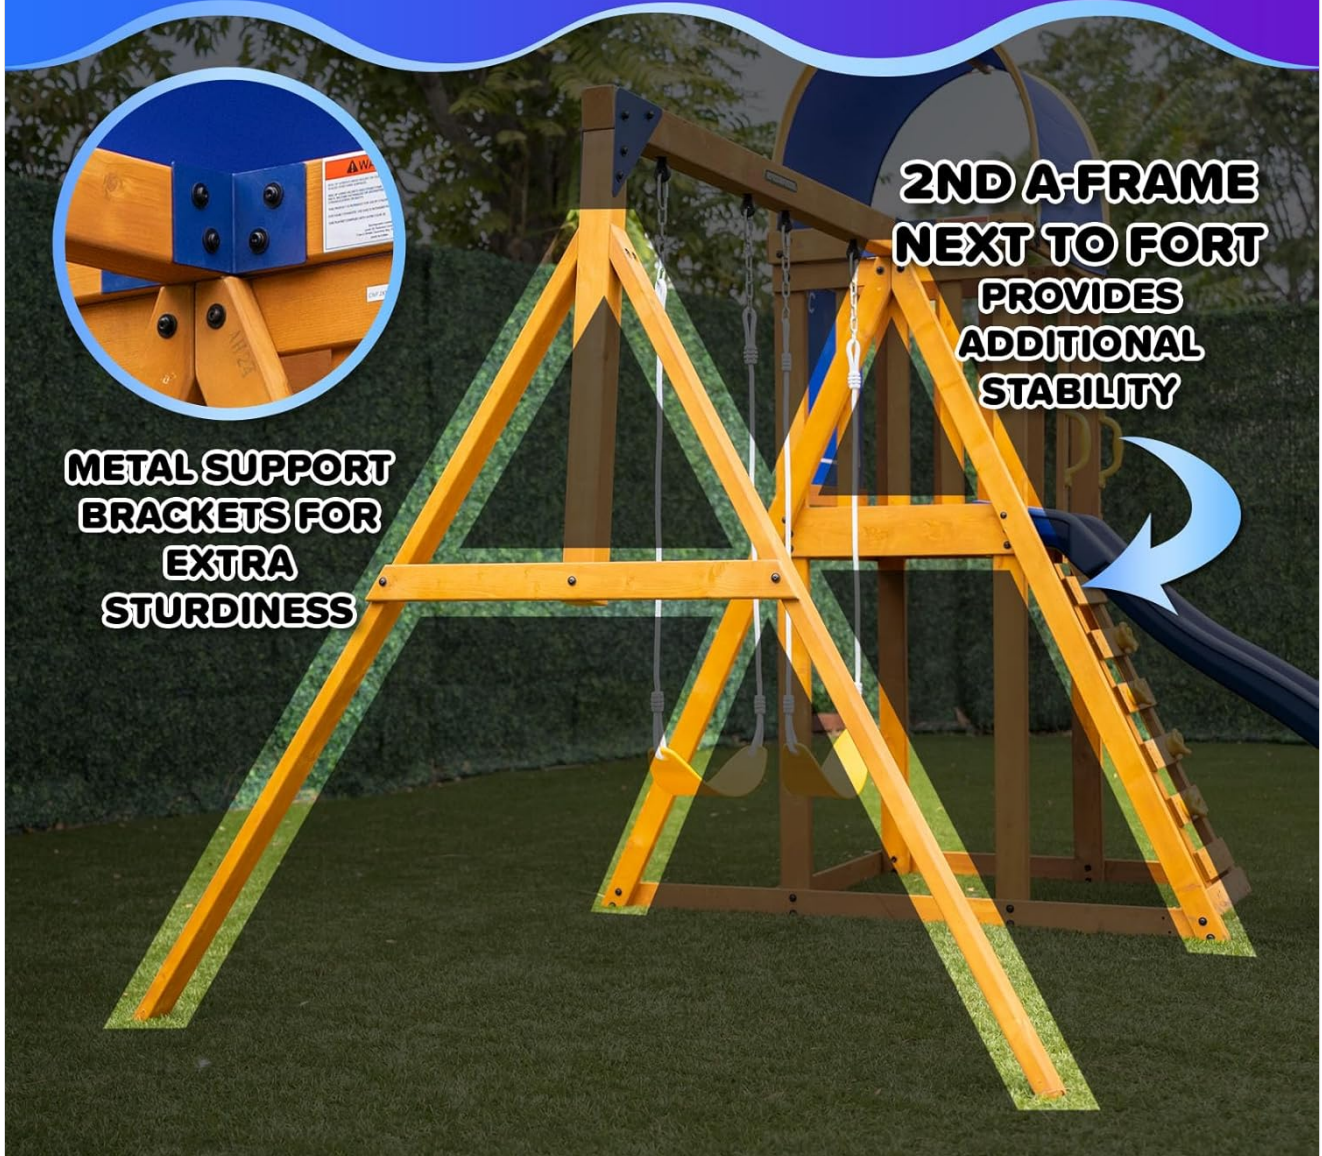


Figure 1: Double A-Frame Construction. This image illustrates the robust double A-frame design with metal support brackets, providing superior stability for the swing set.



Figure 2: Anchor Stakes Installation. The included anchor stakes are essential for securing the swing set to the ground, preventing movement during active play.

5. OPERATING INSTRUCTIONS

To ensure a safe and enjoyable experience, instruct children on the proper use of each play element.

- **Swings:** Only one child per swing. Encourage children to sit properly on the swing seat and hold onto the ropes firmly. Do not allow twisting of ropes or standing on swings.
- **Slide:** Only one child on the slide at a time. Children should slide feet first, sitting upright. Ensure the landing area is clear before sliding.
- **Rock Climber:** Use handholds and steps for climbing. Ensure children maintain three points of contact (two hands and one foot, or two feet and one hand) while climbing.
- **Sandbox:** Use only clean play sand. Supervise children to prevent ingestion of sand or throwing sand.
- **General Play:** Do not allow roughhousing, pushing, or crowding on any part of the playset.

5' DOUBLE-WALLED BLOW-MOLDED SLIDE



Figure 3: Using the Double-Wall Slide. The slide features a safe landing zone and a 2-inch edge on each side for enhanced safety during use.

2 SLING SWINGS



Figure 4: Adjustable Sling Swings. The swing set includes two flexible and comfortable sling swings with adjustable height chains to accommodate growing children.

ENDLESS FUN WITH PLAY FORT



Figure 5: Play Fort Features. The play fort includes a chalk tarp (chalk not included), a rock climber, and a sandbox (sand not included) for varied play activities.

6. MAINTENANCE

Regular maintenance is crucial for the longevity and safety of your swing set.

- **Monthly Checks:** Inspect all nuts and bolts for tightness. Tighten as necessary. Check for any sharp edges or protrusions that may have developed.
- **Wood Inspection:** Examine wooden components for cracks, splinters, or signs of rot. Sand down splinters and replace any severely damaged wood. The Scandinavian Spruce wood is dense and durable, but regular checks are still important.
- **Swing Ropes and Seats:** Check swing ropes for fraying or excessive wear. Inspect swing seats for cracks or damage. Replace worn or damaged parts immediately.
- **Slide Surface:** Clean the slide surface regularly to remove dirt and debris. Ensure the surface remains smooth and free of damage.
- **Anchoring:** Verify that the anchor stakes remain firmly in the ground. Re-secure if any loosening is observed.
- **Canopy:** Inspect the canopy for tears or damage. The roof is made of UV-resistant PVC.

7. TROUBLESHOOTING

If you encounter issues with your swing set, refer to the following common problems and solutions:

- **Swing Set Feels Unstable:**

Solution: Ensure all anchor stakes are fully driven into the ground. Check and tighten all frame bolts and connections. Verify the ground surface is level.

- **Loose Parts:**

Solution: Regularly inspect and tighten all nuts, bolts, and screws. Refer to the assembly instructions for correct hardware placement.

- **Squeaking Swings:**

Solution: Apply a small amount of lubricant (e.g., silicone spray) to the swing hangers.

- **Missing or Damaged Parts:**

Solution: Contact Sportspower customer support immediately for assistance with replacement parts.

8. SPECIFICATIONS

Feature	Detail
Brand	Sportspower
Model Number	WP-1002
Material	Scandinavian Spruce Wood (Frame), Blow-Molded Plastic (Slide), UV-resistant PVC (Canopy)
Color	Yellow/Blue
Item Weight	133 pounds
Maximum Weight Recommendation	500 pounds (total)
Age Range	3 to 8 years
Assembly Required	Yes
Slide Length	6 feet
Dimensions (Approximate)	9.7 ft (Width) x 9 ft (Depth) x 7.9 ft (Height)
Safety Standards	Meets or Exceeds ASTM Safety Standards

USA-BASED CUSTOMER SUPPORT



**REAL HELP
REAL FAST**

**USA-BASED TEAM
HERE TO HELP**



FAST HELP



**MISSING PARTS
SHIPPED ASAP**



**REAL PEOPLE • NO
FOREIGN LANGUAGE**



WE'RE THE PROS

Figure 6: Product Dimensions and Safety Information. This image provides key specifications including overall dimensions, recommended age range, maximum weight capacity, and compliance with ASTM safety standards.

9. WARRANTY

The Sportspower Augusta Wooden Swing Set includes a limited lifetime warranty on the slide component. For details regarding warranty claims or specific coverage, please refer to the warranty information included with your product packaging or contact Sportspower customer support.

10. CUSTOMER SUPPORT

For any questions, concerns, or assistance with missing parts, please contact Sportspower's USA-based customer support team. They are available to provide real help, real fast.

- Assistance with assembly questions.
- Support for missing or damaged parts.
- General product inquiries.

Please have your model number (WP-1002) and purchase information ready when contacting support.

Figure 7: USA-Based Customer Support. This image highlights the availability of dedicated customer support for assistance with product inquiries and parts.