



Manuals.plus /

› Iceagle /

› Iceagle Air Fryer 12L Dual Basket Instruction Manual KDFO-5511DTW

Iceagle KDFO-5511DTW

Iceagle Air Fryer 12L Dual Basket Instruction Manual

Model: KDFO-5511DTW

INTRODUCTION

Thank you for choosing the Iceagle 12L Dual Basket Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods, using significantly less oil than traditional frying methods. With its 12-liter capacity and dual independent cooking zones, you can prepare a variety of dishes simultaneously. Please read this manual thoroughly before first use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully.

- Always ensure the appliance is placed on a stable, heat-resistant surface, away from walls and other appliances, to allow adequate air circulation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep the appliance and its cord out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not use accessories not recommended by the appliance manufacturer, as this may cause injuries.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- Avoid contact with hot surfaces. Use handles or knobs.
- A short power-supply cord is provided to reduce the risk resulting from entanglement or tripping over a longer cord.
- Do not block any ventilation openings.
- Always ensure food is cooked thoroughly before consumption.

PRODUCT OVERVIEW

The Iceagle 12L Air Fryer features a sleek design with a user-friendly LED touch panel and two independent cooking zones, allowing for versatile meal preparation.



Figure 1: Front view of the Iceagle 12L Dual Basket Air Fryer, showcasing the control panel and transparent cooking windows with food inside.

Key Features:

- **Dual Independent Cooking Zones:** Prepare two different dishes with separate settings or synchronize cooking to finish simultaneously.
- **12-Liter Capacity:** Large capacity suitable for family meals and gatherings.
- **Transparent Viewing Window:** Monitor cooking progress without opening the baskets, preserving heat and ensuring precise results.
- **10 Preset Cooking Programs:** A variety of modes including Air Fry, Max Crisp, Roast, Bake, Reheat, and Dehydrate.
- **LED Touch Panel:** Intuitive controls for easy operation.
- **2600W Power:** Efficient heating for quick cooking.



Figure 2: The air fryer displayed with various cooking accessories, including racks and trays, highlighting its versatility.

12L großes Fassungsvermögen

Geeignet für Gruppenessen und Familienessen



Figure 3: The air fryer demonstrating its large 12-liter capacity, suitable for family-sized meals.



Figure 4: Illustration of the air fryer's multi-functional capabilities, including icons representing toaster, oven, and microwave functions.

SETUP AND FIRST USE

Unpacking:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components are present and undamaged.

Cleaning Before First Use:

1. Wipe the exterior of the air fryer with a damp cloth.
2. Wash the cooking baskets, crisper plates, and any other removable accessories in warm, soapy water. Rinse thoroughly and dry completely.
3. Do not use abrasive cleaning agents or scouring pads, as these can damage the non-stick coating.

Placement:

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10-15 cm (4-6 inches) of clear space around the back and sides of the appliance for proper ventilation.
- Do not place the air fryer directly under cabinets or near flammable materials.

OPERATING INSTRUCTIONS

Control Panel Overview:

The LED touch panel allows you to control all functions of the air fryer. It displays time, temperature, and selected programs.



Figure 5: The control panel illustrating the 10 preset cooking programs available for selection.

Basic Operation:

1. **Power On:** Plug the air fryer into a grounded electrical outlet. The power button will illuminate. Press the power button to turn on the display.
2. **Select Basket:** Choose basket 1 or 2 to set its cooking parameters.

3. **Set Temperature and Time:** Use the temperature and time adjustment buttons (+ / -) to set your desired cooking temperature and time.

4. **Start Cooking:** Press the start/pause button to begin the cooking cycle.

Using Dual Cooking Zones (Match Cook & Smart Cook):

The dual basket design allows for flexible cooking options:

- **Match Cook:** If you want both baskets to cook with the exact same settings (temperature and time), set the parameters for one basket, then press the "Match Cook" button. The settings will be mirrored to the other basket.
- **Smart Cook (Sync Finish):** This feature allows two different programs or settings to finish cooking at the same time. Set the desired program, temperature, and time for each basket independently. Then, press the "Sync Finish" button. The air fryer will automatically adjust the start times for each basket to ensure they complete cooking simultaneously.

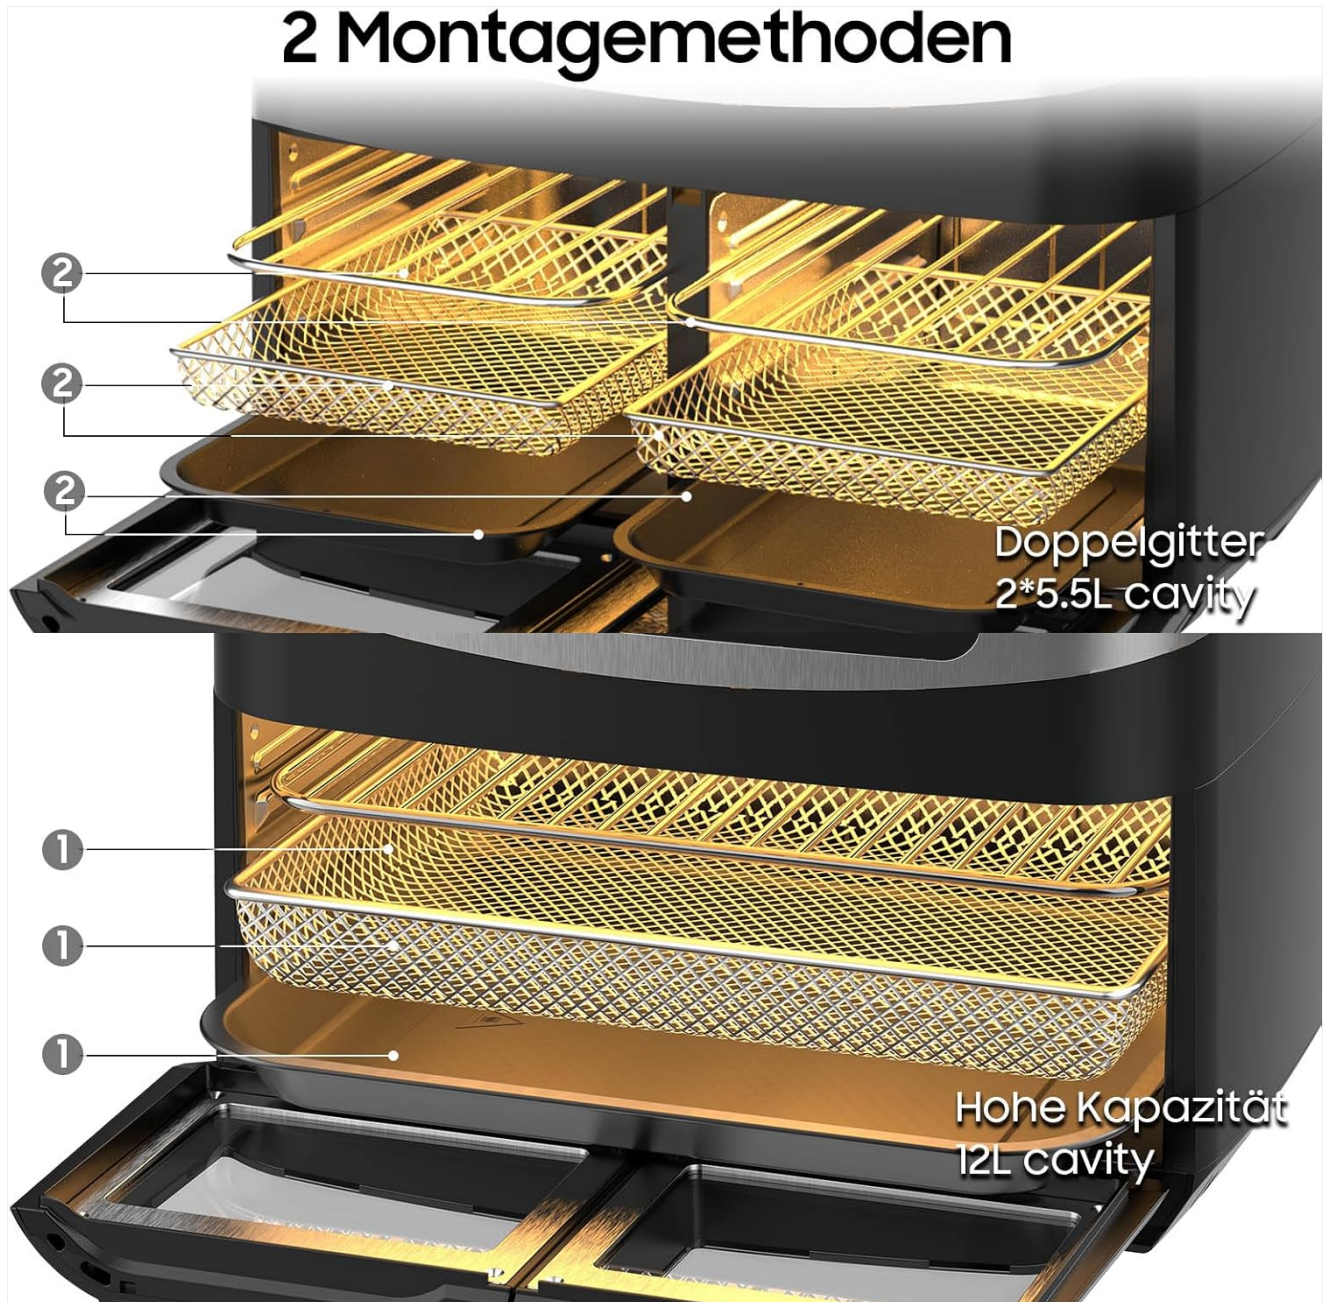


Figure 6: Illustration of the air fryer's dual compartment setup, showing how the baskets can be used independently or combined for larger items.

Preset Programs:

The air fryer comes with 10 pre-set cooking programs for common foods. To use a preset:

1. Select the desired basket.
2. Press the "Menu" button repeatedly or use the dedicated preset icons to cycle through the available programs (e.g., Fries, Chicken Drumsticks, Steak, Cake, Shrimp, Fish, Pizza, Vegetables, Dehydrate, Preheat).
3. Once a program is selected, the default time and temperature will display. You can adjust these manually if needed.
4. Press the start/pause button to begin.

Monitoring Cooking Progress:

The transparent viewing window allows you to check on your food without interrupting the cooking cycle.



Figure 7: The transparent window feature in action, allowing visual monitoring of food as it cooks inside the air fryer.

COOKING TIPS

- For best results, shake the baskets halfway through the cooking time for items like fries or chicken nuggets to ensure even crisping.
- Lightly spray or brush food with oil for extra crispiness, especially for fresh vegetables or homemade fries.
- Do not overfill the baskets. Overfilling can prevent food from cooking evenly and becoming crispy.

- Smaller food items generally require shorter cooking times than larger ones.
- Use an instant-read thermometer to ensure meats are cooked to a safe internal temperature.

CLEANING AND MAINTENANCE

Regular cleaning will help maintain the performance and longevity of your Iceagle Air Fryer.

1. **Before Cleaning:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Baskets and Crisper Plates:** The non-stick cooking baskets and crisper plates are dishwasher safe, or can be washed by hand with warm, soapy water. Use a non-abrasive sponge or cloth. For stubborn food residue, soak the baskets in warm water for about 10-15 minutes before cleaning.
3. **Interior:** Wipe the interior of the appliance with a damp cloth. If necessary, use a mild detergent. Do not use abrasive cleaners or metal scouring pads.
4. **Exterior:** Clean the exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Heating Element:** Gently clean the heating element with a soft brush to remove any food particles.
6. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Baskets are overfilled; food not shaken/flipped; incorrect temperature/time.	Do not overfill baskets. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
Food is not crispy.	Too much food in basket; not enough oil (for certain foods); temperature too low.	Reduce food quantity. Lightly spray food with oil. Increase cooking temperature or time.
White smoke coming from appliance.	Grease residue from previous use; fatty food cooking.	Clean the baskets and interior thoroughly after each use. For fatty foods, ensure crisper plates are in place to allow fat to drip away.
Appliance smells like plastic.	Normal for first few uses.	The smell should dissipate after a few uses. Ensure good ventilation during initial operations.

SPECIFICATIONS

Feature	Detail
Brand	Iceagle
Model Number	KDFO-5511DTW
Color	Black
Dimensions (L x W x H)	28 x 38 x 32 cm
Capacity	12 Liters
Power	2600 Watts
Voltage	230 Volts
Material	Polypropylene (PP)
Automatic Shut-off	Yes
Special Features	Automatic shut-off, Temperature control, Dual zone functionality, Timer, Programmable
Item Weight	8.5 Kilograms

WARRANTY AND SUPPORT

Iceagle products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Iceagle website.

If you have any questions, require technical assistance, or need to report a problem, please contact our customer support team:

- **Email:** support@iceagle.com
- **Website:** www.iceagle.com (Please note: This is a placeholder URL. Refer to your product documentation for the actual support website.)