

Haier HAF5P 011

Haier HAF5P Air Fryer XL Instruction Manual

Model: HAF5P 011

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Haier HAF5P Air Fryer. Keep this manual for future reference.

- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Always unplug the appliance when not in use and before cleaning. Allow it to cool down completely before handling.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance and its cord out of reach of children.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Do not place anything on top of the appliance.
- Do not use the appliance for any purpose other than described in this manual.
- Hot air is released through the air outlet opening during hot air frying. Keep your hands and face at a safe distance from the steam and from the air outlet opening.
- The outer surfaces may become hot during use. Do not touch hot surfaces. Use handles or knobs.

PRODUCT OVERVIEW

The Haier HAF5P Air Fryer is a versatile kitchen appliance designed for healthy cooking with minimal oil. It features a 5-liter capacity, digital LED touch screen, and 6 pre-set programs for various cooking needs.



Figure 1: The Haier HAF5P Air Fryer, showcasing its compact design and digital control panel.

Key Components:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital LED touch screen for setting temperature, time, and selecting programs.
- **Frying Basket:** Non-stick coated basket for holding food.
- **Basket Handle:** For safely pulling out and inserting the frying basket.

- **Air Inlet/Outlet:** For proper air circulation during cooking.

Haier



GROßES FASSUNGSVERMÖGEN (5 Liter)

Bis zu 4 Portionen kochen

Figure 2: The spacious 5-liter frying basket, suitable for family-sized meals.

SETUP AND FIRST USE

Follow these steps to prepare your air fryer for its first use:

1. **Unpack:** Remove all packaging materials and stickers from the appliance.
2. **Clean:** Wash the frying basket and any removable parts thoroughly with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth.
3. **Dry:** Ensure all parts are completely dry before assembly.
4. **Placement:** Place the air fryer on a stable, horizontal, and level surface. Do not place the appliance on non-heat-resistant surfaces.
5. **Pre-heat (Optional):** For the first use, it is recommended to run the air fryer empty for about 10 minutes at 200°C to burn off any manufacturing residues. A slight odor may be present, which is normal.

OPERATING INSTRUCTIONS

Haier



PRÄZISE TEMPERATURREGELUNG

Vielseitiges Kochen von 80° bis 200°C

Figure 3: The intuitive digital LED touch screen for easy operation.

- **Power Button:** Turns the appliance on/off.
- **Temperature Control (+/-):** Adjusts cooking temperature (80°C to 200°C).
- **Time Control (+/-):** Adjusts cooking time.
- **Pre-set Programs:** Icons for various cooking modes (e.g., fries, chicken, fish, meat, cake, defrost).
- **Start/Pause Button:** To begin or temporarily stop cooking.

Cooking Modes and Functions

The Haier HAF5P Air Fryer offers 6 versatile cooking functions:

Haier



Heißluftfrittieren



Grillen



Braten



Backen



Dörren



Auftauen



Figure 4: Visual representation of the 6 cooking functions.

- **Hot Air Frying:** For crispy results with little to no oil.
- **Grilling:** Ideal for meats and vegetables.
- **Roasting:** Perfect for larger cuts of meat or poultry.
- **Baking:** Suitable for cakes, muffins, and other baked goods.
- **Dehydrating:** For making dried fruits or jerky.
- **Defrosting:** Safely thaws frozen food.

Shake Reminder

For optimal and even cooking results, especially with items like fries or chicken wings, the air fryer features a convenient shake reminder. The appliance will beep and display a shake icon to prompt you to shake or flip the food in the basket. Simply pull out the basket, shake the contents, and reinsert it to resume cooking.

Haier



SCHÜTTEL-ALARM


Informiert Sie, dass Sie das Gargut schütteln müssen, für ein gleichmäßiges Ergebnis

Figure 5: The shake reminder ensures evenly cooked food.

Using the hOn App

Enhance your cooking experience by downloading the hOn app. The app provides access to expert tips, a wide range of recipes, and smart features to help you get the most out of your Haier air fryer.

Haier

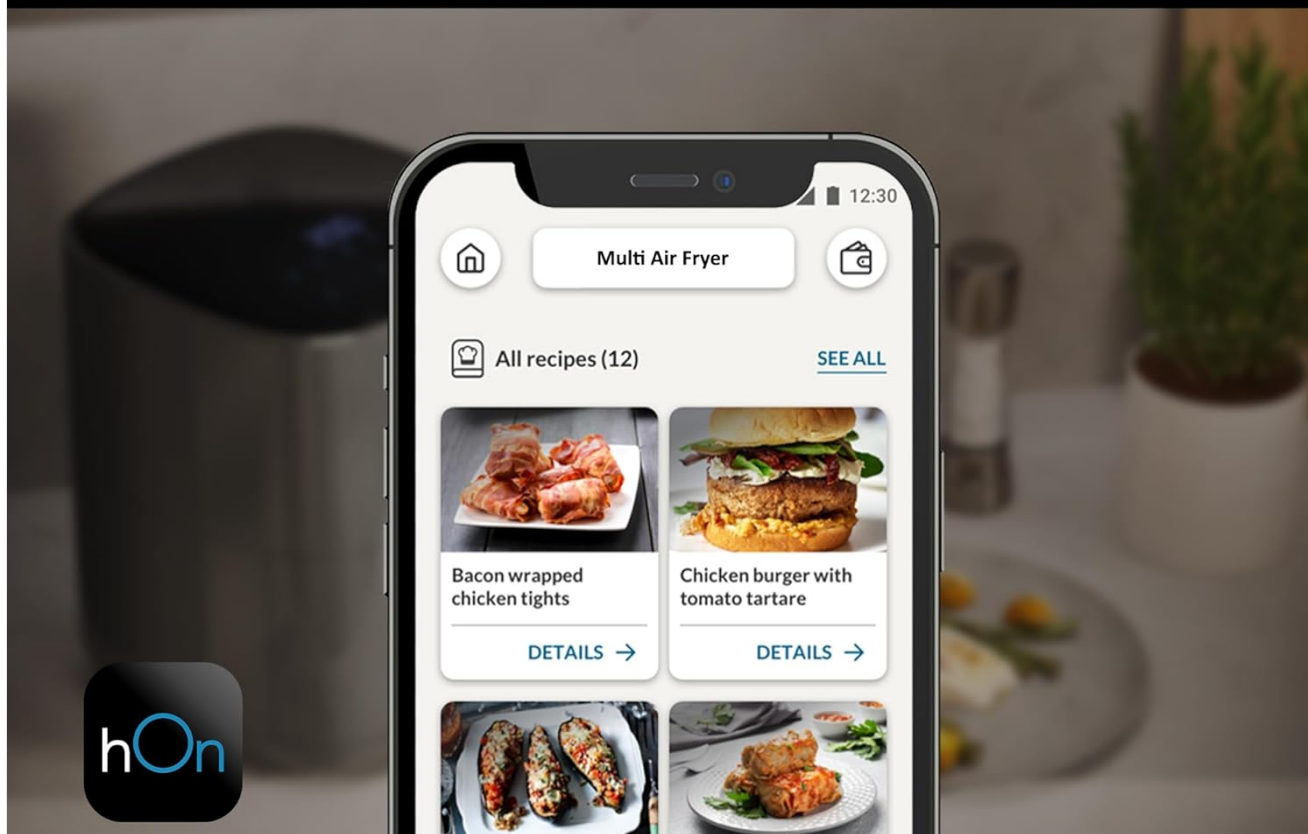

hOn APP HERUNTERLADEN

Von Tipps und Rezepten unserer Experten profitieren

Figure 6: Discover new recipes and tips with the hOn app.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Clean Basket and Pan:** The frying basket and pan are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak them in hot water for about 10 minutes.
3. **Clean Interior:** Wipe the inside of the appliance with a hot water and non-abrasive sponge.
4. **Clean Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use harsh abrasive cleaners or scouring pads.
5. **Heating Element:** Clean the heating element with a cleaning brush to remove any food residue.
6. **Storage:** Store the appliance in a dry, cool place after it has been thoroughly cleaned and dried.

TROUBLESHOOTING

If you encounter any issues with your Haier HAF5P Air Fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not work	Appliance not plugged in.	Plug the main plug into an earthed wall socket.
Food not cooked evenly	Too much food in the basket; Food not shaken.	Reduce food quantity; Shake food halfway through cooking.
White smoke coming from the appliance	Grease residue from previous use; Fatty ingredients.	Clean the basket and pan thoroughly; Absorb excess oil from fatty foods.
Fresh fries are not crispy	Not enough oil used; Incorrect potato type; Too much moisture.	Add a little oil; Use fresh potatoes suitable for frying; Pat potatoes dry before frying.

SPECIFICATIONS

Detailed technical specifications for the Haier HAF5P Air Fryer.

Feature	Specification
Brand	Haier
Model Number	HAF5P 011
Color	Grey
Dimensions (L x W x H)	36.6 x 27 x 32.2 cm
Weight	3.75 Kilograms
Capacity	5 Liters
Power	1500 Watts
Voltage	230 Volts
Material	Stainless Steel
Temperature Range	80°C - 200°C
Special Feature	Shake Alarm
Recommended Use	Reheating

WARRANTY AND SUPPORT

Your Haier HAF5P Air Fryer comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty duration and coverage.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Haier Customer Service. Contact information can typically be found on the official Haier website or on your product's packaging.

When contacting support, please have your product model number (HAF5P 011) and purchase date ready.

