

Manuals.plus /

› YOSUDA /

› YOSUDA Walking Pad with Auto Incline (Model YSD-EW01) User Manual

YOSUDA YSD-EW01

YOSUDA Walking Pad with Auto Incline

Model: YSD-EW01

1. IMPORTANT SAFETY INSTRUCTIONS

Before operating the YOSUDA Walking Pad, please read and understand all safety instructions. Failure to follow these instructions may result in injury or damage to the product.

- Always place the walking pad on a flat, stable surface.
- Ensure adequate clear space around the walking pad during operation.
- The maximum user weight capacity for this device is **350 pounds**. Do not exceed this limit.
- Keep children and pets away from the walking pad during operation.
- Always adjust the incline to **0 level** when you finish your workout to prevent accidental activation at an incline.
- Do not use the walking pad if it is damaged or malfunctioning. Contact customer support immediately.
- Wear appropriate athletic footwear during use.
- Unplug the walking pad from the power outlet when not in use or before cleaning and maintenance.

2. PRODUCT OVERVIEW

The YOSUDA Walking Pad with Auto Incline is designed for home use, offering a convenient way to incorporate walking into your daily routine, especially in an under-desk setup. It features an automatic incline system and a powerful motor.

Key Features:

- **Automatic Incline:** Adjusts incline levels automatically for varied workout intensity.
- **Powerful Motor:** Equipped with a 2.5 HP motor for smooth and efficient operation.
- **High Weight Capacity:** Supports users up to 350 lbs.
- **Large LED Display:** Clearly shows speed, calories burned, incline level, time, and distance.
- **Remote Control:** Provides convenient control over speed and incline.

- **Quiet Operation:** Designed for minimal noise, suitable for office or home environments.
- **Compact and Portable:** Features wheels for easy movement and storage under a desk or bed.

Components:

- Walking Belt (6-layer running belt)
- LED Display Panel
- Motor Housing
- Power Cord
- Remote Control

Maximize Burn with Incline

Equal Time, Double Burn

Incline	Calories Burned
9% INC	350 CALORIES
0% INC	200 CALORIES

0%-9%

Time (0, 15, 30, 45, 60) vs **KAL/H** (0, 50, 100, 150, 200, 250, 300, 350)

Image 2.1: Overview of the YOSUDA Walking Pad with Auto Incline.



Image 2.2: The large LED display shows speed, time, distance, calories, and incline simultaneously.



Image 2.3: The walking pad is designed to fit conveniently under a desk for use while working.

3. SETUP INSTRUCTIONS

The YOSUDA Walking Pad requires minimal assembly. Follow these steps to set up your device:

- Unpack:** Carefully remove the walking pad from its packaging. Retain packaging for future storage or transport.
- Placement:** Place the walking pad on a firm, level surface. Ensure there is at least 2 feet of clear space behind the unit and 1 foot on each side.
- Power Connection:** Plug the power cord into a grounded electrical outlet.
- Initial Check:** Before first use, ensure the walking belt is centered and free from obstructions.



Image 3.1: The walking pad is compact and can be easily stored under furniture like a bed or desk.

4. OPERATING INSTRUCTIONS

Operate your YOSUDA Walking Pad using the included remote control.

Remote Control Functions:

- **START/STOP:** Press to begin or end your workout.
- **SPEED +/-:** Adjusts the walking speed. The speed range is 0.6 to 4 MPH.
- **INCLINE +/-:** Adjusts the incline level. The incline percentage ranges from 0% to 9%.
- **PAUSE:** Temporarily stops the belt while retaining your workout data.

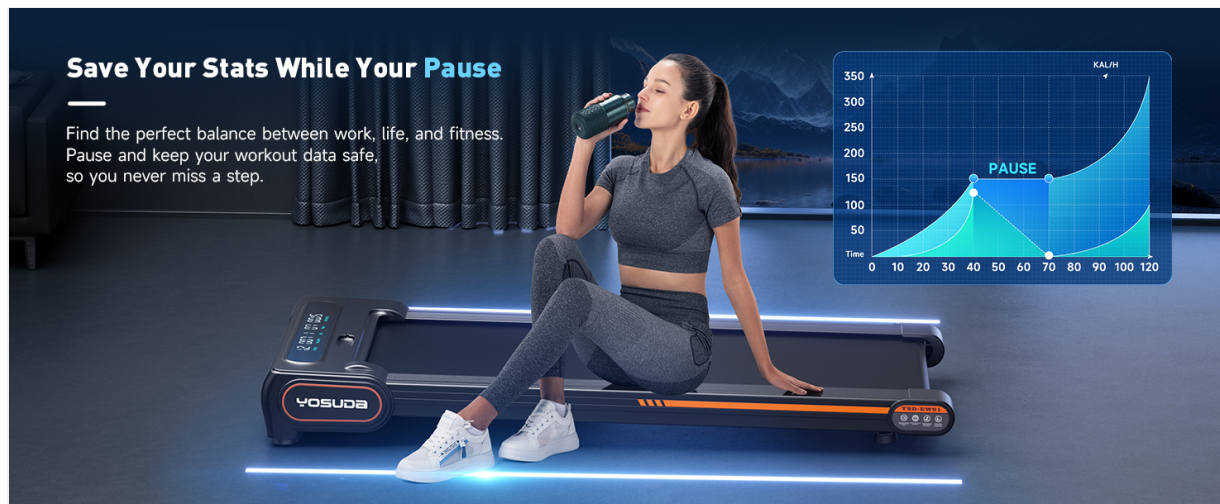


Image 4.1: The full-function remote control allows seamless adjustment of speed and incline.

Starting a Workout:

1. Ensure the walking pad is plugged in and the power switch is on.
2. Stand on the side rails of the walking pad.
3. Press the 'START' button on the remote control. The belt will begin moving at a low speed.
4. Carefully step onto the walking belt.
5. Use the 'SPEED +/-' buttons to adjust to your desired walking pace.
6. Use the 'INCLINE +/-' buttons to adjust the incline as desired.

Ending a Workout:

1. Press the 'STOP' button on the remote control. The belt will gradually slow down and stop.
2. Step off the walking pad.
3. Always return the incline to 0% after your workout.
4. Unplug the unit from the power outlet when not in use.

Customize Your Incline

Adjust Slope Without Pausing Your Workout



Image 4.2: The walking pad features a 3-slope automatic incline system, adjustable via remote control.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your YOSUDA Walking Pad.

- **Cleaning:** Wipe down the walking pad with a damp cloth after each use. Avoid using abrasive cleaners.
- **Belt Lubrication:** The walking pad requires manual lubrication. Periodically, unscrew the walking belt to lift it and apply silicone lubricant to the deck beneath the belt. Refer to the specific instructions provided with your lubricant for frequency.
- **Belt Adjustment:** If the walking belt shifts to one side during use, it may need adjustment. Use the provided Allen wrench to turn the tension bolts at the rear of the walking pad. Turn the bolt on the side the belt is drifting towards clockwise in small increments (quarter turns) until the belt centers.

- **Storage:** When not in use, the walking pad can be stored flat under a bed or upright against a wall to save space.



Image 5.1: The walking pad is designed for easy movement and space-saving storage.

6. TROUBLESHOOTING

If you encounter any issues with your YOSUDA Walking Pad, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Loud high-pitched noise during operation	Lack of lubrication, belt misalignment, or internal component issue.	Ensure the walking belt is properly lubricated (see Maintenance). Check for belt alignment. If the noise persists, contact customer support.
Walking belt slips during use	Belt tension is too loose or lack of lubrication.	Adjust the walking belt tension (see Maintenance). Apply silicone lubricant if needed.
Walking pad turns off at 99 minutes	This is a built-in safety or program limit.	This is expected behavior. If you wish to continue your workout, restart the walking pad after it turns off.
Display not working or showing errors	Loose connection, power issue, or internal fault.	Check power cord connection. Unplug and plug back in. If the issue persists, contact customer support.

If you experience any problems not listed here, or if the suggested solutions do not resolve the issue, please contact YOSUDA customer support.

7. SPECIFICATIONS

Detailed technical specifications for the YOSUDA Walking Pad Model YSD-EW01.

Feature	Specification
Model Name	YSD-EW01
Brand	YOSUDA
Motor Horsepower	2.5 HP
Maximum Speed	4 MPH (approx. 6.4 km/h)
Maximum Incline Percentage	9%
Maximum Weight Recommendation	350 Pounds
Deck Length (Running Area)	42.5 Inches
Material	Acrylonitrile Butadiene Styrene (ABS), Alloy Steel
Display Type	LED
Metrics Measured	Calories Burned, Distance, Speed, Time, Incline
Power Source	Plug-in Electric
Input Power	300 Watts
Noise Level	<45dB

Superior Powerful Motor

Smooth | Efficient | More durable



Noise Level
<45DB



Speed Range
0.6-4MPH

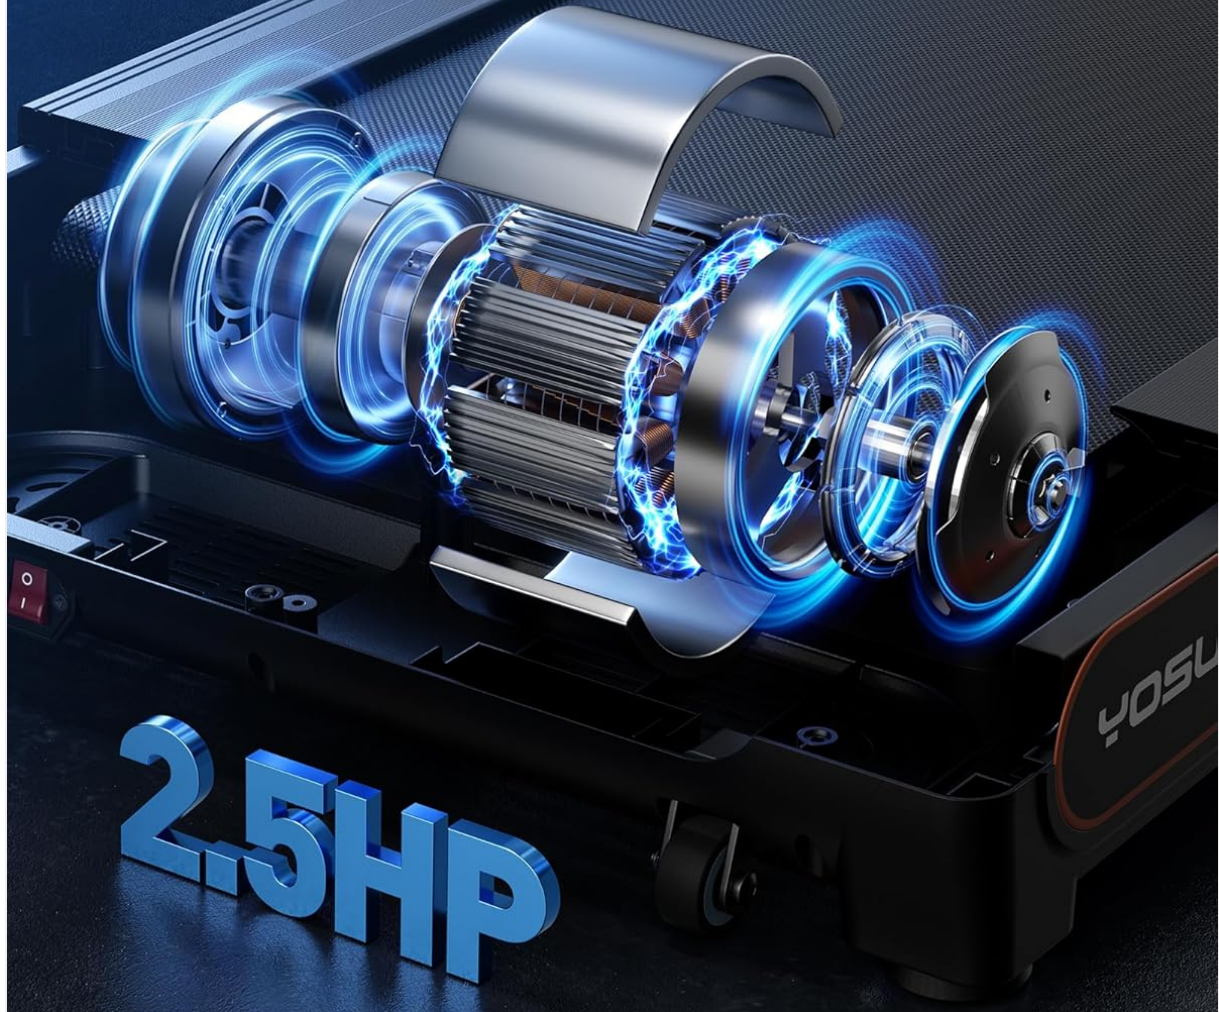


Image 7.1: Illustration of the 2.5 HP motor, highlighting its smooth and efficient operation with low noise.



Image 7.2: The walking pad supports up to 350 lbs and features a 6-layer running belt for comfort and durability.

8. WARRANTY AND SUPPORT

YOSUDA is committed to providing excellent customer service and product support.

- **Response Time:** Customer inquiries are typically responded to within 24 hours.
- **Return Policy:** Enjoy a 30-day free return period from the date of purchase.
- **Parts Warranty:** The product includes a 2-year warranty on free parts.

Contacting Support:

For any questions, issues, or warranty claims, please follow these steps:

1. Log in to your Amazon account.
2. Navigate to 'Your Orders'.
3. Find the order ID for your YOSUDA Walking Pad.
4. Click on 'Contact Seller' to reach YOSUDA customer support directly.

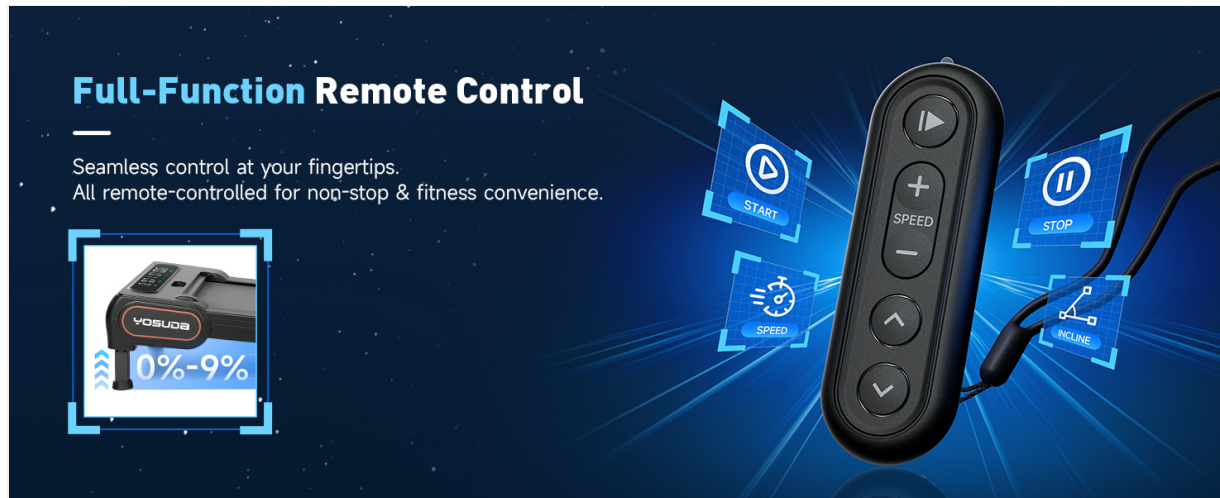


Image 8.1: YOSUDA's commitment to customer satisfaction, including quick response times, free returns, and parts warranty.