

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Philips](#) /

› [Philips Series 7000 13-in-1 Multi-Groomer Trimmer MG7920/15 User Manual](#)

## Philips MG7920/15

# Philips Series 7000 13-in-1 Multi-Groomer Trimmer MG7920/15 User Manual

Model: MG7920/15

## INTRODUCTION

---

The Philips Series 7000 13-in-1 Multi-Groomer Trimmer MG7920/15 is designed for versatile grooming of your face, head, and body. This device includes 13 high-quality tools to help you achieve your desired style with precision and ease. Its self-sharpening blades ensure long-lasting performance.

Key features include:

- Even trimming in a single pass.
- Durable performance for precise results.
- Hair trimmer that adapts to your beard.
- All-in-one functionality suitable for face, head, and body.
- Ability to create even and sharp edges.

## SETUP

---

### 1. Unpacking and Initial Charge

Carefully remove all components from the packaging. Before first use, fully charge the trimmer. Connect the charging cable to the trimmer and a power outlet. A full charge typically takes approximately 8 hours. Note that this model does not feature a charging indicator to show charge level or completion.



Image: The Philips MG7920/15 trimmer being charged via its cable.

## 2. Attaching and Detaching Accessories

The trimmer comes with various attachments for different grooming needs. To attach a comb or trimming head, align it with the trimmer body and press firmly until it clicks into place. To detach, gently pull the attachment away from the trimmer body.

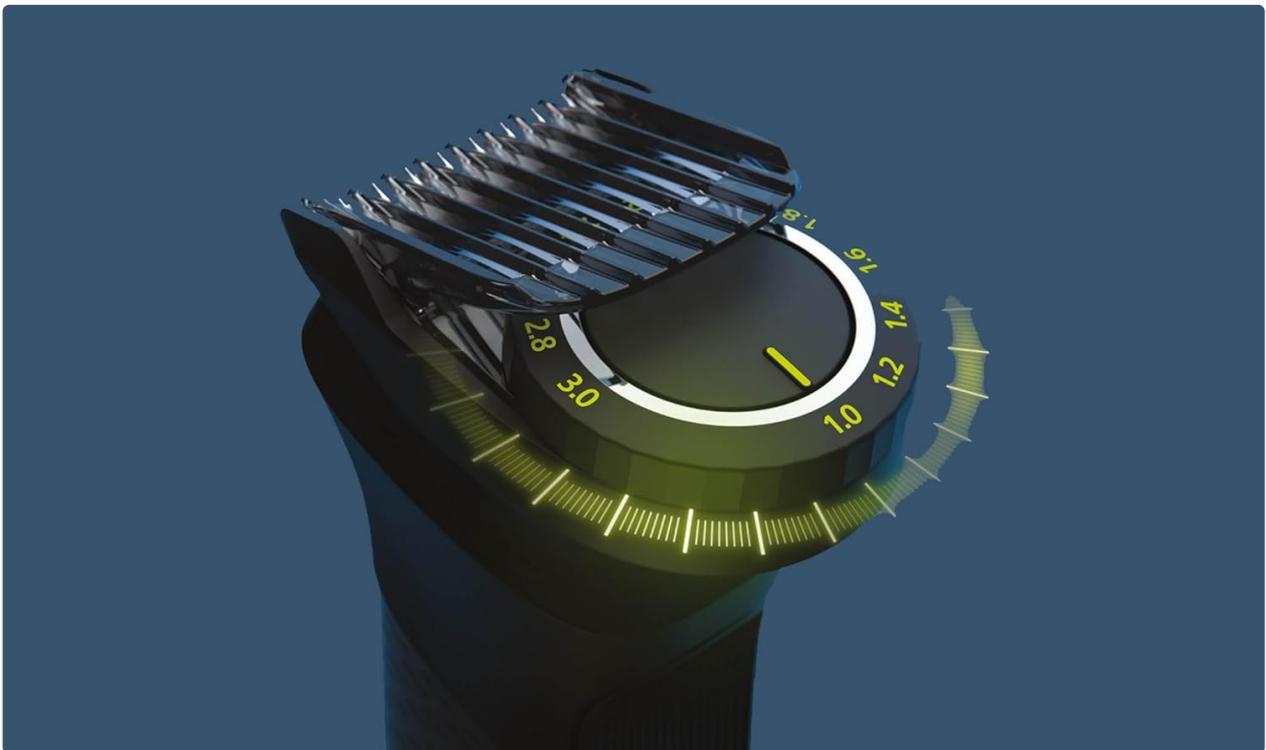


Image: A complete set of 13 attachments included with the Philips MG7920/15 multi-groomer.

## OPERATING INSTRUCTIONS

### 1. Power On/Off

Press the power button located on the front of the trimmer to turn it on or off.

## 2. Wet & Dry Use

This trimmer is designed for both wet and dry use. You can use it in the shower or with shaving foam/gel for a comfortable experience, or dry for quick touch-ups.

## 3. Trimming Face and Beard

Select the appropriate beard comb for your desired length. The precision trimming comb allows for length adjustments. Move the trimmer against the direction of hair growth for an even trim. For detailing and sharp lines, use the trimmer without a comb.



Image: A user trimming their beard with the Philips MG7920/15 trimmer.

## 4. Trimming Hair on Head

Attach the hair comb suitable for your preferred hair length. Guide the trimmer over your head, ensuring consistent contact with the scalp for an even cut. Use the adjustable dial on the comb for precise length settings.



Image: A user cutting their hair with the Philips MG7920/15 trimmer.

## 5. Body Grooming

For body hair, select the appropriate body comb or use the trimmer without a comb for a closer trim. Always be cautious and move the trimmer gently over sensitive areas to avoid irritation or cuts.



Image: A user performing body grooming with the Philips MG7920/15 trimmer.

## 6. Adjusting Trimming Length

Some combs feature an adjustable dial to precisely set your desired trimming length. Rotate the dial to select the length indicated on the comb.



Image: A close-up view of the adjustable length setting on a trimmer comb.

## MAINTENANCE

---

### 1. Cleaning

The trimmer and its attachments are washable. After each use, detach the trimming head and rinse it under running water. You can also rinse the main body of the trimmer. Ensure the charging port is kept away from water during cleaning. Use the provided cleaning brush to remove any trapped hairs from the blades and combs.

### 2. Blade Care

The blades of the Philips MG7920/15 are designed to be self-sharpening, ensuring consistent cutting performance over time. No additional sharpening is required.

### 3. Storage

Store the trimmer and its accessories in the provided pouch to protect them from damage and keep them organized. Ensure the trimmer is dry before storing.

## TROUBLESHOOTING

---

### 1. Trimmer Not Charging

If the trimmer does not appear to be charging, ensure the charging cable is securely connected to both the trimmer and a working power outlet. As there is no charging indicator, you may need to allow the full 8-hour charging period before attempting to use it. Alternatively, you can use the trimmer while it is corded if the battery is depleted.

### 2. Skin Irritation or Cuts

To minimize the risk of skin irritation or cuts, always use the trimmer with care, especially on sensitive areas. Ensure the blades are clean and free of debris. If using without a comb, apply gentle pressure and move the

trimmer slowly. Consider using the trimmer with shaving foam or gel for a smoother glide.

## SPECIFICATIONS

---

<b>Brand</b>	Philips
<b>Model Number</b>	MG7920/15
<b>Power Source</b>	Battery operated
<b>Blade Material</b>	Solid alloy
<b>Special Features</b>	Wet & Dry use
<b>Product Dimensions</b>	7 x 16 x 23 cm
<b>Item Weight</b>	480 grams
<b>Target Audience</b>	Men
<b>Number of Units</b>	1
<b>Color</b>	Grey
<b>Recommended Uses</b>	Face, Head, Body

## WARRANTY INFORMATION

---

This Philips product comes with a standard manufacturer's warranty. For specific details regarding the warranty period and coverage, please refer to the warranty card included in your product packaging or visit the official Philips website. Extended warranty options may be available for purchase from authorized retailers.

## SUPPORT

---

For further assistance, product inquiries, or technical support, please contact Philips customer service. You can find contact information on the official Philips website or in the documentation provided with your product.

Online resources and FAQs may also be available on the Philips support page to help you with common questions and issues.