

Manuals.plus /

› Midea /

› Midea IH Rice Cooker Instruction Manual

Midea IH Rice Cooker

Midea IH Rice Cooker Instruction Manual

Model: IH Rice Cooker (Model 1)

Brand: Midea

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Do not fill the inner pot above the maximum fill line to avoid overflow.

PRODUCT OVERVIEW

The Midea IH Rice Cooker is designed to provide perfectly cooked rice and a variety of other dishes with ease. Its advanced features ensure optimal results every time.

Key Features:

- **OMNI-DIMENSIONAL IH Heating:** The upper heater and bottom Induction Heating (IH) system deliver omni-directional heating, ensuring every grain is fully heated for 5-star quality rice. This also improves warmth retention and reduces condensation.
- **1130W Cooking Power:** High power ensures plump and flavorful rice. The Quick Rice menu can cook up to 12 cups of rice in as little as 25 minutes.
- **Fuzzy Logic Technology:** The rice cooker's unique cooking program accurately determines the amount of rice and matches the most appropriate cooking time and temperature for each stage, ensuring worry-free cooking.
- **2mm Multi-layer Non-stick Inner Pot:** The inner pot features 2.0mm thickness with multiple layers for excellent heat conduction, shorter cooking times, uniform heating, and easy cleaning.
- **Multiple Preset Menus:** Offers 8 preset menus: Quick rice, White rice, Brown rice, Mixed Grain, Congee, Soup, Oatmeal, and Steam, suitable for 2-4 people. Congee, Soup, and Steam menus support up to 120 minutes of timer settings.
- **24h Delay Start & Keep Warm:** Program cooking up to 24 hours in advance. Automatic keep-warm mode ensures freshly cooked taste even after multiple meals.
- **Convenient Handle & Removable Inner Lid:** Practical handle for portability and a detachable inner lid for simple cleaning.

Components:

- Main Rice Cooker Unit
- Non-stick Inner Pot
- Steamer Basket
- Measuring Cup
- Rice Spatula
- Soup Spoon



Figure 1: Midea IH Rice Cooker with included accessories.



Figure 2: Detailed view of the Midea IH Rice Cooker and its accessories, including dimensions.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and accessories from the box.
2. **Initial Cleaning:** Before first use, wash the inner pot, steamer basket, measuring cup, rice spatula, and soup spoon with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight or heat sources. Ensure adequate ventilation around the unit.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet (120 Volts). The display will illuminate, indicating the unit is ready for use.

OPERATING INSTRUCTIONS

Basic Rice Cooking (White Rice)

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. One cup of the provided measuring cup is approximately 6.1 ounces.
2. **Rinse Rice:** Rinse the rice thoroughly under cold water until the water runs clear. This helps remove excess starch and results in fluffier rice.
3. **Add Rice to Inner Pot:** Place the rinsed rice into the non-stick inner pot.
4. **Add Water:** Add water to the inner pot according to the measurement lines on the inside of the pot. For example, if you added 2 cups of rice (using the provided measuring cup), fill water up to the "2" line for White Rice.
5. **Close Lid:** Close the lid securely until it clicks into place.
6. **Select Program:** Press the "MENU" button to cycle through the available programs until "White Rice" is selected. For faster cooking, select "Quick Rice".
7. **Start Cooking:** Press the "START" button. The cooker will begin the cooking process, and the display will show the remaining cooking time.
8. **Completion:** Once cooking is complete, the cooker will automatically switch to "Keep Warm" mode. Allow the rice to rest for 5-10 minutes before serving for best results.

Your browser does not support the video tag.

Video 1: A demonstration of using the Midea rice cooker to prepare white rice, including measuring, adding water, and starting the cooking process. This video also shows the final fluffy rice result.

Preset Menus

The Midea IH Rice Cooker offers a variety of preset menus for different cooking needs:

- **Quick Rice:** For fast cooking of white rice (approx. 25 minutes).
- **White Rice:** Standard cooking for white rice (approx. 40 minutes).
- **Brown Rice:** Optimized for cooking brown rice (approx. 80 minutes).
- **Mixed Grain:** For cooking various mixed grains (approx. 70 minutes).
- **Congee:** For preparing congee (rice porridge) (approx. 90 minutes).
- **Oatmeal:** For cooking oatmeal (approx. 20 minutes).
- **Soup:** For preparing soups (up to 120 minutes timer setting).
- **Steam:** For steaming vegetables or other foods using the steamer basket (up to 120 minutes timer setting) (approx. 30 minutes).

MULTI-PRESET MENUS

Enjoy chef level delicacies by a simple touch on panel.
Explore unlimited cooking possibilities with 8 preset menus.



Figure 3: Overview of the multi-preset menus available on the control panel.

OMNI-DIMENSIONAL IH TECHNOLOGY

The upper heater and bottom IH system deliver omni-directional heating results, ensuring that every grain is fully heated and achieving a 5-star quality of rice. One hand, it can improve the keep warm capabilities; On the other hand, it can prevent the generation of condensation water.



Figure 4: Illustration of the Omni-Dimensional IH Heating technology, showing how heat is distributed for even cooking.

6 STEPS MULTI-HEATING CONTROLS (FUZZY LOGIC)

The unique cooking program can accurately determine the amount of food and match the most suitable cooking time and temperature for each cooking stage, achieving wonderful cooking.

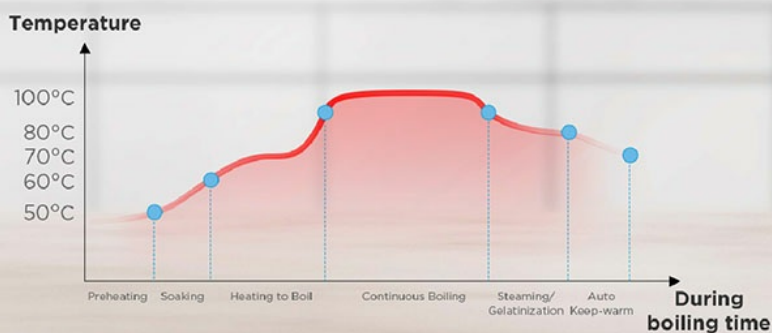


Figure 5: Explanation of the 6-step multi-heating technology powered by Fuzzy Logic, optimizing cooking time and temperature.

Delay Start & Keep Warm

- **Delay Start:** To program a delayed start, select your desired cooking program, then press the "DELAY START" button. Use the "+" and "-" buttons to adjust the delay time up to 24 hours. Press "START" to confirm.
- **Keep Warm:** After cooking is complete, the rice cooker automatically enters "Keep Warm" mode. This function maintains the rice at an optimal serving temperature for up to 24 hours. To cancel "Keep Warm" mode, press the "KEEP WARM/CANCEL" button.

24-Hour Delay Timer & Keep Warm



Figure 6: Visual representation of the 24-hour delay start and automatic keep warm features.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your Midea IH Rice Cooker.

1. **Unplug Before Cleaning:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot:** The non-stick inner pot should be hand washed with warm, soapy water and a soft sponge. Do not use abrasive cleaners or metal scouring pads, as this can damage the non-stick coating. Rinse thoroughly and dry completely.
3. **Steamer Basket, Measuring Cup, Spatula, Soup Spoon:** These accessories can be hand washed with warm, soapy water.

4. **Inner Lid:** The inner lid is detachable for easy cleaning. Gently pull it down to remove. Wash with warm, soapy water, rinse, and dry before reattaching.
5. **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or spray water directly onto it.
6. **Storage:** Store the rice cooker in a dry place when not in use.

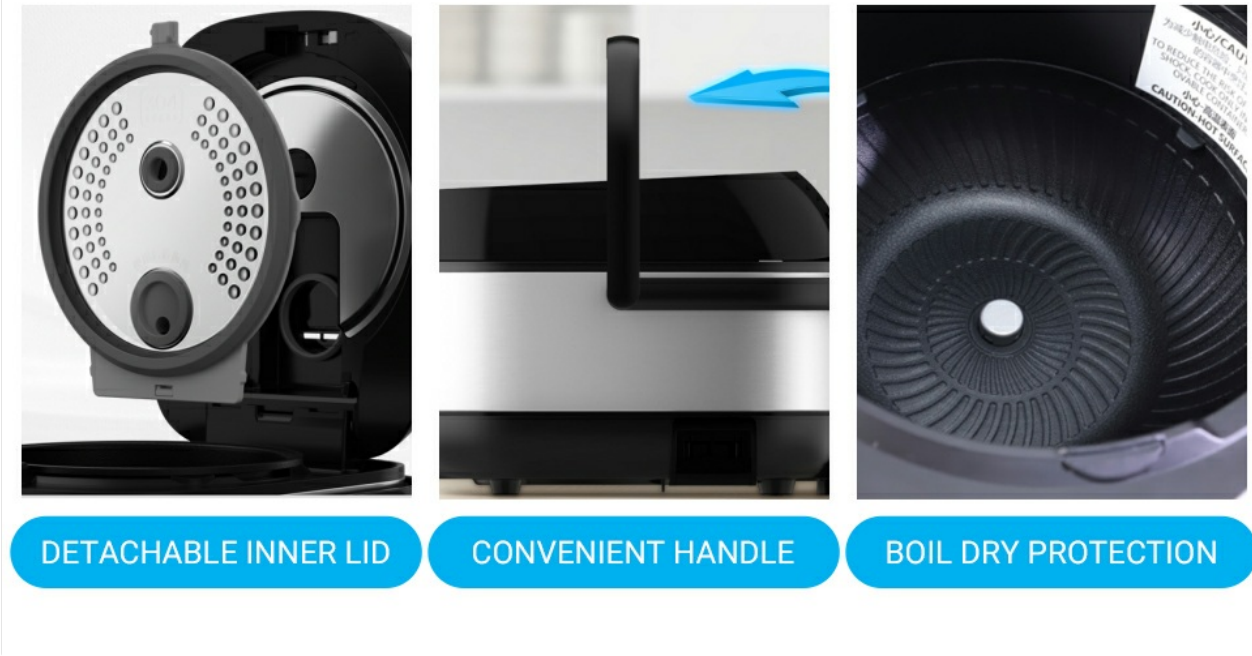


Figure 7: Features like the detachable inner lid and convenient handle simplify cleaning and use.

2.0MM INNER POT WITH NON-STICK COATING

3 liters, 6 cups uncooked, 12 cups cooked rice capacity for daily use

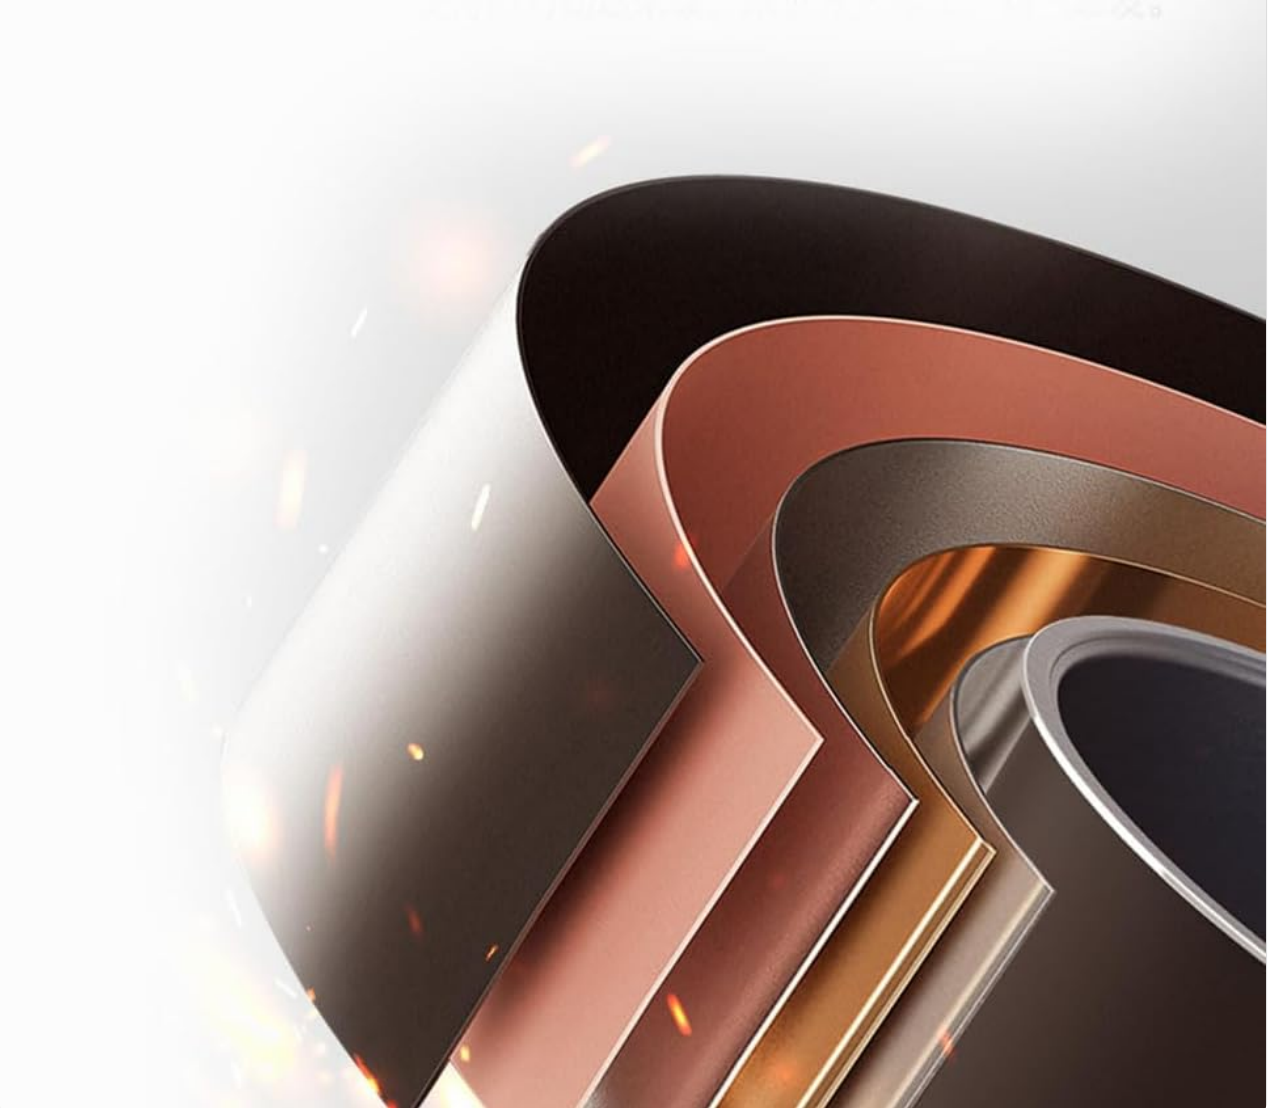


Figure 8: The multi-layer non-stick inner pot is designed for durability and easy cleaning.

TROUBLESHOOTING

If you encounter issues with your Midea IH Rice Cooker, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|----------------------------------|------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Rice is too hard/dry | Insufficient water; rice not rinsed properly; incorrect rice-to-water ratio. | Ensure water is filled to the correct line for the amount and type of rice. Rinse rice thoroughly. Allow rice to rest in "Keep Warm" mode for 5-10 minutes after cooking. |
| Rice is too soft/mushy | Too much water; lid not properly sealed. | Reduce water slightly next time. Ensure the lid is securely closed during cooking. |
| Cooker does not start | Not plugged in; power outage; lid not closed properly; program not selected. | Check power connection. Ensure lid is securely latched. Select a cooking program and press "START". |
| "Keep Warm" function not working | Power interruption; unit malfunction. | Check power supply. If issue persists, contact customer support. |

If the problem persists after trying these solutions, please contact Midea customer support for assistance.

SPECIFICATIONS

- **Brand:** Midea
- **Model Name:** IH Rice Cooker (Model 1)
- **Capacity:** 6 Cups (Uncooked)
- **Product Dimensions:** 10.4"D x 12.9"W x 8.6"H
- **Power Source:** Corded Electric
- **Voltage:** 120 Volts
- **Wattage:** 220 watts (Note: Feature bullets state 1130W Cooking Power, but specifications list 220 watts. Clarification may be needed from manufacturer. Using 220W as per specifications.)
- **Material:** Metal (Body), Stainless Steel (Lid)
- **Color:** Black
- **Item Weight:** 10.36 Pounds
- **Special Features:** Induction Heating, Advanced Fuzzy Logic
- **Product Care Instructions:** Hand Wash (Inner Pot)
- **Included Components:** Measuring Cup, Inner Pot, Spatula, Steamer Basket

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official Midea website. You can also contact Midea customer service directly for assistance with product inquiries, troubleshooting, or warranty claims.

Midea Official Website: www.midea.com

Midea Store on Amazon: Visit the Midea Store