

Toputure TP2

Toputure 3-in-1 Foldable Treadmill User Manual

Model: TP2

INTRODUCTION

Thank you for choosing the Toputure 3-in-1 Foldable Treadmill, Model TP2. This manual provides essential information for the safe and efficient operation, assembly, maintenance, and troubleshooting of your new treadmill. Please read this manual thoroughly before initial use and retain it for future reference.

SAFETY INFORMATION

Your safety is paramount. Please observe the following precautions:

- Always consult with a physician before starting any new exercise program.
- Ensure the treadmill is placed on a flat, stable surface with adequate clearance around it.
- Keep children and pets away from the treadmill during operation.
- Wear appropriate athletic footwear and clothing.
- Use the safety key/clip at all times. In case of emergency, the treadmill will stop if the safety key is detached.
- Do not operate the treadmill if it is damaged or malfunctioning.
- Maximum user weight capacity: **130 kg**.
- Unplug the treadmill from the power outlet when not in use or before cleaning/maintenance.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Toputure 3-in-1 Foldable Treadmill (Main Unit)
- Magnetic Remote Control
- User Manual
- Power Cable
- Safety Key

- Lubricant (Silicone Oil)

SETUP AND ASSEMBLY

The Toputure TP2 treadmill requires minimal assembly. Follow these steps:

1. **Unpacking:** Carefully remove the treadmill and all components from the packaging.
2. **Placement:** Position the treadmill on a level, stable surface. Ensure there is at least 0.6 meters (2 feet) of clear space behind the treadmill and 0.3 meters (1 foot) on each side.
3. **Unfolding (if applicable):** If using with the handrails, lift the handrail assembly into the upright position until it locks securely.
4. **Incline Adjustment:** The treadmill features a 7% fixed incline. To activate this, adjust the support bolt in the middle of the walking mat to make contact with the floor, ensuring a stable exercise experience. This adjustment does not require tools.
5. **Power Connection:** Connect the power cable to the treadmill and then to a grounded electrical outlet.
6. **Safety Key:** Attach the safety key clip to your clothing and insert the magnetic end into the designated slot on the console. The treadmill will not operate without the safety key in place.



Image: The Toputure 3-in-1 Foldable Treadmill shown in both its upright running mode with handrails and its flat under-desk walking pad mode. The 7% incline feature is highlighted.

2-IN-1 Cinta de Correr Debajo del Escritorio



Modo de Caminata: 1-6 KM/H



Modo de Carrera: 6-12 KM/H



Image: A person walking on the Toputure treadmill in its under-desk configuration, demonstrating its compact use for walking while working.

OPERATING INSTRUCTIONS

Power On/Off

- To power on, ensure the safety key is in place and press the power button on the remote control or console.

- To power off, press the power button again or remove the safety key.

Modes of Operation

The treadmill offers three distinct modes:

- **Fast Running Mode:** 1-12 KM/H (with handrails upright)
- **Walking Mode:** 1-6 KM/H (under-desk configuration or with handrails upright)
- **Incline Fat Burning Mode:** Utilizes the 7° incline for enhanced calorie burn.

Dos Formas de Ajustar la Velocidad



Control Remoto Integrado con la Espalda
Mecanismo Magnético para un Fácil Almacenamiento

Image: Two individuals demonstrating the treadmill's versatility: one walking in under-desk mode, and another running with the handrails extended.

Magnetic Remote Control

The treadmill is controlled via a magnetic remote. This remote allows for easy adjustment of speed and mode. Its magnetic design allows it to be conveniently stored on the treadmill body, preventing loss. The remote also features a pause button to temporarily stop your workout while preserving exercise data.

Motor Potente y Silencioso de 2,5 HP



Bajo Nivel
de Ruido
45db



Rango de
Velocidad
1 à 12km/h



Potencia
del Motor
2.5HP



Capacidad de
Carga de Peso
130KG



Image: Close-up of the treadmill's console, displaying the LED screen with workout metrics and highlighting the magnetic remote control storage.

LED Display and App Connectivity

The integrated LED display clearly shows real-time exercise data including time, calories burned, speed, and distance. For enhanced tracking and personalized workouts, connect the treadmill to a sports app via Bluetooth. The app allows you to accumulate exercise data, share results, and access guided training programs. A tablet/phone holder is provided for convenience.

Control de App de Entrenamiento Inteligente y Personalizado

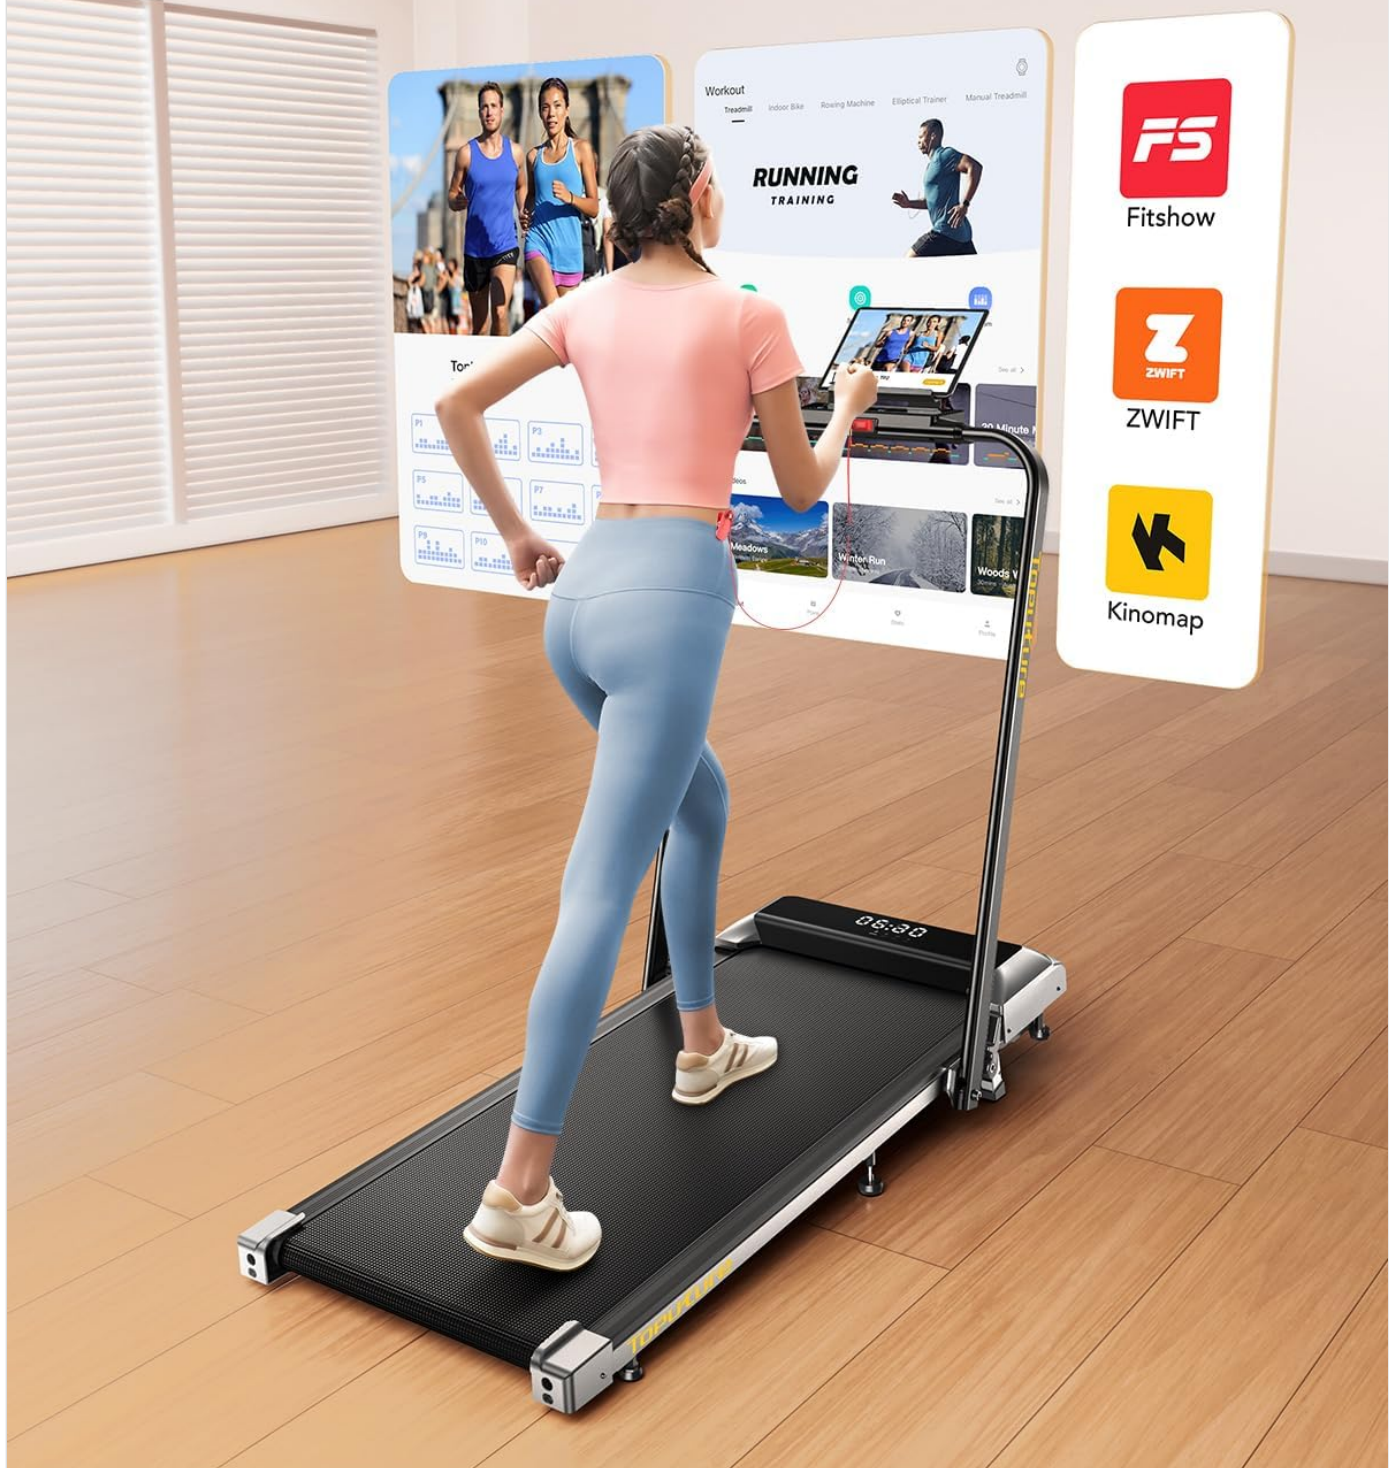


Image: A person exercising on the treadmill while viewing a fitness app on a tablet, illustrating the Bluetooth connectivity feature.

MAINTENANCE

Lubrication

Regular lubrication of the running belt is crucial for optimal performance and longevity. The treadmill features a convenient lubricant hole on the top right for easy application. Refer to the specific instructions provided with your lubricant for

frequency and method.

Cleaning

Wipe down the treadmill surfaces with a damp cloth after each use. Avoid using abrasive cleaners or solvents. Ensure the treadmill is unplugged before cleaning.

Storage

The treadmill is designed for easy storage. It weighs **23 kg** and folds to a compact size of **130 x 56 x 13.5 cm**. Equipped with transport wheels, it can be easily moved and stored under a bed or sofa to save space.

Fácil Almacenamiento y Ahorro de Espacio



Image: A person demonstrating the folding mechanism and compact storage of the treadmill, highlighting its space-saving design and transport wheels.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Treadmill does not start.	Safety key not inserted; Power cable not connected; Power switch off.	Insert safety key; Check power cable connection; Turn on power switch.
Running belt slips or hesitates.	Belt requires lubrication; Belt tension is incorrect.	Lubricate the running belt; Adjust belt tension (refer to detailed instructions in the full manual).
Unusual noise during operation.	Loose components; Motor issue; Belt misalignment.	Check for loose screws and tighten; Contact customer support if noise persists.
Remote control not responding.	Batteries are low or depleted; Obstruction between remote and treadmill.	Replace remote control batteries; Ensure clear line of sight.

For issues not listed here, please contact Toputure customer support.

SPECIFICATIONS

- **Model:** TP2
- **Brand:** Toputure
- **Motor:** 2.5 HP Silent Motor
- **Speed Range:** 1-12 KM/H
- **Incline:** 7% Fixed Incline
- **Running Area:** 100 x 40 cm
- **Max User Weight:** 130 kg
- **Product Dimensions (Unfolded):** 120.8 x 56 x 102.1 cm
- **Product Dimensions (Folded):** 130 x 56 x 13.5 cm
- **Product Weight:** 23 kg (Net), 26 kg (Gross)
- **Material:** Alloy Steel
- **Special Features:** Magnetic Remote Control, LED Display, Bluetooth App Connectivity, 5-layer Anti-slip Belt, 6 Silicone Shock Absorbers, 2 Soft Rubber Pads.

WARRANTY AND SUPPORT

The Toputure TP2 Treadmill comes with a **2-year warranty**. For any questions, technical assistance, or warranty claims, please contact Toputure customer support. Please have your model number (TP2) and purchase date available when contacting support.

Contact information can typically be found on the product packaging or the official Toputure website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question