

[Manuals.plus](#) /

› [Beelicious Pro](#) /

› Beelicious 5.8QT Large Air Fryer (Model BAF-808) Instruction Manual

Beelicious Pro BAF-808

Beelicious 5.8QT Large Air Fryer (Model BAF-808) Instruction Manual

Welcome to your new Beelicious Air Fryer. This manual provides important information for safe and efficient operation.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Please read all instructions carefully before using the appliance.

- Do not touch hot surfaces. Always use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
- Do not use the appliance for other than its intended use.
- Oversized foods or metal utensils must not be inserted into the air fryer as they may create a fire or risk of electric shock.

- A fire may occur if the appliance is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation. Do not store any items on top of the appliance when in operation.
- Do not place any of the following materials in the air fryer: paper, cardboard, plastic, or similar materials.
- Do not store any materials, other than manufacturer's recommended accessories, in this appliance when not in use.

PRODUCT OVERVIEW

Components

Your Beelicious Air Fryer consists of the main unit, a removable basket, and a crisper plate. Familiarize yourself with these parts before operation.

Air Fryer Made Easy with One Touch

12+ in 1 Cooking Function


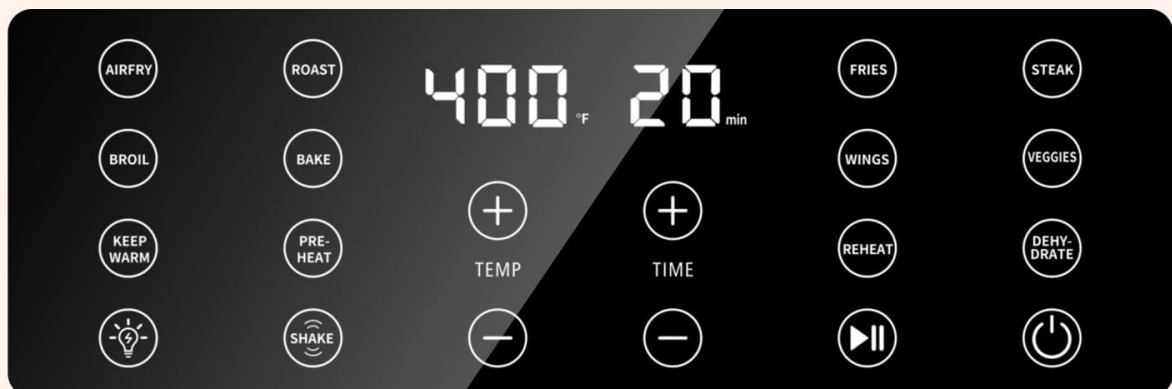


Image: The Beelicious 5.8QT Large Air Fryer, showcasing its sleek design and a clear view of food cooking inside.

MAX Tender by Flavor-Lock Tech

Patented 360° Airflow Design

±5° Precise Temp-Ctrl

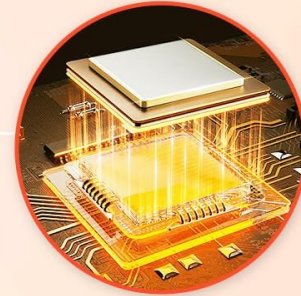

Patented 360° Airflow Design

Max Tender & Juicy Results

Image: The removable air fryer basket and the crisper plate, designed for easy cleaning and optimal air circulation.

BEFORE FIRST USE

Unpacking

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components are present and undamaged.

Cleaning

1. Wipe the exterior of the main unit with a damp cloth.
2. Wash the air fryer basket and crisper plate with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. Do not immerse the main unit in water or any other liquid.

SETUP AND ASSEMBLY

1. Place the crisper plate into the air fryer basket. Ensure it sits securely at the bottom.

2. Slide the assembled basket into the main air fryer unit until it clicks into place.
3. Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper airflow.
4. Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Control Panel

The Beelicious Air Fryer features an intuitive digital touch control panel for easy operation.

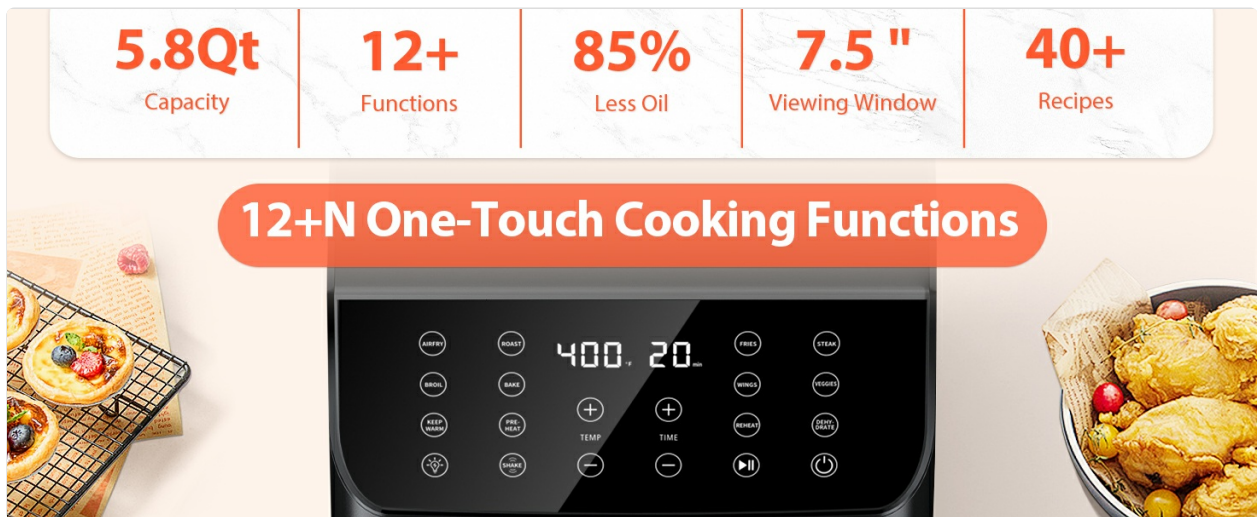


Image: The digital control panel displaying various preset cooking functions and temperature/time adjustments.

Basic Operation

1. **Power On/Off:** Press the power icon to turn the unit on or off.
2. **Adjusting Temperature:** Use the "TEMP +" and "TEMP -" buttons to set the desired cooking temperature.
3. **Adjusting Time:** Use the "TIME +" and "TIME -" buttons to set the desired cooking time.
4. **Start/Pause:** Press the play/pause icon to start or pause the cooking cycle.

Preset Functions

The air fryer includes 12+ one-touch cooking functions for convenience:

- Air Fry
- Roast
- Steak
- Bake
- Fries
- Broil
- Reheat
- Dehydrate
- Pre-heat
- Keep Warm

- Wings
- Veggies

Simply select the desired preset, and the air fryer will automatically set the optimal temperature and time. You can adjust these settings manually if needed.



Image: The Beelicious 12-in-1 Digital Air Fryer, highlighting its versatility for cooking different types of food.

Shake Reminder

For certain cooking functions, the air fryer will emit an audible reminder to shake or flip your food halfway through the cooking cycle. This ensures even cooking and crispiness.



Image: The air fryer's display showing the 'SHAKE' reminder icon, prompting users to shake the basket for even cooking.

Viewing Window and Oven Light

The air fryer is equipped with a clear viewing window and an internal oven light. Press the light icon on the control panel to illuminate the interior, allowing you to monitor your food's progress without opening the basket.

Premium Glass Display

Enjoy easy selections on a tempered glass display



Quiet Operation

Unique QuietMax technology significantly reduce fan noise



Image: A close-up of the air fryer's premium glass display and the clear viewing window, allowing monitoring of food.

COOKING GUIDE

The Beelicious Air Fryer utilizes 360° rapid airflow and precise IQTemp control to cook food efficiently with up to 85% less oil compared to traditional deep frying methods.

Healthier Meals in Minutes

Up to 85% Less Oil. 100% Taste



Image: A visual comparison illustrating the reduced oil content in air-fried foods versus deep-fried foods.

For detailed recipes and cooking times, refer to the included cookbook. This cookbook provides over 40 original recipes developed by Beelicious Pro chefs.

Endless Inspiration With Chef-Make Cookbook



Image: A chef presenting the Beelicious Pro cookbook, featuring over 40 recipes for various dishes.

Large Capacity

The 5.8-quart capacity is suitable for preparing meals for 3-5 people, accommodating items like a 3-pound chicken or 14 chicken wings.



Image: The air fryer basket filled with various foods, demonstrating its 5.8-quart large capacity.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure the longevity and optimal performance of your air fryer.

Daily Cleaning

- After each use, unplug the air fryer and allow it to cool completely.
- Wipe the exterior with a damp cloth.
- Remove the basket and crisper plate. Wash them with warm, soapy water or place them in the dishwasher.
- Ensure all parts are dry before reassembling or storing.

Deep Cleaning

- For stubborn food residue, soak the basket and crisper plate in warm, soapy water for 10-15 minutes before washing.
- The basket and crisper plate are dishwasher safe for convenient cleaning.

Dishwasher-Safe & Easy to Clean with Nonstick Basket



Image: The air fryer basket and crisper plate placed in a dishwasher, demonstrating their dishwasher-safe feature.

TROUBLESHOOTING

If you encounter any issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; unit not assembled correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the basket is fully inserted.
Food is not cooked evenly.	Basket overloaded; food not shaken/flipped; incorrect temperature/time.	Do not overload the basket. Use the shake reminder feature. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the basket and crisper plate thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Food is not crispy.	Too much moisture; not enough oil (for certain foods); basket overloaded.	Pat food dry before air frying. Lightly brush or spray with oil. Avoid overcrowding the basket.

If the problem persists after trying these solutions, please contact Beelicious Pro customer support.

SPECIFICATIONS

Technical details for the Beelicious 5.8QT Large Air Fryer (Model BAF-808):

Feature	Detail
Model Number	BAF-808
Capacity	5.8 Quarts

Feature	Detail
Product Dimensions (D x W x H)	14.56" x 12.44" x 13.46"
Wattage	1700 Watts
Max Temperature Setting	450 Degrees Fahrenheit
Control Method	Touch
Outer Material	Plastic
Inner Material	Metal
Nonstick Coating	Yes
Dishwasher Safe Parts	Basket, Crisper Plate
Certifications	ETL Certified
UPC	841837105175

WARRANTY AND SUPPORT

Beelicious Pro is committed to providing quality products and excellent customer service.

- **Money-Back Guarantee:** Enjoy a 30-day money-back guarantee from the date of purchase.
- **Warranty:** Your Beelicious Air Fryer is covered by a 1-year warranty against manufacturing defects.
- **Technical Support:** Lifetime technical support is available for your product.

For any questions, concerns, or warranty claims, please contact Beelicious Pro customer support via Amazon or our hotline. We aim to resolve issues within 2 working days.