

GVODE G2315W

GVODE Slicer Shredder Attachment

INSTRUCTION MANUAL FOR KITCHENAID STAND MIXERS

Model: G2315W

Introduction

Thank you for purchasing the GVODE Slicer Shredder Attachment for your Kitchenaid Stand Mixer. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new attachment. Please read all instructions carefully before first use and retain this manual for future reference.

Important Safety Instructions

- Always unplug your Kitchenaid Stand Mixer from the power outlet before attaching, detaching, or cleaning the slicer shredder attachment.
- Keep hands and utensils away from the moving blades during operation to prevent injury.
- Never feed food into the chute with your fingers. Always use the provided food pusher.
- This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- Do not operate the attachment if any part is damaged or if it is not properly assembled.
- Ensure the attachment is securely locked onto the mixer's power hub before starting.

Product Overview

The GVODE Slicer Shredder Attachment is designed to simplify food preparation by quickly slicing and shredding various ingredients. It includes a main body, a food pusher, and five interchangeable blades for different cutting needs.



Image: Overview of the GVODE Slicer Shredder Attachment components, highlighting the food pusher, large outlet, and the removable blade mechanism.

Components:

- **Slicer Shredder Body:** The main housing that connects to the Kitchenaid mixer.
- **Food Pusher:** Used to guide food into the blades safely.
- **5 Interchangeable Blades:**
 - Slicing Blade
 - 5mm Coarse Blade
 - 3mm Fine Blade
 - Wave Stripe Blade
 - 6mm Cutting Cone Blade

Setup Instructions

Follow these steps to properly attach the slicer shredder to your Kitchenaid Stand Mixer:

1. **Prepare the Mixer:** Ensure your Kitchenaid Stand Mixer is unplugged. Loosen the attachment knob on the power hub at the front of the mixer.
2. **Attach the Body:** Insert the attachment shaft of the slicer shredder body into the power hub. Rotate the attachment slightly back and forth until it fits into the square drive shaft.
3. **Secure the Attachment:** Tighten the attachment knob until the slicer shredder body is firmly secured to the mixer.
4. **Insert a Blade:** Select the desired blade. Align the blade with the opening in the slicer shredder body and push it in until it clicks securely into place. Ensure the blade is fully seated.

5. **Position a Bowl:** Place a bowl or container directly under the outlet of the attachment to collect the processed food.



Image: The GVODE Slicer Shredder Attachment properly installed on a Kitchenaid Stand Mixer.

EASY TO INSTALL AND DISASSEMBLE



VS



OUR BLADES
Removable design for easy cleaning



OTHERS
Non-removable

Image: Illustration demonstrating the ease of installing and disassembling the blades for cleaning and use.

Operating Instructions

Once the attachment is set up, you can begin processing your ingredients.

1. **Prepare Food:** Cut ingredients into pieces that fit comfortably into the large feed chute. For best results, ensure vegetables are firm.
2. **Select Speed:** Plug in your Kitchenaid Stand Mixer. Turn the mixer to a speed setting between 4 and 8. Start with a lower speed (e.g., 4-6) to prevent lighter ingredients from flinging out.
3. **Feed Ingredients:** Place the food into the feed chute. Use the food pusher to gently guide the food towards the rotating blade. Do not force food through.
4. **Monitor Output:** Ensure the processed food is collecting in the bowl placed underneath.
5. **Finish:** Once all ingredients are processed, turn off the mixer and unplug it before detaching the attachment.

Blade Usage Guide:



Image: Visual guide to the five interchangeable blades and their respective cutting results.

- **Slicing Blade:** Ideal for uniform slices of cucumber, carrots, potatoes, and other firm vegetables.
- **5mm Coarse Blade:** Best for cutting thick strips of ingredients like onions, carrots, potatoes, and kale.
- **3mm Fine Blade:** Designed for creating thin strips, perfect for shredded cheese, potatoes, and carrots.
- **Wave Stripe Blade:** Creates decorative wave-cut slices for potatoes, carrots, and similar produce.
- **6mm Cutting Cone Blade:** Suitable for grating cheese, nuts, and other hard ingredients.

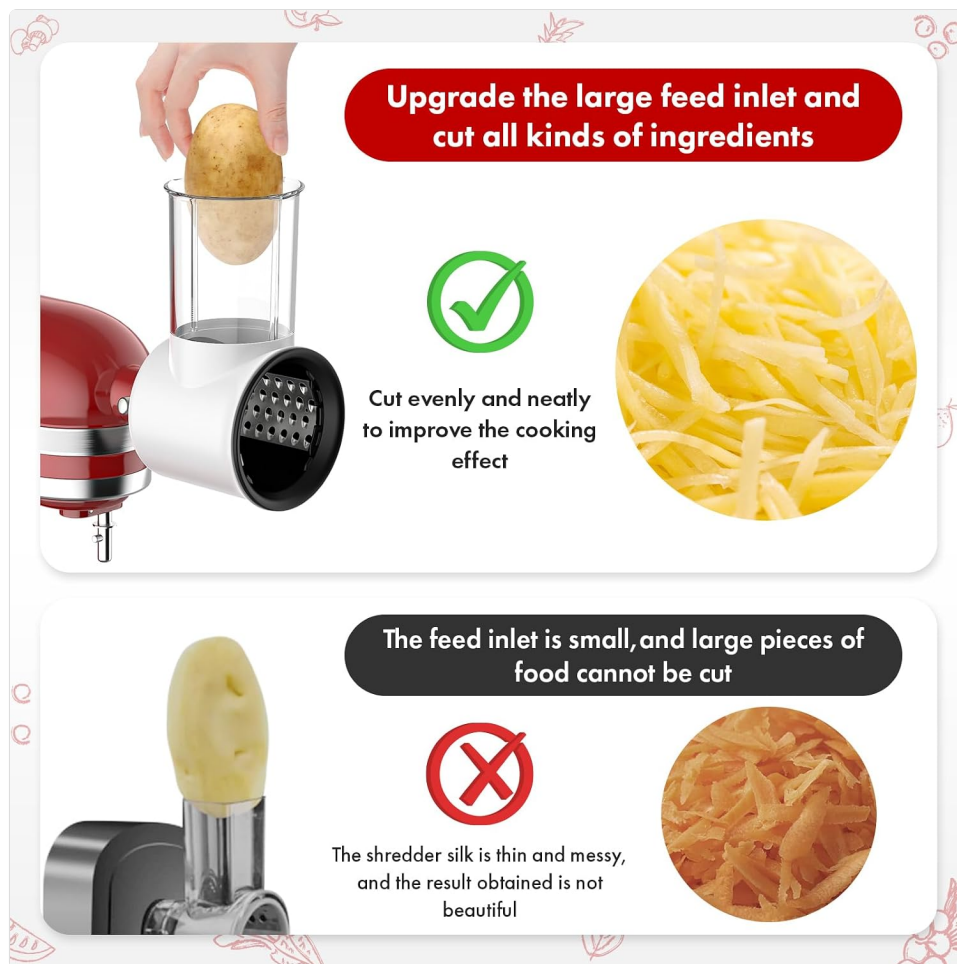


Image: Demonstrates the advantage of the large feed chute for processing larger ingredients efficiently.

Maintenance and Cleaning

Proper cleaning ensures the longevity and hygiene of your attachment.

- **Dishwasher Safe Parts:** The blades, food pusher, and the clear feed chute cap are dishwasher safe. Place them on the top rack for best results.
- **Hand Wash Only:** The main slicer shredder body, which contains metal components for connection to the mixer, must be hand washed. Use warm, soapy water and a soft cloth or brush. Rinse thoroughly and dry immediately to prevent water spots or corrosion.
- **Removing Stains:** If vegetable coloring (e.g., from carrots) stains the plastic casing, apply a small amount of cooking oil to a cloth and gently wipe the stained area. Then wash as usual.
- **Storage:** Store all components in a dry place. The original packaging can be used to keep the blades organized and protected.

ALL PARTS ARE DISHWASHER SAFE!



Image: Illustrates the dishwasher-safe components of the attachment.

Troubleshooting

If you encounter issues with your GVODE Slicer Shredder Attachment, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Food gums up or clogs the blade.	Using the wrong blade for the food type; food is too soft or sticky; overfilling the chute.	Ensure you are using the appropriate blade for the ingredient. For soft cheeses, chill them thoroughly before shredding. Do not overfill the feed chute.
Processed food flings out of the bowl.	Mixer speed is too high; bowl is too small or positioned incorrectly.	Reduce the Kitchenaid mixer speed (try speed 4). Use a larger bowl or position it closer to the outlet. A plate can be used to deflect food into the bowl.
Attachment does not fit or secure to the mixer.	Improper alignment with the power hub; attachment knob not tightened.	Ensure the attachment shaft is fully inserted and aligned with the square drive shaft in the power hub. Tighten the attachment knob firmly.
Blades are not cutting effectively.	Blade not fully seated; food is too hard or fibrous for the selected blade.	Check that the blade is securely clicked into place. Ensure the food type is suitable for the blade being used.

Specifications

- **Model:** G2315W
- **Material:** High-quality Plastic, Stainless Steel
- **Product Dimensions:** 26.2L x 19.8W x 12.3H centimetres
- **Included Components:** 1x Slicer Shredder Body, 1x Food Pusher, 1x Slicing Blade, 1x 5mm Coarse Blade, 1x 3mm Fine Blade, 1x Wave Stripe Blade, 1x 6mm Cutting Cone Blade
- **Compatibility:** Designed for all Kitchenaid Stand Mixers.

Warranty and Support

GVODE products are manufactured with quality and durability in mind. This product comes with a standard limited warranty against manufacturing defects. For specific warranty details, claims, or technical support, please refer to the warranty card included with your purchase or visit the official GVODE website. Please have your model number (G2315W) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question