

USHA ICHEF SMART AIR FRYER

USHA Ichef Smart Air Fryer 4.5L Instruction Manual

Model: Ichef Smart Air Fryer

1. INTRODUCTION

Thank you for choosing the USHA Ichef Smart Air Fryer 4.5L. This appliance is designed to provide a healthier way to cook your favorite meals with minimal oil. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the main unit in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.
- Always unplug the appliance after use and before cleaning.
- Allow the appliance to cool down completely before handling or cleaning.
- Do not block the air inlet or outlet vents during operation.
- The appliance features **2-stage thermal safety** to prevent overheating.

3. PRODUCT OVERVIEW AND COMPONENTS

The USHA Ichef Smart Air Fryer is designed for versatile cooking with ease. Familiarize yourself with its main components:



Image 3.1: Front view of the USHA Ichef Smart Air Fryer 4.5L, showcasing its sleek black design, digital display, and transparent window.

What's in the Box:

- Air Fryer Main Unit
- Metal Bowl (Non-stick food-grade coated)
- Baking Rack
- Instruction Manual

4. KEY FEATURES

The USHA Ichef Smart Air Fryer is equipped with advanced features for an optimal cooking experience:

- **10-in-1 Functions:** This versatile appliance supports Air Frying, Baking, Roasting, Grilling, Thawing, Slow Cooking, Barbeque, Braising, Toasting, and Air Drying.
- **10 Pre-Set Menus:** Easily prepare popular dishes with dedicated settings for Cake, Fish, Pizza, Chicken, Fries, Grill, Vegetables, Manual/Reheat, Dehydrate, and Frozen Food.

- **Digital Display & Touch Panel:** Intuitive controls for setting temperature, time, and selecting cooking modes.
- **Transparent Window & Illuminated Chamber:** Monitor your cooking progress without opening the drawer, thanks to the clear glass window and internal illumination.
- **4.5 Litres Capacity:** Generous capacity suitable for family meals.
- **Non-Stick Food-Grade Coated Metal Bowl:** Ensures easy food release and simplifies cleaning.
- **Powerful 1350W Heating Element:** Provides rapid heating and efficient cooking.
- **Turbo Air Circulation with 2500 RPM Fan:** Delivers 360° heating for even browning and crispy results.
- **Auto Pause/Start:** For enhanced safety and convenience during operation.



Image 4.1: Visual representation of the 10-in-1 functions available on the air fryer.



CAKE



FISH



PIZZA



CHICKEN



FRIES



GRILL



VEGETABLES



MANUAL/REHEAT



DEHYDRATE



FROZEN FOOD

10 PRE-SET MENUS



Image 4.2: Display of the 10 pre-set menus for various food types.

EVEN BROWNING OF FOOD WITH 360° HEATING

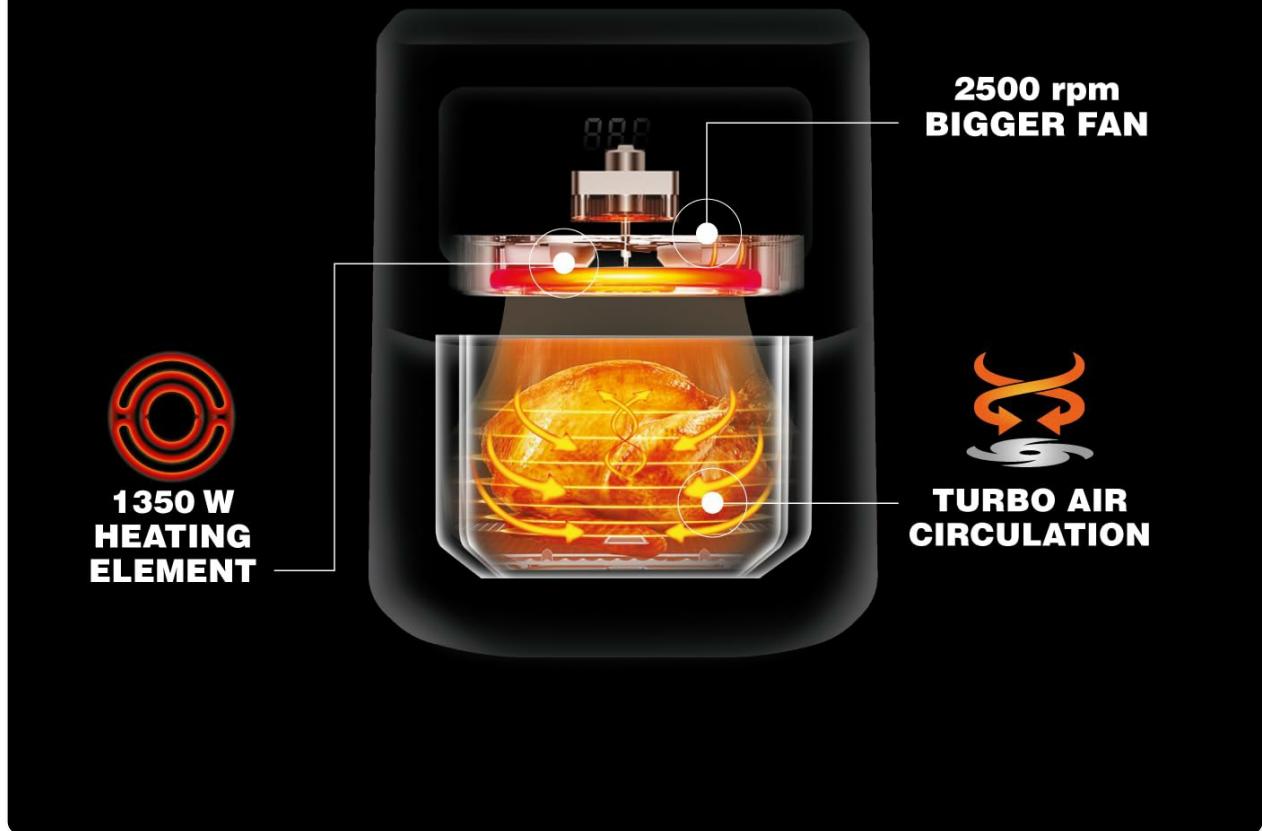


Image 4.3: Diagram illustrating the 360-degree heating and turbo air circulation for even cooking.

5. SETUP

- Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
- Initial Cleaning:** Before first use, clean the metal bowl and baking rack with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
- Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation.
- Power Connection:** Plug the power cord into a grounded electrical outlet.

6. OPERATING INSTRUCTIONS

General Operation:

1. Place food in the metal bowl or on the baking rack. Do not overfill.
2. Slide the metal bowl back into the main unit until it clicks into place.
3. Press the power button to turn on the appliance.
4. Select a pre-set menu or manually set the temperature and time using the touch panel.
5. The temperature range is **50°C to 200°C**. The cooking time range is **1 minute to 30 minutes**.
6. Press the start button to begin cooking.
7. The transparent window and illuminated chamber allow you to monitor cooking progress.
8. The appliance features an **Auto Pause/Start** function when the drawer is opened and closed during cooking.
9. Once cooking is complete, carefully remove the metal bowl and transfer the food.

Using Pre-Set Menus:

The 10 pre-set menus offer optimized settings for common dishes. Simply select the desired icon on the touch panel, and the air fryer will automatically set the recommended temperature and time. You can adjust these settings manually if needed.

Video Guide:

Video 6.1: An overview of the USHA Ichef Smart Air Fryer, demonstrating its features and basic operation. This video provides a visual guide to the appliance's functionality.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Cleaning the Metal Bowl and Baking Rack:** The non-stick food-grade coated metal bowl and baking rack should be cleaned with warm water, a mild detergent, and a non-abrasive sponge. *Note: The metal bowl is not dishwasher safe.*
3. **Cleaning the Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh abrasives or scouring pads.
4. **Cleaning the Interior:** Use a soft, damp cloth to wipe the interior of the appliance. For stubborn food residue, a small amount of mild detergent can be used.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.



Non-Stick Food
Grade Coated bowl
for Simple Cleanup

Cook, Enjoy, Relax!

Image 7.1: Close-up view of the non-stick food-grade coated metal bowl, highlighting its easy-to-clean surface.

8. TROUBLESHOOTING

If you encounter any issues with your USHA Ichef Smart Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; Power outlet not working; Power button not pressed.	Ensure the power cord is securely plugged into a working outlet. Press the power button.
Food is not cooked evenly.	Too much food in the basket; Food not shaken/flipped.	Reduce food quantity. Shake or flip food halfway through cooking.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Grease residue from previous use; Fatty ingredients.	Clean the metal bowl and heating element thoroughly. Remove excess oil from food.
Food is not crispy.	Insufficient cooking time/temperature; Too much moisture in food.	Increase cooking time or temperature. Pat food dry before cooking.

If the problem persists after trying these solutions, please contact customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	USHA
Model Name	ICHEF SMART AIR FRYER
Capacity	4.5 Litres
Colour	Black
Material	Acrylonitrile Butadiene Styrene
Product Dimensions	25.6D x 31.4W x 30H Centimeters
Item Weight	4 kg (4000 Grams)
Wattage	1350 Watts
Voltage	230 Volts (AC)
Control Method	Touch (Digital Display & Touch Panel)
Min Temperature Setting	50 Degrees Celsius
Max Temperature Setting	200 Degrees Celsius
Air Frying Technology	Turbo Air Circulation
Non-Stick Coating	Yes
Dishwasher Safe Parts	No (for metal bowl)
Manufacture Year	2024

10. WARRANTY AND SUPPORT

The USHA Ichef Smart Air Fryer comes with a standard brand warranty. For specific warranty terms, conditions, and duration, please refer to the warranty card included in your product packaging or contact USHA customer support.

Manufacturer Contact Information:

Usha International Limited
Plot No.15, Institution area, Sector -32, Gurugram, Haryana-122 001
Telephone No.: +91-124-4583106

© 2024 USHA International Limited. All rights reserved.