

[Manuals.plus](#) /

› [DeerRun](#) /

› DeerRun Raceable Treadmill with APP Control User Manual

DeerRun BA07R1

DeerRun Raceable Treadmill with APP Control User Manual

[Safety Information](#)[Setup](#)[Operation](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty &](#)[Support](#)

INTRODUCTION

Thank you for choosing the DeerRun Raceable Treadmill with APP Control. This walking pad is designed to provide a convenient and effective way to stay active at home or in the office. Featuring a powerful 2.5 HP motor, a comfortable 5-layer running belt, and smart APP integration, it offers a versatile fitness experience. Its compact and portable design allows for easy storage and use in various settings.

Eine Eintauchenerfahrung



Image: The DeerRun Raceable Treadmill, showcasing its sleek design and compact form factor.

Leicht zu bewegen und zu lagern



Image: A woman demonstrating the easy movement and storage of the DeerRun treadmill, highlighting its portability and space-saving design.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the treadmill. Keep this manual for future reference.

- Ensure the treadmill is placed on a flat, stable surface.
- Keep children and pets away from the treadmill during operation.
- Wear appropriate athletic footwear.
- Do not use the treadmill if you feel unwell or experience pain.
- Always unplug the treadmill when not in use or before cleaning/maintenance.
- Do not attempt to repair the treadmill yourself. Contact customer support for assistance.

SETUP GUIDE

1. Unboxing and Accessory Check

Carefully remove the treadmill from its packaging. Check that all accessories are present. The accessory kit typically includes guide hooks (x2) and screws (x2), along with an L-shaped hex key.

Your browser does not support the video tag.

Video: This video demonstrates checking the accessories and installing the guide hooks for the running belt. (Relevant segment: 0:13 - 0:26 for accessory check, 0:35 - 0:53 for guide hook installation)

2. Initial Placement

Place the treadmill on a flat, level surface. Ensure there is enough clear space around the unit for safe operation.

3. Installing Guide Hooks (if needed)

If your treadmill belt has an offset that cannot be resolved by normal adjustment, you may need to install the guide hooks. Follow these steps:

1. Turn off the power and unplug the device.
2. Flip the device over and position it without obstructions.
3. Lift the edge of the running belt, locate the beam position, and install the guide belt hook into the raised part of the beam edge.
4. Install the screws and tighten them clockwise with the L-shaped hex key.
5. Repeat the synchronous installation on the other side.
6. Connect the power adapter, start the equipment, and run it at 0.6 MPH. Check if the equipment functions normally and if the running belt is centered.
7. If everything is in order, you can proceed with your daily exercise.

Your browser does not support the video tag.

Video: Detailed instructions on how to install the guide hooks to correct running belt offset. (Relevant segment: 0:00 - 1:19)

OPERATING INSTRUCTIONS

1. Powering On and Remote Control

To power on the treadmill, ensure it is plugged into a power outlet and the main power switch is on. Use the remote control to start and adjust the speed of the treadmill.

- Press the power button on the remote to turn on the treadmill.
- Use the speed adjustment buttons to increase or decrease the speed.

Your browser does not support the video tag.

Video: Demonstrates remote control speed adjustment and various usage modes. (Relevant segment: 0:08 - 0:17)

2. Using the PitPat APP

The DeerRun treadmill integrates with the PitPat APP, offering a new world of social fitness. Download the app to access training courses, real-time monitoring, and connect with other users.

- Download the PitPat APP from your device's app store.
- Connect the treadmill to the app via Bluetooth.
- Explore various training courses, compete online, and track your progress.

Kommt mit Schulungskursen

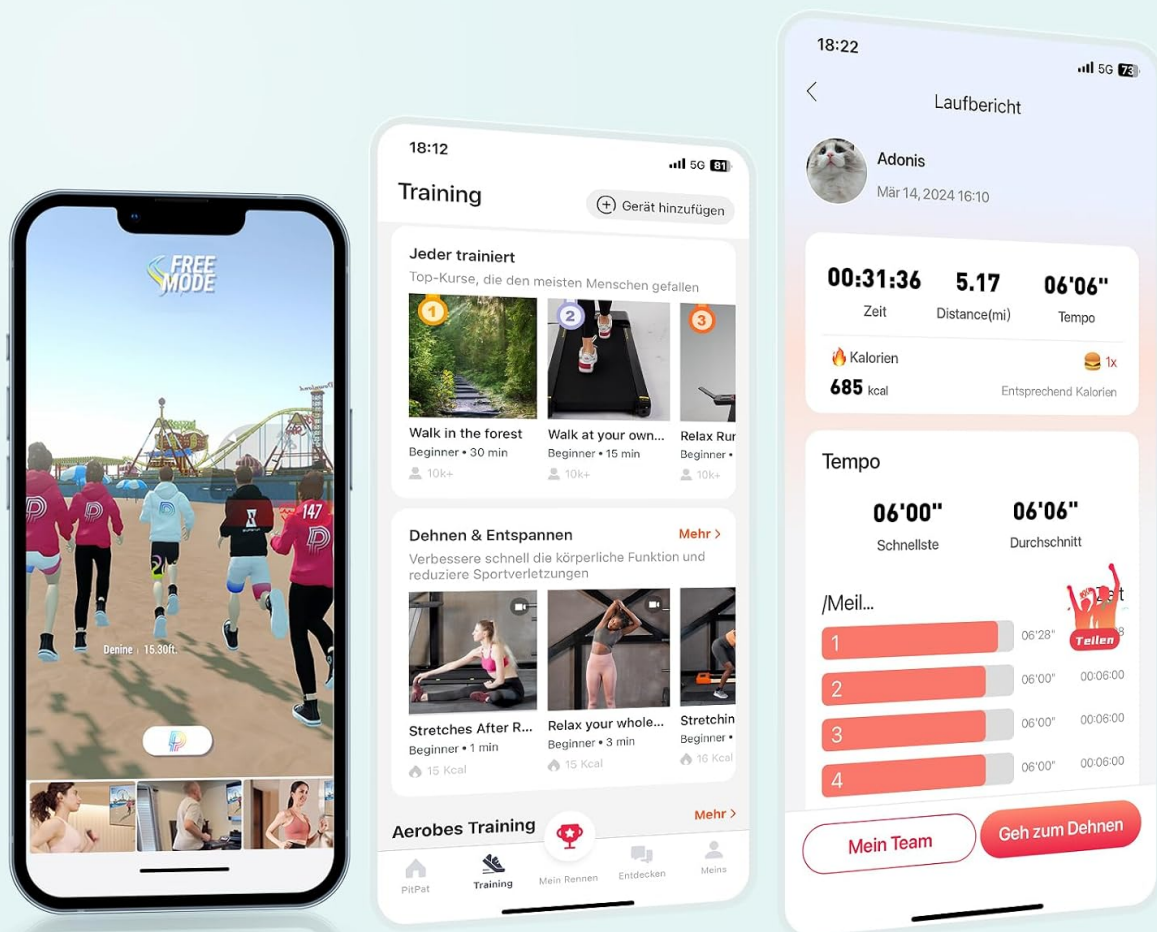


Image: The PitPat APP interface, displaying various training courses, social fitness options, and real-time workout data.

Your browser does not support the video tag.

Video: Shows interaction with the PitPat APP, including selecting training environments and social features. (Relevant segment: 0:29 - 0:35)

3. Exercise Modes

The treadmill supports various modes to suit your fitness needs:

- **Walking Mode (1-4 KPH):** Ideal for light exercise or working at a standing desk.
- **Working Mode (1-2 KPH):** Perfect for maintaining activity while focusing on tasks.
- **Running Mode (4-6 KPH):** For more intense cardio workouts.



WALKING

Modus



WORKING

Modus



JOGGING

Modus



Image: Visual representation of the treadmill's walking, working, and jogging modes, demonstrating its versatility.

Leiser Motor

Genießen Sie Ihre Trainingszeit
in Ruhe

 Geräuscharm <55 db



Image: A user enjoying a quiet workout on the DeerRun treadmill, emphasizing its low noise level (less than 55 dB).

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your treadmill.

1. Running Belt Alignment

If the running belt is misaligned and affects normal use, follow these steps to adjust it:

1. Turn off the power and place the machine on a flat surface.
2. If the belt slides and protrudes to the left: Rotate the rear left screw clockwise by 1/8 turn (approx. 45 degrees).
3. If the belt slides and protrudes to the right: Rotate the rear left screw gradually counter-clockwise, observing the belt returning to the center. The adjustment angle should be less than 45 degrees.
4. Test: Turn on the treadmill and set the speed to 2 KPH. Observe for 30 seconds to 1 minute if the belt moves to the center.

5. Once the belt is centered and stable, you can use it normally after turning off the treadmill.

Your browser does not support the video tag.

Video: Instructions on how to resolve running belt offset issues. (Relevant segment: 0:00 - 1:19)

Your browser does not support the video tag.

Video: Guide on how to resolve belt alignment problems. (Relevant segment: 0:00 - 1:53)

2. Running Belt Tension

If the running belt feels too loose or slips during use, it needs to be tightened. You can check the tension by trying to insert your index finger under the belt from the side. Ideally, there should be enough space for one finger. If you can fit two fingers vertically, the belt is too loose and needs further tightening.

1. Turn off the power and place the machine on a flat surface.
2. Set the machine to a speed of 2.0 KPH.
3. Adjust the screws on both rear covers clockwise to tighten the belt. Rotate until the belt moves smoothly.
4. Check if the belt is centered and stable.

Your browser does not support the video tag.

Video: Instructions on how to resolve a slipping or loose running belt. (Relevant segment: 0:00 - 1:23)

TROUBLESHOOTING

Remote Control Not Responding

If the remote control is not able to control the treadmill, it might not be paired correctly. Follow these steps to re-pair it:

1. First, turn off the machine.
2. Then, press and hold the power button on the remote control while turning on the machine's power.
3. When you hear a beep and see "00:00" displayed on the screen, it means the pairing was successful. You can now use the remote control to operate the machine.

Your browser does not support the video tag.

Video: Instructions on how to pair the remote control if it's not responding. (Relevant segment: 0:00 - 1:19)

If the issue persists after trying the above steps, please refer to the Maintenance section for belt-related issues or contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	DeerRun
Color	Grey
Product Class	Brand New
Product Dimensions	114P x 52l x 12H cm
Item Weight	19 Kilograms
Material	Stainless Steel
Maximum Speed	6 Kilometers per hour
Special Feature	Bluetooth, Portable
Target Audience	Adult
Maximum Horsepower	2.5 Horsepower

Wählen Sie die Richtige Größe und Schonen Sie die Umwelt



GÜRTELLÄNGE	MINI (80CM)	CLASSIC (90CM)	PRO (100CM)
GÜRTEL GRÖßE	39*80CM	39*90CM	39*100CM
ANWENDBARE POPULATION	< 170CM 113KG	170CM - 180CM 136KG	> 180CM 159KG
GEWICHT DES ARTIKELS	16.5KG	17.9KG	18.9KG
MAXIMALE GESCHWINDIGKEIT	1-6KM/H	1-6KM/H	1-8KM/H

Image: A size guide table illustrating different belt lengths (Mini, Classic, Pro) with corresponding dimensions, applicable user heights/weights, and maximum speeds.

WARRANTY AND SUPPORT

DeerRun is committed to providing high-quality products and excellent customer service.

- **Warranty:** This product comes with a 2-year warranty.
- **Returns:** Free returns are available within the specified period.
- **Customer Support:** We offer 24/7 free consultations. Do not hesitate to contact our customer service team for any questions or issues.
- **Software Updates:** Our intelligent APP supports free updates for continuous improvement.
- **Firmware Updates:** The smart chip inside the treadmill supports remote updates, allowing for future connectivity with more smart devices.

For assistance, please refer to the contact information provided with your purchase or visit the official DeerRun website.