

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Mesqool](#) /

› [Mesqool Vibrating Alarm Clock for Kids User Manual - Model CR1027](#)

Mesqool CR1027

Mesqool Vibrating Alarm Clock for Kids User Manual

Model: CR1027

1. PRODUCT OVERVIEW

The Mesqool Vibrating Alarm Clock (Model CR1027) is a portable device designed to assist with waking up through customizable alarm modes, including vibration, buzzer, or both. It features a rechargeable battery, dual alarm settings, and adjustable vibration intensity. This manual provides comprehensive instructions for its use.



Figure 1: Front view of the Mesqool Vibrating Alarm Clock, displaying the digital time, AM/PM indicator, alarm icons, and

battery status.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- Mespool Vibrating Alarm Clock (CR1027)
- USB Charging Cable
- User Manual (this document)

3. DEVICE LAYOUT

Familiarize yourself with the buttons and ports on your alarm clock for proper operation.

3-Levels Vibration Adjustable

Personalize your wake-up experience for ultimate comfort.



LOW



MIDDLE



HIGH



Figure 2: Side view of the alarm clock, indicating the location of control buttons and the charging port. Specific button functions are detailed in the operating instructions.

4. SETUP

4.1 Initial Charging

Before using the alarm clock for the first time, ensure it is fully charged. Connect the provided USB charging cable to the clock's charging port and then to a compatible USB power adapter (not included). The battery indicator on the display will show the charging status.

Equipped with a **3000mAh** Rechargeable High-Capacity Battery

Ensuring Extended Battery Life – A Single Full Charge Offers at Least Six Months of Usage.



Figure 3: The alarm clock connected to a charging cable, illustrating the charging process.

4.2 Power On/Off

To power the device on or off, press and hold the Power button (located on the side, refer to Figure 2) for approximately 3 seconds.

5. OPERATING INSTRUCTIONS

5.1 Setting the Time

1. Press the **Time Set** button once. The hour digits will begin to flash.
2. Use the + and - buttons to adjust the hour.
3. Press **Time Set** again. The minute digits will flash.
4. Use the + and - buttons to adjust the minutes.
5. Press **Time Set** a third time to confirm the time and exit the setting mode.

5.2 Setting Alarms (Alarm 1 and Alarm 2)

The alarm clock supports two independent alarms. The procedure for setting each alarm is identical.

1. Press the **Alarm 1** or **Alarm 2** button once. The alarm time will flash.
2. Use the + and - buttons to set the desired alarm hour.
3. Press the respective **Alarm** button again. The alarm minutes will flash.
4. Use the + and - buttons to set the desired alarm minutes.
5. Press the respective **Alarm** button a third time to confirm the alarm time.
6. Immediately after setting the time, press the **Alarm** button repeatedly to cycle through the available alarm modes: **Vibration Only**, **Buzzer Only**, and **Vibration + Buzzer**. The corresponding icon will appear on the display.
7. To activate or deactivate an alarm, press the respective **Alarm** button until the alarm icon appears (activated) or disappears (deactivated).

Helps Child Wake Unassisted

Buzzer Only, Vibrate Only, Buzzer with Vibrate.



VIB



VIB+BUZZ



BUZZ



Figure 4: Display showing the three alarm modes: Vibration (VIB), Vibration + Buzzer (VIB+BUZZ), and Buzzer (BUZZ).

5.3 Snooze Function

When an alarm is active, press the large **Snooze/Light** button (typically on the top or front, refer to Figure 2) to temporarily silence the alarm for approximately 9 minutes. The alarm will reactivate after this period.

5.4 Stopping the Alarm

To stop an active alarm, press any button other than the **Snooze/Light** button. The alarm will then reset for the next scheduled activation.

5.5 Adjusting Vibration Intensity

The alarm clock offers three levels of vibration intensity: Low, Middle, and High.

1. While the alarm is not active, press the **Vibration** button (refer to Figure 2).
2. Each press will cycle through the intensity levels. The display may indicate the current level.

3-Levels Vibration Adjustable

Personalize your wake-up experience for ultimate comfort.



LOW



MIDDLE



HIGH



Figure 5: Illustration of the three vibration intensity levels: Low, Middle, and High.

5.6 Display Brightness

Press the **Light** button (often combined with Snooze, refer to Figure 2) to cycle through different display brightness levels.

6. MAINTENANCE

- Clean the device with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals.
- Do not expose the device to extreme temperatures, direct sunlight, or excessive moisture.
- Ensure the charging port remains free of dust and debris to maintain proper connection.

- When storing the device for extended periods, keep it in a cool, dry environment.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock does not turn on.	Battery is depleted.	Connect the device to a power source using the USB cable and allow it to charge fully.
Alarm does not sound or vibrate.	Alarm is not activated or set incorrectly.	Verify that the alarm time is set correctly and the desired alarm mode (Vibration, Buzzer, or both) is selected and activated (alarm icon visible on display).
Display is dim or unreadable.	Brightness level is set too low.	Press the Light button to increase the display brightness.
Buttons are unresponsive.	Temporary software glitch.	Try restarting the device by holding the Power button for 3 seconds. If the issue persists, allow the battery to fully deplete and then recharge.

8. SPECIFICATIONS

- **Model:** CR1027
- **Brand:** Mesqool
- **Display Type:** LED
- **Power Source:** Battery Powered (Rechargeable)
- **Battery Capacity:** 3000mAh
- **Product Dimensions:** Approximately 3.35"W x 3.35"H x 1.06"D
- **Item Weight:** 7.4 ounces
- **Special Features:** Adjustable Volume, Dual Alarms, Snooze Function, Vibration Alarm

9. WARRANTY AND SUPPORT

Mesqool products are manufactured to high standards. For warranty information, technical assistance, or customer support, please refer to the contact details provided on the product packaging or visit the official Mesqool website. Please retain your purchase receipt as proof of purchase for warranty claims.

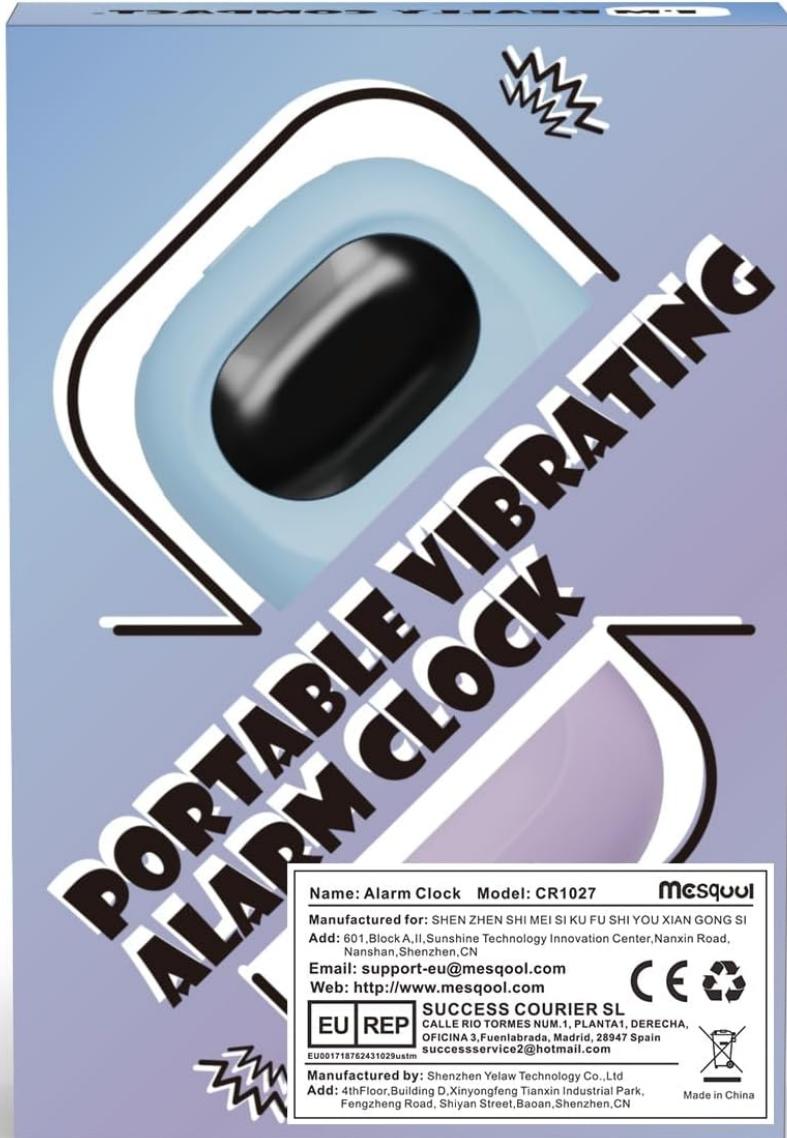
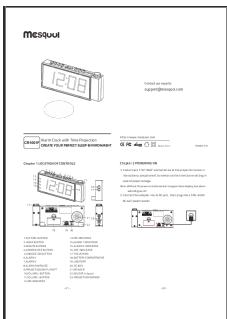


Figure 6: Product packaging, which typically includes manufacturer details and support contact information such as email (e.g., support-eu@mesqool.com) and website (e.g., http://www.mesqool.com).

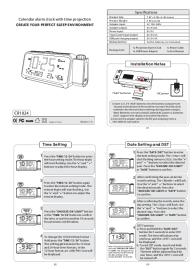
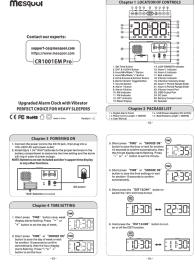
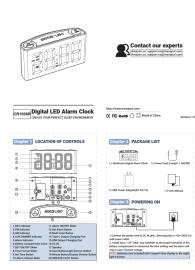
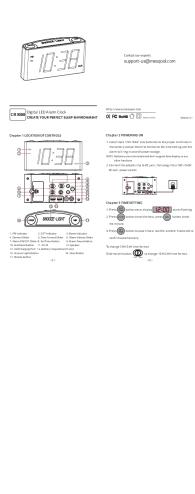
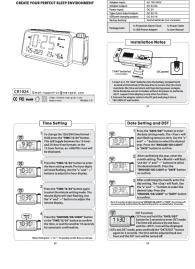
© 2025 Mesqool. All rights reserved.
 This manual is subject to change without prior notice.

Related Documents - CR1027



[Mesqool CR1001F Projection Alarm Clock User Manual](#)

User manual for the Mesqool CR1001F Projection Alarm Clock, detailing its features, controls, time setting, alarm setting, projection mode, dimmer, DST, and USB charging.

	<p>CR1024 Projection Alarm Clock User Manual</p> <p>User manual for the CR1024 Projection Alarm Clock, detailing setup, time and date settings, alarm functions, projection features, brightness control, temperature/humidity display, and device charging capabilities.</p>
	<p>Mesqool CR1001EM Pro Alarm Clock User Manual</p> <p>User manual for the Mesqool CR1001EM Pro alarm clock, detailing setup, time setting, alarm configuration, dimmer, USB charging, and troubleshooting.</p>
	<p>Mesqool CR1008R Digital LED Alarm Clock User Manual</p> <p>Comprehensive user manual for the Mesqool CR1008R Digital LED Alarm Clock. Learn about its features, controls, time setting, alarm functions, night light, RGB display modes, device charging, and warranty information.</p>
	<p>Mesqool CR1008 Digital LED Alarm Clock User Manual</p> <p>Comprehensive user manual for the Mesqool CR1008 Digital LED Alarm Clock, covering setup, features, operation, and warranty information.</p>
	<p>Mesqool CR1024 Projection Alarm Clock User Manual</p> <p>User guide for the Mesqool CR1024 Projection Alarm Clock, detailing time setting, date setting, DST function, alarm settings, brightness control, temperature/humidity display, night light, projection mode, and device charging.</p>