

[Manuals.plus](#) /

> [YOSUDA](#) /

> YOSUDA YSD-EW-01 Walking Pad with Auto Incline User Manual

YOSUDA YSD-EW-01

YOSUDA YSD-EW-01 Walking Pad with Auto Incline User Manual

Model: YSD-EW-01

1. INTRODUCTION

Thank you for choosing the YOSUDA YSD-EW-01 Walking Pad with Auto Incline. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your new fitness equipment. Please read this manual thoroughly before operating the walking pad and retain it for future reference.

2. SAFETY INFORMATION

To reduce the risk of serious injury, read all important precautions and instructions in this manual and on your walking pad before use. YOSUDA assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

- Always place the walking pad on a level, stable surface.
- Ensure adequate clear space around the walking pad (at least 2 feet on all sides).
- Keep children and pets away from the walking pad during operation.
- Do not operate the walking pad if it is damaged or malfunctioning.
- Wear appropriate athletic footwear during use.
- Consult a physician before starting any exercise program.
- Do not exceed the maximum user weight capacity of 350 LBS (158 kg).
- Always adjust the incline to the 0% level when you finish your workout or before storing the unit.
- Use only the provided remote control for operation.
- Disconnect the power cord when not in use or before cleaning/maintenance.

3. PRODUCT OVERVIEW

The YOSUDA YSD-EW-01 Walking Pad is designed for home use, offering a convenient way to incorporate walking into your daily routine. Key features include an automatic incline system, a powerful yet quiet motor, and a robust design.

3.1 Components

- Walking Pad Unit
- Remote Control
- Power Cord
- User Manual (this document)

3.2 Key Features

- **Auto Incline:** Adjust incline levels up to 9% automatically via remote control.
- **Powerful Motor:** Equipped with a 2.5 HP motor for smooth and quiet operation.
- **Robust Construction:** Supports users up to 350 LBS with a durable alloy steel frame and a 6-layer running belt.
- **Large LED Display:** Provides clear visibility of workout data.
- **Compact Design:** Easy to store under desks or beds with integrated wheels.
- **Workout Pause:** Allows pausing and resuming your session without losing progress.



Figure 1: YOSUDA YSD-EW-01 Walking Pad. This image shows the overall design of the walking pad with a user exercising, highlighting

its compact form factor and integrated display.

Remote Control Automatic Up & Down

No need to Pause, Seamlessly Switch Exercise Intensity

The image shows a woman in athletic wear walking on a black Yosuda treadmill. The treadmill is positioned on a blue platform that is tilted upwards, with the text "Auto Up & Down" written on it. The background is a dark, futuristic space with blue neon light beams. A circular inset in the upper right shows a hand holding a black remote control with a "Click to Incline" label and a checkmark icon. A large "VS" symbol with a lightning bolt is placed between the remote control inset and a lower circular inset. The lower inset shows a hand manually adjusting the treadmill's incline lever, marked with an "X" icon and the word "Manual".

Click to Incline

VS

Manual

YOSUDA

Auto Up & Down

Figure 2: Remote Control Functionality. This image illustrates the convenience of adjusting the walking pad's incline automatically using the remote control, eliminating the need for manual adjustments.

9% Incline Helps Burn Fat

0-9% Slope 3-Level Adjustable Incline



Figure 3: Incline Levels. This graphic demonstrates the three adjustable incline levels (0-3% for flat road, 4-6% for climbing, 7-9% for mountaineering) available on the walking pad to vary workout intensity.

300LBS Weight Capacity

Low-impact and Joint Friendly



Low-impact on Joints



6-layer Running Belt

300LBS

Figure 4: Robust Design. This image highlights the walking pad's 350 LBS weight capacity and the 6-layer running belt, designed for durability and joint protection.

Innovation Quiet Treadmills

No Interruptions, Even During Meetings

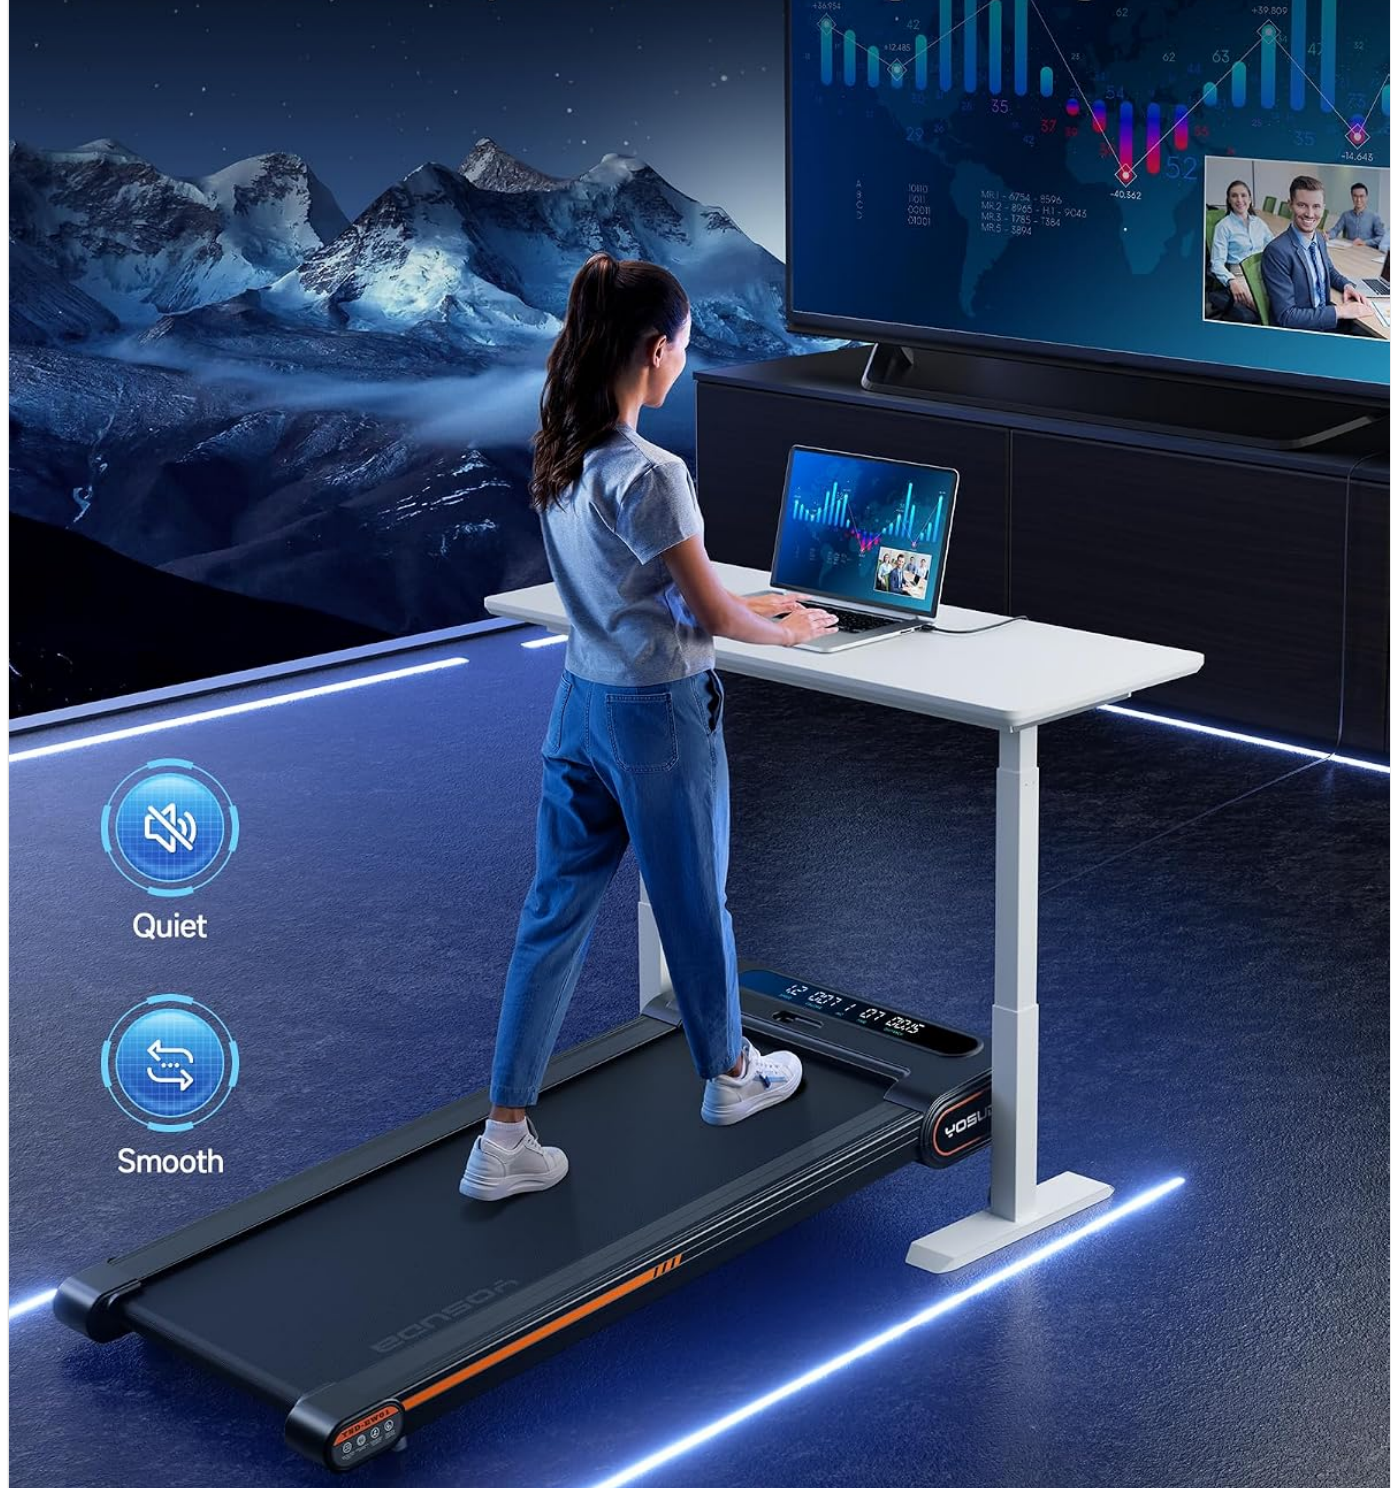


Figure 5: Large LED Display. This image shows the integrated large LED display, providing clear and easy-to-read fitness data during your workout.

Superior **Powerful** Motor

Smooth, Efficient, More durable



Noise Level
<45DB



Speed Range
0.6-4MPH

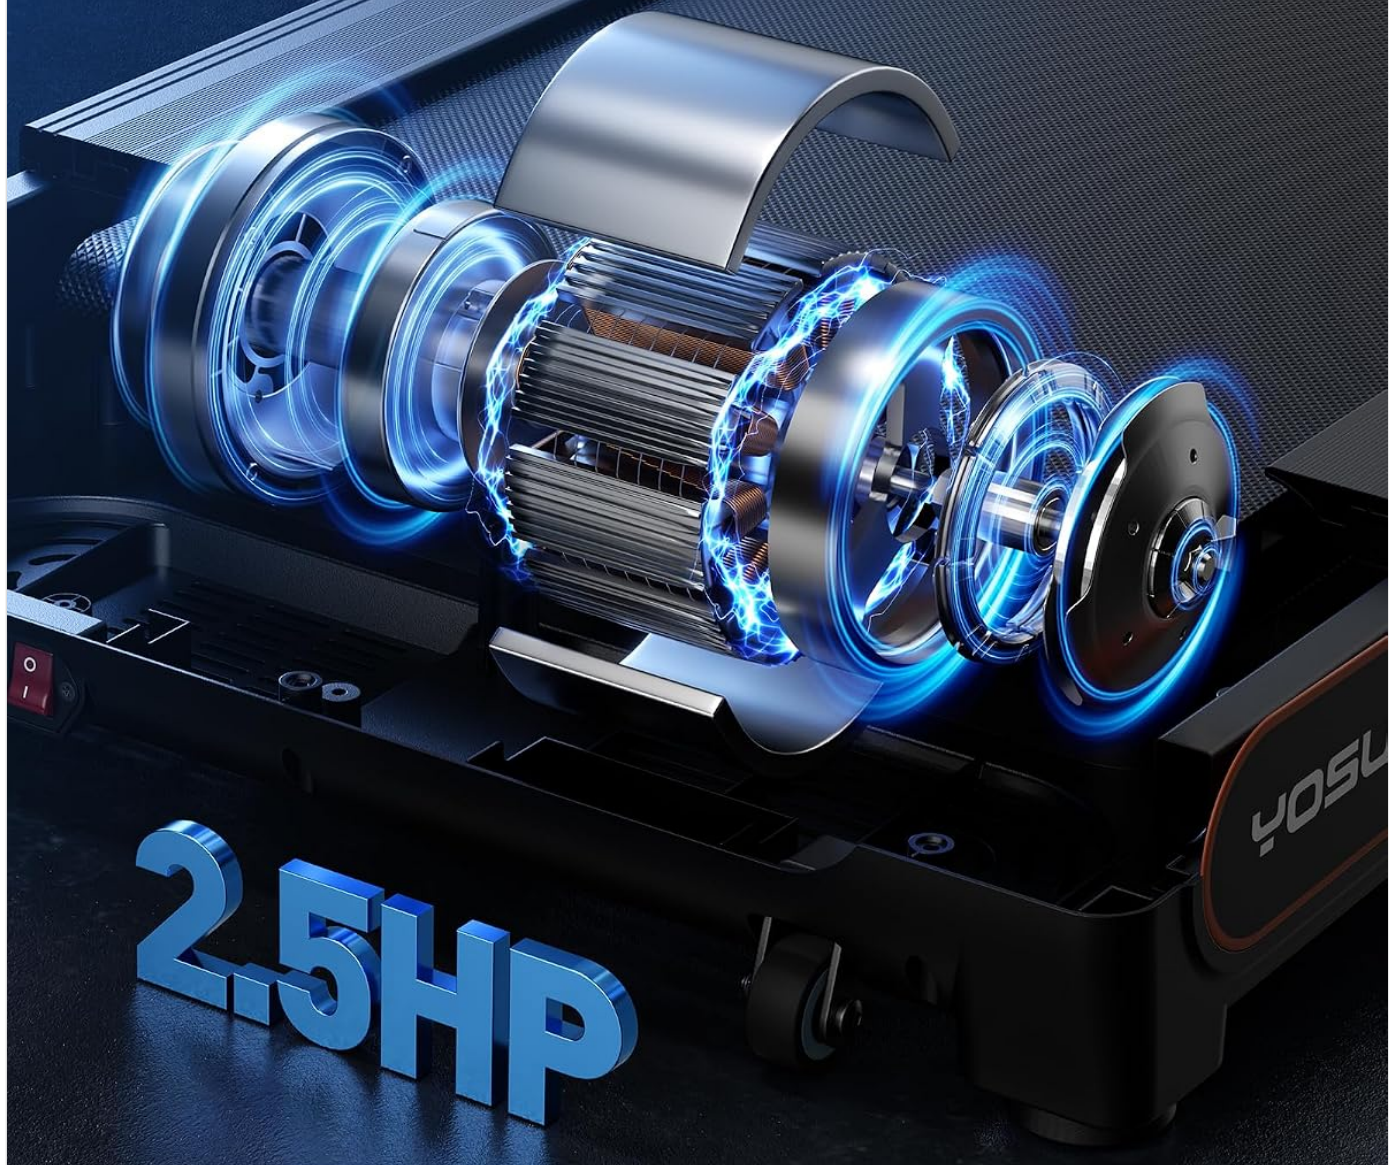


Figure 6: Powerful and Quiet Motor. A cutaway view illustrating the 2.5 HP motor, emphasizing its smooth and quiet operation suitable for various environments.

Compact, Easy to Store

Super Easy to Move with Wheels



Figure 7: Easy Storage. This image demonstrates how the walking pad can be easily moved and stored under furniture like a bed or desk, thanks to its compact design and integrated wheels.

4. SETUP

The YOSUDA YSD-EW-01 Walking Pad requires no assembly. Follow these steps for initial setup:

1. **Unpack:** Carefully remove the walking pad from its packaging.

2. **Placement:** Place the walking pad on a firm, level surface. Ensure there is at least 2 feet of clear space around the unit.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet.
4. **Power On:** Locate the main power switch (usually at the front or rear of the unit) and turn it to the "ON" position. The LED display should illuminate.

5. OPERATING INSTRUCTIONS

The walking pad is operated using the included remote control. Familiarize yourself with the remote's buttons before starting your workout.

5.1 Remote Control Functions

- **Start/Stop:** Press to start or stop the walking belt.
- **Speed +/-:** Adjust the walking speed. The maximum speed is 4 MPH.
- **Incline +/-:** Adjust the incline level. The walking pad features 3-stage auto incline up to 9%.
- **Mode:** Cycle through display modes (e.g., time, distance, calories).

5.2 Starting a Workout

1. Step onto the walking pad.
2. Press the "Start" button on the remote control. The belt will begin moving at a low speed.
3. Use the "Speed +" button to increase the speed to your desired level.
4. Use the "Incline +" or "Incline -" buttons to adjust the incline as needed.

5.3 Pausing and Ending a Workout

- **To Pause:** Press the "Stop" button once. The walking pad will pause, retaining your current workout data.
- **To Resume:** Press the "Start" button. The walking pad will resume at the previous speed and incline.
- **To End:** Press and hold the "Stop" button, or press it twice. The walking pad will come to a complete stop, and workout data will reset to zero once the unit is powered off.
- **Important:** Always adjust the incline to 0% before stepping off the walking pad or powering it off.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your walking pad.

- **Cleaning:** Wipe down the walking pad with a damp cloth after each use. Do not use abrasive cleaners or solvents.
- **Belt Lubrication:** The walking belt may require lubrication periodically. Refer to the specific instructions provided with your lubrication kit (if included) or contact customer support for guidance.
- **Belt Adjustment:** If the walking belt becomes misaligned or too loose/tight, refer to the troubleshooting section or contact customer support for adjustment procedures.
- **Storage:** When not in use, store the walking pad in a dry, cool place. Ensure the incline is set to 0% before storage.

7. TROUBLESHOOTING

If you encounter any issues with your YOSUDA YSD-EW-01 Walking Pad, please refer to the following common

solutions:

Problem	Possible Cause	Solution
Walking pad does not power on.	Power cord not plugged in; main power switch off; circuit breaker tripped.	Check power cord connection; ensure main power switch is ON; reset circuit breaker.
Walking belt does not move.	"Stop" button pressed; safety key not engaged (if applicable); motor issue.	Press "Start" on remote; ensure safety key is in place (if applicable); contact customer support.
Remote control not responding.	Low battery in remote; remote out of range; interference.	Replace remote batteries; ensure remote is pointed at the walking pad's receiver; reduce interference.
Unusual noise during operation.	Loose components; belt misalignment; motor issue.	Inspect for loose parts and tighten; check belt alignment; contact customer support if noise persists.

If the problem persists after attempting these solutions, please contact YOSUDA customer support.

8. SPECIFICATIONS

Feature	Detail
Model Name	YSD-EW-01
Brand	YOSUDA
Motor Horsepower	2.5 HP
Maximum Speed	4 Miles per Hour (approx. 6.4 km/h)
Maximum Incline	9% (3-stage auto incline)
Maximum Weight Capacity	350 LBS (approx. 158 kg)
Running Belt Dimensions	42.5" L x 16.9" W (approx. 108 cm L x 43 cm W)
Product Dimensions (LxWxH)	130.6 x 60.5 x 15.5 Centimeters
Item Weight	25.31 kg (approx. 55.8 LBS)
Material	Alloy Steel, Acrylonitrile Butadiene Styrene (ABS)
Assembly Required	No
Included Components	Remote Control

9. WARRANTY AND SUPPORT

YOSUDA is committed to customer satisfaction. Your YSD-EW-01 Walking Pad comes with the following support:

- **Returns:** One-month return policy.
- **Replacement Parts:** Free replacement parts for two years from the date of purchase.
- **Customer Support:** 24/7 support available for any inquiries or assistance.

For warranty claims, technical assistance, or general inquiries, please contact YOSUDA customer service through the contact information provided at the point of purchase or on the official YOSUDA website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question