

TRAILVIBER B0D6BGNWTC

TRAILVIBER Walking Pad Treadmill User Manual

Model: B0D6BGNWTC

1. INTRODUCTION

Thank you for choosing the TRAILVIBER Walking Pad Treadmill. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new fitness equipment. Please read this manual thoroughly before initial use and retain it for future reference.

Important Safety Information

- Always consult with a physician before starting any new exercise program.
- Ensure the treadmill is placed on a flat, stable surface with adequate clear space around it.
- Keep children and pets away from the treadmill during operation.
- Do not operate the treadmill if it is damaged or malfunctioning.
- Wear appropriate athletic footwear during use.
- Always use the emergency stop feature if you feel unwell or lose balance.

2. PRODUCT OVERVIEW

The TRAILVIBER Walking Pad Treadmill is designed for compact home and office use, featuring an automatic incline system and a powerful yet quiet motor. Its slim design allows for easy storage.



Figure 2.1: TRAILVIBER Walking Pad Treadmill in walking mode and under a standing desk.

This image illustrates the primary use cases for the TRAILVIBER Walking Pad Treadmill, demonstrating its versatility for both active walking and integration with a standing desk setup. The main view shows an individual walking on the treadmill, highlighting its compact design. An inset image displays the treadmill positioned beneath a standing desk, emphasizing its suitability for office environments.

Stable & Safe Structure-Designed



Figure 2.2: Stable and Safe Structure Design with 400+ lbs Capacity.

Figure 2.2 highlights the robust construction of the TRAILVIBER Walking Pad Treadmill, capable of supporting users up to 400 pounds. The image features a heavy kettlebell placed on the treadmill belt, visually demonstrating its high weight capacity. Key dimensions, including the 41-inch length and 16.5-inch width of the walking area, are also indicated, emphasizing the spacious yet compact design.



Figure 2.3: Powerful and Quiet Motor.

This diagram provides an internal view of the TRAILVIBER Walking Pad Treadmill, focusing on its motor. It illustrates the powerful 2.5 HP motor, designed for efficient performance, and highlights its low noise operation, typically under 45 dB, ensuring a quiet workout environment. The diagram also indicates a long service life of over 15,000 hours for the motor.

3. SETUP

3.1 Unpacking

Carefully remove the treadmill from its packaging. Inspect all components for any signs of damage. Retain packaging materials for potential future transport or storage.

3.2 Placement

Place the treadmill on a firm, level surface. Ensure there is at least 2 feet (0.6 meters) of clear space behind the treadmill and 1 foot (0.3 meters) on each side for safe operation and access. Avoid placing the treadmill on thick carpets, which may obstruct ventilation.

3.3 Power Connection

Connect the power cord to the treadmill's power input port, then plug the other end into a grounded electrical outlet. Ensure the power switch (if present) is in the OFF position before plugging in.



Figure 3.1: Easy Movement and Storage.

Figure 3.1 demonstrates the portability and compact storage options for the TRAILVIBER Walking Pad Treadmill. The main image shows a user easily moving the treadmill using its integrated wheels. Inset images illustrate two convenient storage methods: sliding the treadmill flat under a sofa and standing it upright against a wall, highlighting its space-saving design for various home environments.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- To power on, ensure the treadmill is plugged in and flip the main power switch to the ON position. The LED display will illuminate.

- To power off, press the OFF button on the remote control, then flip the main power switch to the OFF position and unplug the unit from the wall outlet.

4.2 Using the Remote Control and LED Display



Figure 4.1: LED Screen and Remote Control.

Figure 4.1 displays the user interface of the TRAILVIBER Walking Pad Treadmill, featuring its large, bright LED screen and the accompanying remote control. The LED screen provides real-time tracking of mileage accumulation, speed, time, and distance. The remote control allows for easy operation, including powering on/off, adjusting speed with '+' and '-' buttons, and controlling the 9-level auto incline. It also features a one-click mute function and an option to turn off the screen.

- **Start/Stop:** Press the **ON** button on the remote to start the treadmill. Press the **OFF** button to stop.
- **Speed Adjustment:** Use the **+** and **-** buttons to increase or decrease the walking speed.
- **Incline Adjustment:** The treadmill features a 9-level auto incline. Use the **M** button or dedicated incline buttons (if present) on the remote to adjust the incline percentage up to 12%.

- **Display Modes:** The LED screen cycles through various data points including speed, distance, time, and calories burned.
- **Mute Function:** Press the mute button on the remote to silence operational sounds.

4.3 Automatic Incline Feature



Figure 4.2: 9-Level 12% Auto Incline.

Figure 4.2 illustrates the TRAILVIBER Walking Pad Treadmill's advanced 9-level automatic incline feature, allowing for an incline up to 12%. This feature simulates hiking, enhancing calorie expenditure as depicted by the graph showing increased calorie burn at higher inclines. The image emphasizes the ability to enjoy varied and challenging workouts from home.

The 9-level auto incline allows you to simulate various terrains, increasing the intensity of your workout and calorie expenditure. Adjust the incline gradually to find a comfortable and challenging level.

4.4 Knee Impact Reduction System

Knees Impact Reduction

Double-Deck Construction & Triple Cushioned Support Design

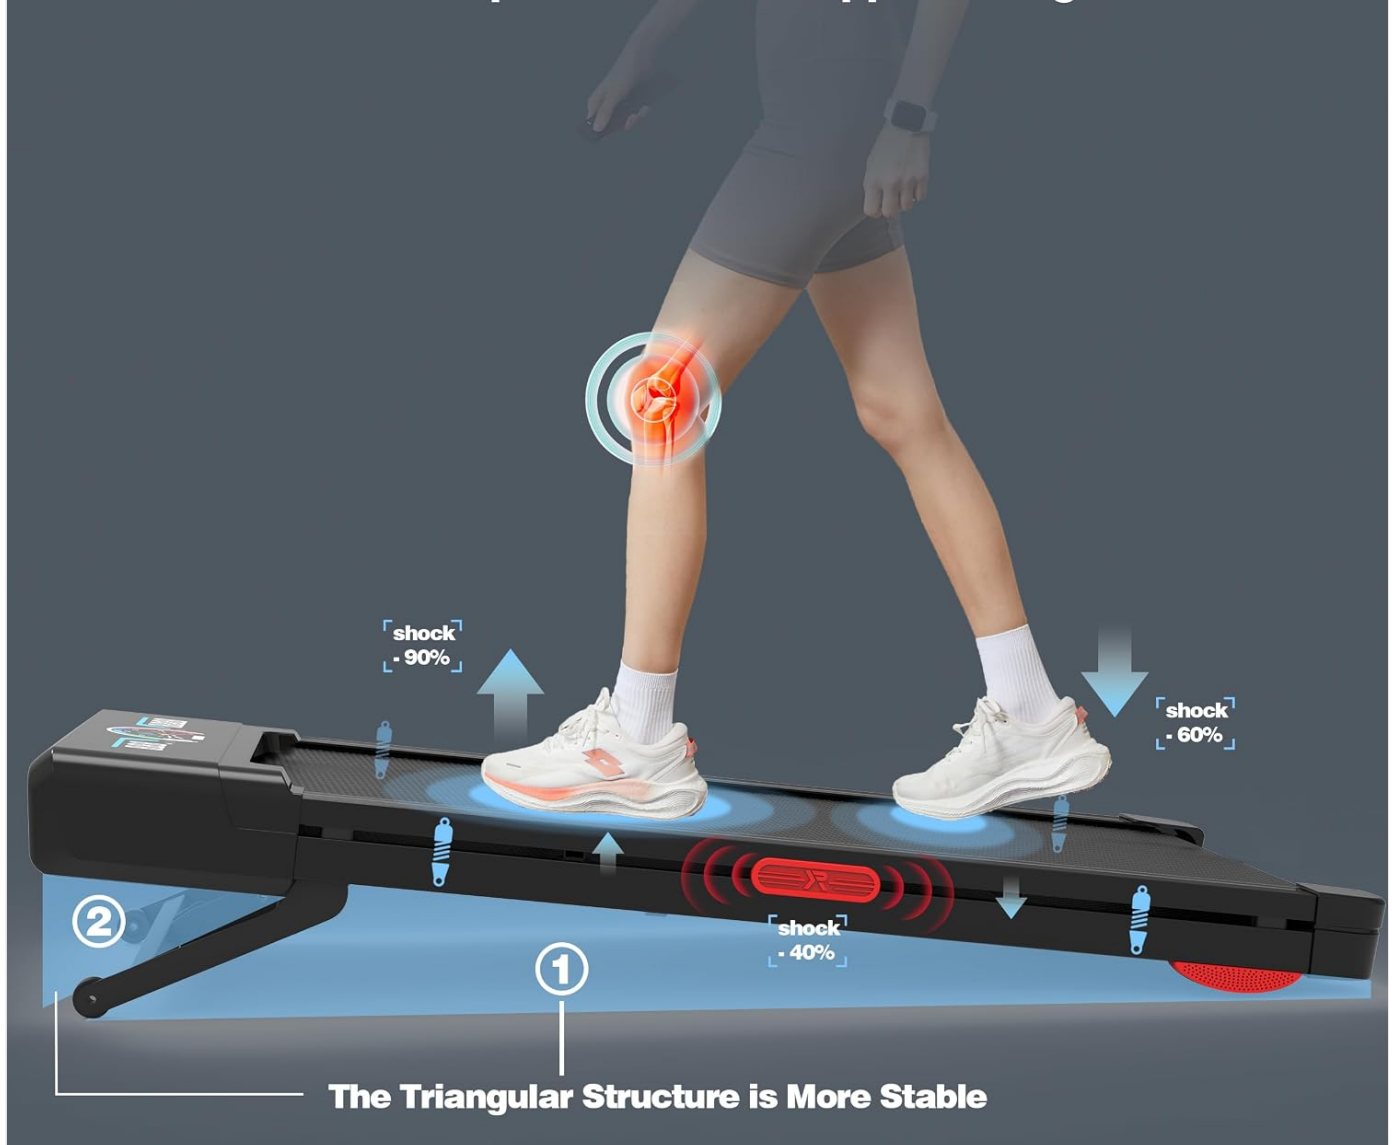


Figure 4.3: Knees Impact Reduction System.

Figure 4.3 details the advanced cushioning system of the TRAILVIBER Walking Pad Treadmill, designed to reduce impact on knees and joints. It highlights the double-deck construction and triple cushioned support, which absorb shock during walking. The diagram visually represents how these features minimize stress, making workouts more comfortable and safer for users.

5. MAINTENANCE

5.1 Cleaning

Regularly wipe down the treadmill with a damp cloth to remove dust and sweat. Do not use abrasive cleaners or solvents. Ensure the treadmill is unplugged before cleaning.

5.2 Belt Lubrication

The walking belt requires periodic lubrication to ensure smooth operation and prolong its lifespan. Refer to the included lubrication instructions or contact customer support for guidance on proper lubrication frequency and type of lubricant.

5.3 Belt Adjustment

If the walking belt begins to slip or drift to one side, it may require adjustment. Consult the detailed instructions in the full product manual or contact customer support for assistance with belt tensioning and centering.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Treadmill does not power on.	Not plugged in; power switch off; circuit breaker tripped.	Ensure power cord is securely plugged in. Check main power switch. Reset household circuit breaker if necessary.
Walking belt slips or hesitates.	Belt too loose; insufficient lubrication.	Adjust belt tension according to maintenance instructions. Lubricate the belt.
Unusual noise during operation.	Loose components; foreign object; motor issue.	Check for loose screws or objects under the belt. If noise persists, discontinue use and contact customer support.
Remote control not responding.	Dead batteries; remote out of range.	Replace remote control batteries. Ensure you are within effective range of the treadmill's receiver.

For issues not listed here, or if solutions do not resolve the problem, please contact TRAILVIBER customer support.

7. SPECIFICATIONS

Brand: TRAILVIBER
Model: B0D6BGNWTC
Product Dimensions: 48"D x 21"W x 4.8"H
Special Feature: Portable, 9-Level Auto Incline
Target Audience: Adult
Maximum Horsepower: 2.5 HP
Maximum Incline Percentage: 12%
Number of Programs: 1 (Manual)
Maximum Weight Recommendation: 400 Pounds
Deck Length: 48 Inches
Input Power: 2.5 Horsepower
UPC: 755097328918

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The TRAILVIBER Walking Pad Treadmill comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship. It does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your TRAILVIBER Walking Pad Treadmill, please

contact TRAILVIBER customer support. Refer to the product packaging or the official TRAILVIBER website for the most current contact information.

Thank you for choosing TRAILVIBER. We wish you a healthy and enjoyable fitness journey!

© 2024 TRAILVIBER. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What does the E6 error code mean on the TRAILVIBER Walking Pad Treadmill?

The provided manual for the TRAILVIBER Walking Pad Treadmill (B0D6BGNWTC) does not explicitly list an "E6" error code in its troubleshooting section. However, on most walking pads and treadmills, an E6 error typically indicates...

[Read full answer](#)