

UREVO SYWP002

UREVO SYWP002 Inclined Walking Pad Treadmill User Manual

Model: SYWP002

1. INTRODUCTION

Thank you for choosing the UREVO SYWP002 Inclined Walking Pad Treadmill. This manual provides essential information for the safe and efficient use of your new fitness equipment. Please read all instructions carefully before assembly and operation. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

WARNING: To reduce the risk of serious injury, read all important precautions and instructions in this manual before using the treadmill.

- Always place the treadmill on a level surface.
- Ensure adequate clearance around the treadmill (at least 2 meters at the rear and 0.6 meters on each side).
- Keep children and pets away from the treadmill during operation.
- Do not operate the treadmill if it has a damaged cord or plug, or if it is not working properly.
- Wear appropriate exercise clothing and athletic shoes. Avoid loose clothing that could get caught.
- Do not step on or off the treadmill while the belt is moving.
- Consult a physician before starting any exercise program.
- The maximum user weight for this treadmill is 120 kg.

3. PRODUCT OVERVIEW

3.1 Key Features

- **Six-Point Shock Absorption System:** Patented system for exceptional comfort and noise reduction, minimizing joint impact.
- **9% Manual Incline:** Simulates uphill walking to strengthen leg and gluteal muscles, enhancing calorie burn.
- **Durable and Reliable Structure:** Tested for over 100,000 cycles and impacts, ensuring motor and frame longevity. Features a 2.5 HP peak power and 550W continuous power motor.
- **Multifunction LED Display:** Clearly shows time, distance, speed, and calories burned.

- **Quiet Motor:** Allows for training without disturbing others.
- **Adjustable Speed:** Range of 1 to 6 KM/H (approximately 0.6 to 3.7 mph) suitable for walking or light jogging.
- **Compact and Easy to Store:** Dimensions of 109 x 50 x 11 cm (42.9 x 19.7 x 4.3 inches) and integrated wheels for easy movement and storage under furniture.
- **App Support:** The treadmill supports connectivity with a dedicated application for tracking data.


3.2 Components Included

- UREVO SYWP002 Walking Pad Treadmill
- Remote Control
- User Manual (this document)

4. SETUP

1. **Unpacking:** Carefully remove the treadmill from its packaging. Retain packaging materials for potential future transport or storage.
2. **Placement:** Place the treadmill on a firm, level surface. Ensure there is ample space around the unit for safe operation and access.
3. **Power Connection:** Connect the power cord to a grounded electrical outlet. Ensure the power switch on the treadmill is in the OFF position before plugging it in.
4. **Remote Control:** Insert batteries into the remote control if not already installed.
5. **Incline Adjustment:** The treadmill features a 9% manual incline. To activate the incline, lift the rear of the treadmill and secure the incline support mechanism into place. Ensure it is firmly locked before use. To return to a flat position, disengage the support and lower the treadmill carefully.

Walking Pad Treadmill for Home Office

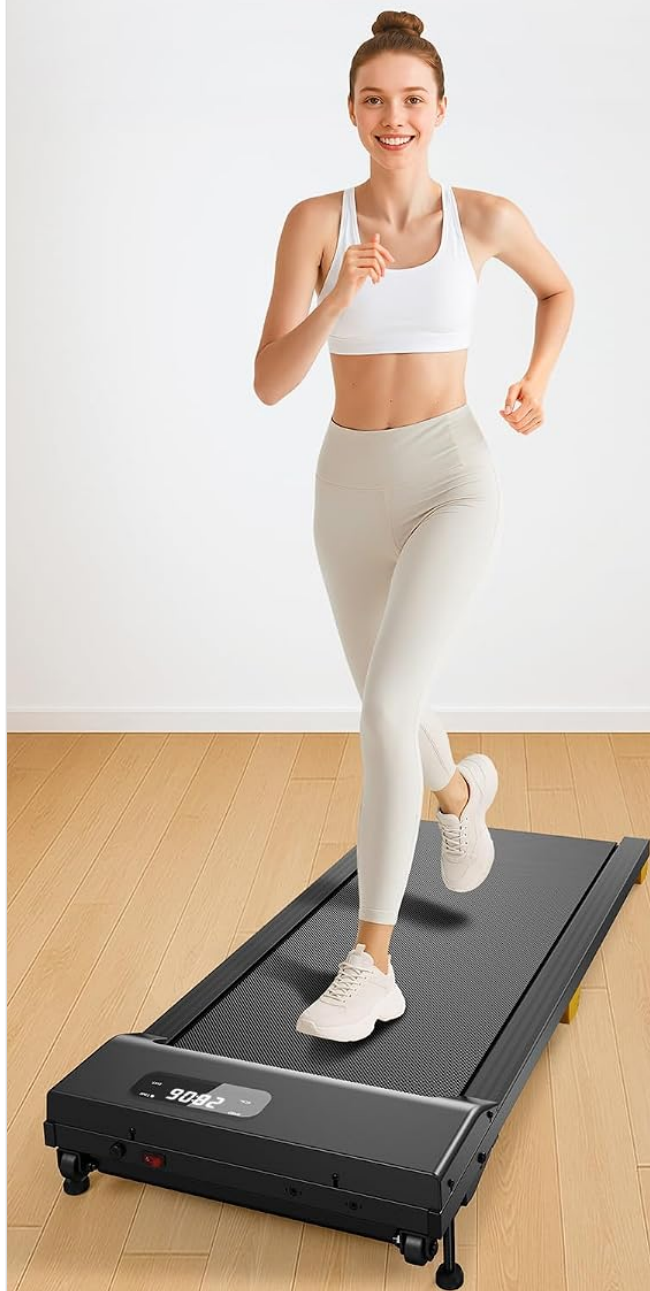

Jogging Mode



Working Mode

Image: UREVO Walking Pad demonstrating the 9% manual incline feature. The treadmill is shown with a user walking on it, highlighting the elevated rear section for incline training.

9% Manual incline For More Fat Burning

9% Incline



Kcal/H



480

0% Incline



Kcal/H



300

9%



Image: Two scenarios showing the UREVO Walking Pad. On the left, a person is jogging, labeled 'Jogging Mode'. On the right, a person is walking while using a laptop at a standing desk, labeled 'Working Mode'. This illustrates its versatility for home and office use.

5. OPERATING INSTRUCTIONS

5.1 Starting the Treadmill

1. Ensure the treadmill is properly plugged in and the power switch is ON.

2. Stand on the side rails of the treadmill, not on the walking belt.
3. Press the 'Start' button on the remote control. The treadmill will begin at a low speed.

5.2 Adjusting Speed

- Use the '+' and '-' buttons on the remote control to increase or decrease the walking belt speed.
- The speed range is 1 to 6 KM/H. Adjust gradually to a comfortable pace.

5.3 Using the LED Display and Remote Control

The integrated LED display shows real-time exercise data. The remote control allows you to manage all functions.

LED Display & Remote Control



Image: Close-up view of the UREVO Walking Pad's LED display and remote control. The display shows '28:06' and icons for Time, Distance, Calorie, and Speed are highlighted, indicating the data tracked. A hand holds the remote control, showing its buttons for power, speed adjustment, and mode selection.

- **Time:** Displays the duration of your workout.
- **Distance:** Shows the distance covered during your session.
- **Speed:** Indicates the current speed of the walking belt.
- **Calories:** Estimates the calories burned during your exercise.

- **Mode Button:** Press to cycle through different display modes or preset programs if available.

5.4 Stopping the Treadmill

To stop the treadmill, press the 'Stop' button on the remote control. The belt will gradually slow down and come to a complete stop.

5.5 App Connectivity

The UREVO SYWP002 supports a dedicated fitness application. Refer to the app's instructions for pairing and tracking your workout data. This feature allows for a more detailed overview of your progress.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your UREVO Walking Pad.

- **Cleaning:** Wipe down the treadmill with a damp cloth after each use to remove sweat and dust. Do not use abrasive cleaners.
- **Belt Lubrication:** The walking belt requires periodic lubrication to reduce friction and wear. Refer to the specific instructions for lubrication frequency and type of lubricant (usually silicone oil).
- **Belt Tension and Alignment:** Check the walking belt tension and alignment regularly. If the belt slips or drifts to one side, adjust it according to the instructions provided in the full manual or contact customer support.
- **Storage:** When not in use, the compact design and integrated wheels allow for easy storage under a bed, sofa, or desk. Ensure the treadmill is powered off and unplugged before moving or storing.

Women-Friendly Design , Easy To Store & Move



Image: A person easily moving and storing the UREVO Walking Pad under a sofa. The image highlights the compact dimensions (H 4.5", W 19.7", L 42.7") and the pulley design for effortless relocation, demonstrating its 'Easy To Store & Move' feature.

7. TROUBLESHOOTING

If you encounter any issues with your UREVO Walking Pad, refer to the following common problems and solutions:

- **Treadmill does not start:**
 - Check if the power cord is securely plugged into a working outlet.


- Ensure the main power switch on the treadmill is in the 'ON' position.
- Verify that the remote control batteries are functional.
- **Unusual noise during operation:**
 - Check for any loose parts or debris on or under the walking belt.
 - The walking belt may require lubrication. Refer to the maintenance section.
 - Ensure the treadmill is on a level surface.
- **Walking belt slips or stops:**
 - The walking belt may be too loose. Adjust the belt tension according to the full manual.
 - The motor may be overloaded. Ensure the user's weight does not exceed 120 kg.
- **Display not working correctly:**
 - Check the power connection.
 - If the issue persists, contact customer support.
- **App connectivity issues:**
 - Ensure Bluetooth is enabled on your device.
 - Make sure the treadmill is powered on and within range.
 - Try restarting both the treadmill and your device.

For problems not listed here, please contact UREVO customer support.


8. SPECIFICATIONS

Specification	Detail
Model Number	SYWP002
Product Dimensions (L x W x H)	114.5 x 56 x 12.7 cm (45.1 x 22 x 5 inches)
Net Weight	21.4 kg (47.2 lbs)
Maximum Load Capacity	120 kg (265 lbs)
Speed Range	1 - 6 KM/H (0.6 - 3.7 mph)
Running Surface	102 x 38 cm (40.2 x 15 inches)
Motor Power	2.5 HP (Peak), 550W (Continuous)
Incline	9% Manual Incline
Display Type	LCD
Frame Material	Alloy Steel
Power Source	Electric
Color	Dark Black

Durabilité, Qualité Supérieure, Fiabilité

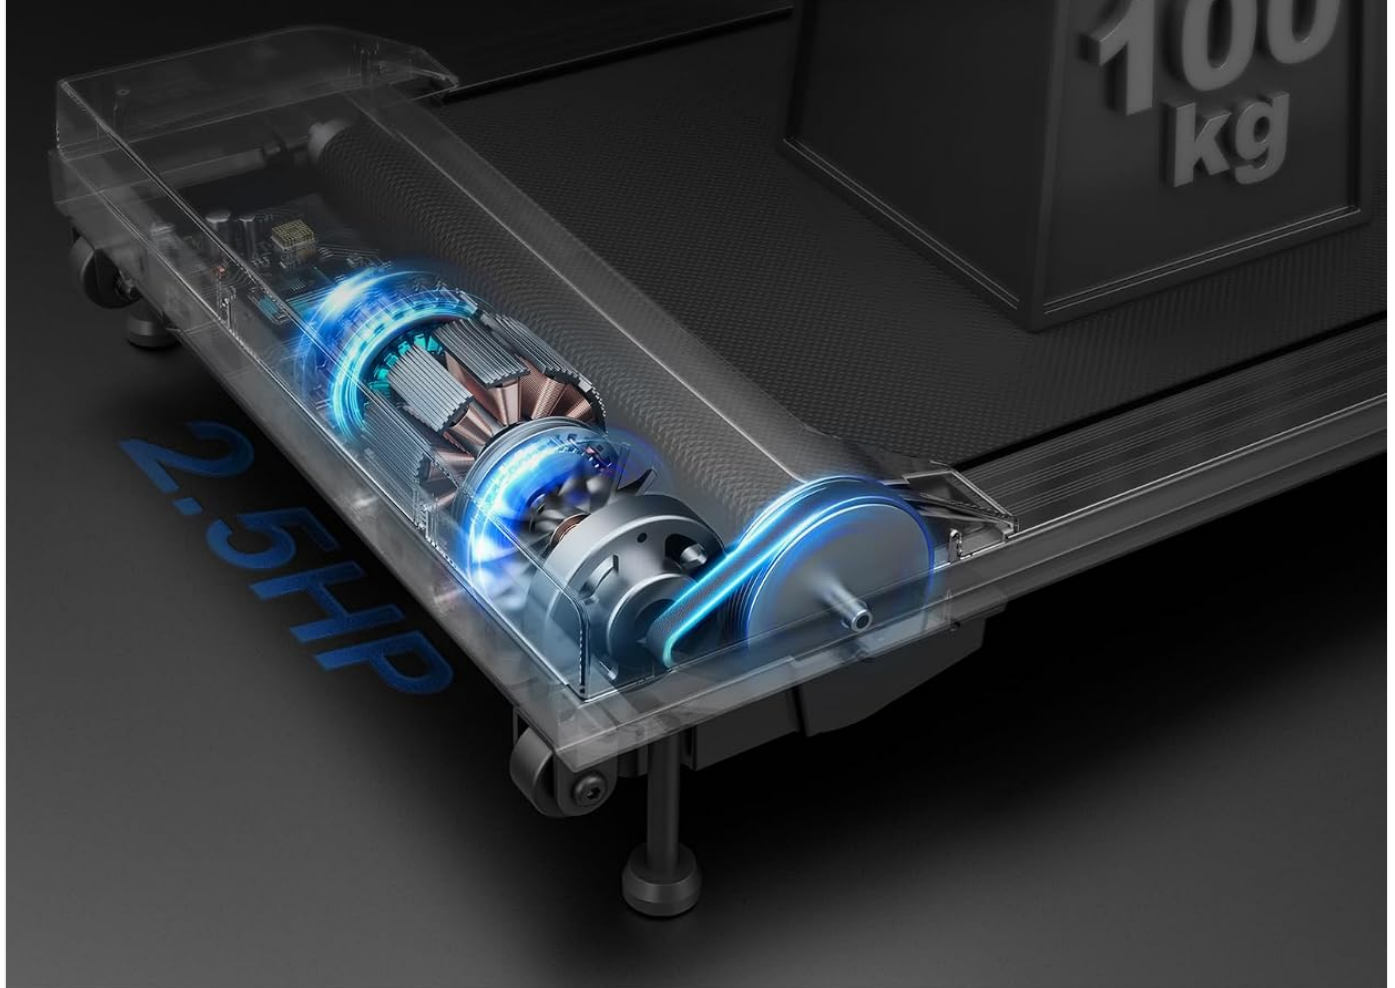

4
Durée de test en
laboratoire de 4
heures (utilisa-
tion uniquement
sur secteur)

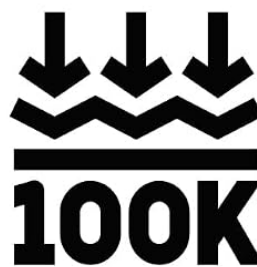

100 000
fois de tests
d'impact à
haute vitesse

Image: Internal view of the UREVO Walking Pad, showcasing the 2.5 HP motor and structural components. Text overlays highlight 'Durability, Superior Quality, Reliability' and indicate '100,000 impact tests' and '4 hours laboratory test duration', emphasizing the product's robust construction.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The UREVO SYWP002 Inclinable Walking Pad Treadmill comes with a **2-year availability of spare parts**. This warranty covers manufacturing defects and ensures access to necessary components for repair.

Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your UREVO Walking Pad, please contact UREVO customer support through the official website or your retailer.
When contacting support, please have your model number (SYWP002) and purchase date available.

© 2025 UREVO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question