

[manuals.plus](#) /

- › [HIFI WALKER](#) /
- › [HIFI WALKER T10 Air Bone Conduction Headphones User Manual](#)

## HIFI WALKER T10 Air

# HIFI WALKER T10 Air Bone Conduction Headphones User Manual

Model: T10 Air

## 1. INTRODUCTION

The HIFI WALKER T10 Air Bone Conduction Headphones offer an open-ear listening experience, transmitting sound through your cheekbones. This design allows you to remain aware of your surroundings while enjoying audio, making them suitable for various activities. Featuring IPX8 waterproofing and a built-in 32GB MP3 player, these headphones are designed for versatility and durability.



*Image: A man smiling while wearing the HIFI WALKER T10 Air headphones, demonstrating their comfortable and discreet fit.*

## 2. WHAT'S IN THE BOX

Upon opening your HIFI WALKER T10 Air package, you should find the following items:


- Bone Conduction Headphones
- Magnetic Charging Cable
- Earplugs
- User Manual



*Image: The HIFI WALKER T10 Air headphones, magnetic charging cable, earplugs, and user manual laid out next to the product box.*

### 3. PRODUCT FEATURES

- **Open-Ear Bone Conduction Technology:** Delivers sound through your cheekbones, leaving your ears open to ambient sounds for increased situational awareness. This design helps reduce ear strain and protects hearing.
- **Built-in 32GB MP3 Player:** Allows for device-free music playback. Store up to 8,000 songs directly on the headphones. Compatible with various music formats and audiobooks.
- **IPX8 Dust & Waterproof Rating:** Fully submersible and resistant to sweat, dust, and moisture, making them suitable for swimming, running, cycling, and other demanding activities.
- **Bluetooth 5.3 Connectivity:** Provides a fast, stable, and efficient wireless connection to compatible devices such as smartphones, tablets, and laptops.
- **Long Battery Life:** Equipped with a 230mAh battery, offering up to 8 hours of music or call time on a single 2-hour charge. Features up to 10 days of standby time.
- **Flexible & Durable Design:** Constructed with a memory titanium alloy for a comfortable and secure fit across various head shapes and sizes.

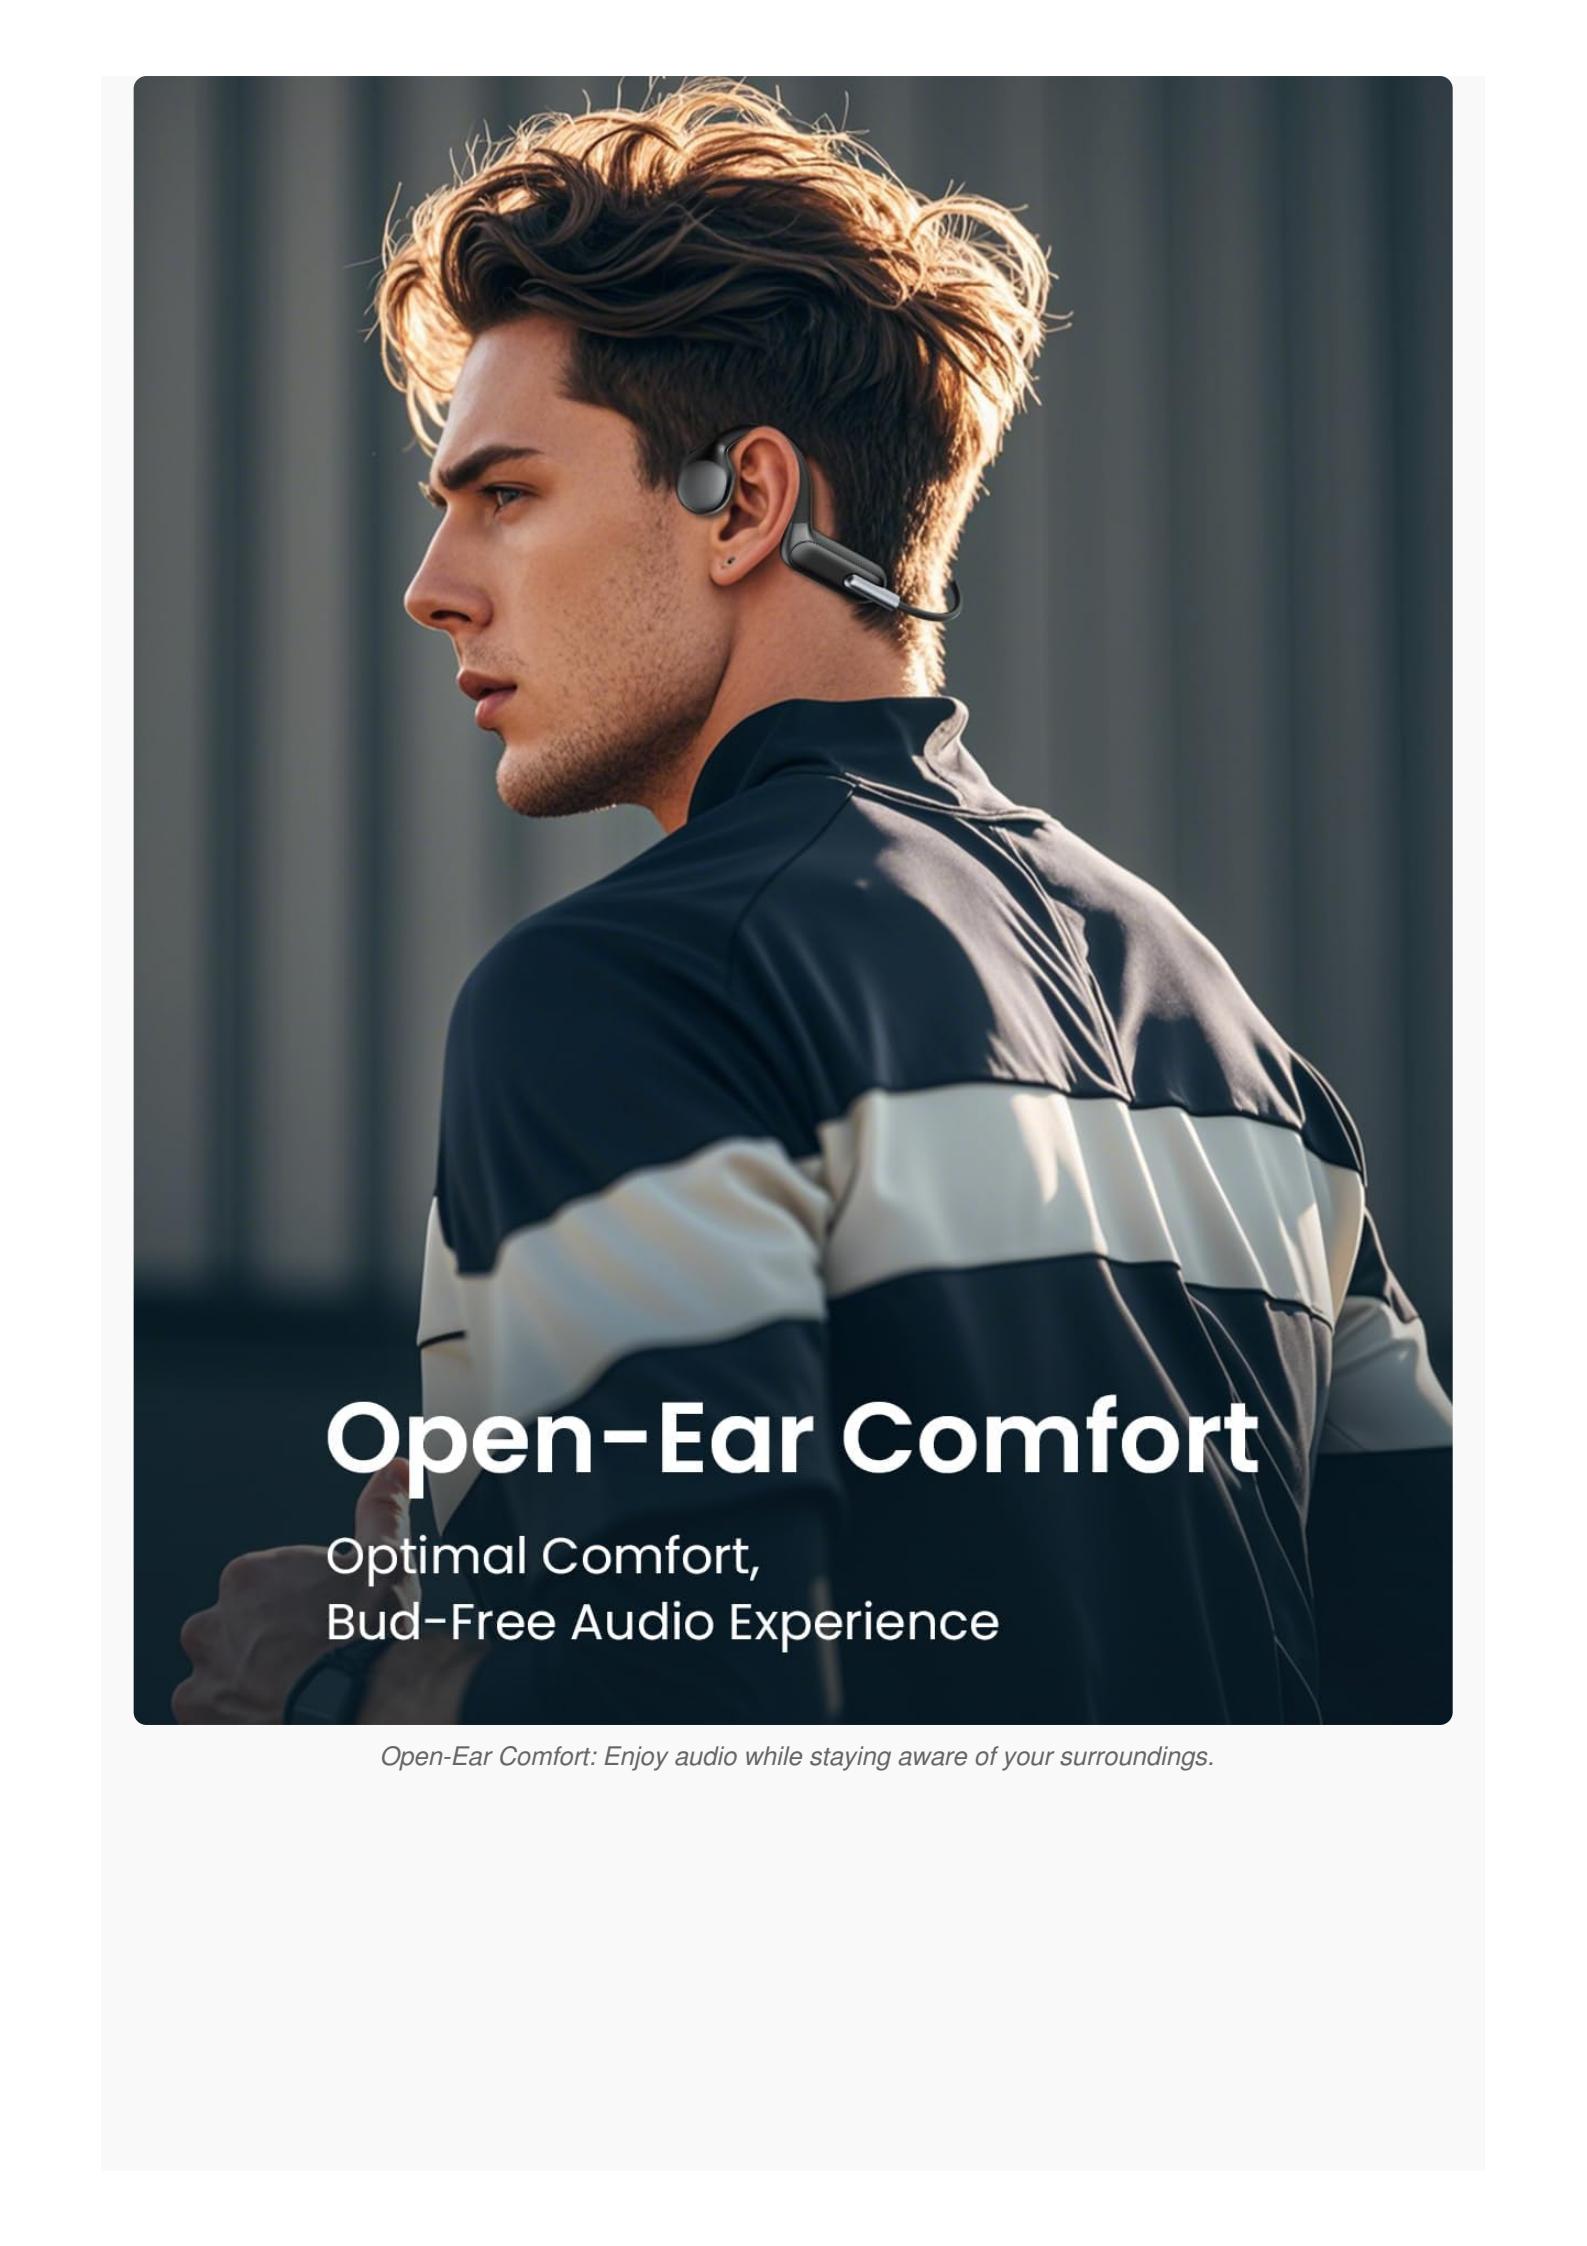A side-profile photograph of a man with light brown hair and a beard, wearing a dark blue and white striped athletic jacket. He is wearing a pair of black open-ear headphones and is jogging, as indicated by the motion blur in the background. The lighting is bright, suggesting sunlight.

# Open-Ear Comfort

Optimal Comfort,  
Bud-Free Audio Experience

*Open-Ear Comfort: Enjoy audio while staying aware of your surroundings.*



# HIFI Sound Quality

High-resolution, immersive surround sound

**16mm**  
Powerful Drivers

Powerful Bass

Hi-Fi  
Sound Quality

*HIFI Sound Quality: High-resolution audio with powerful drivers.*

## 4. SETUP

### 4.1 Initial Charge

Before first use, fully charge your headphones. Connect the magnetic charging cable to the charging port on the headphones and the USB end to a power source (e.g., computer USB port, USB wall adapter). The LED indicator will show charging status.



## 8 Hours of Music & Calls

Enjoy eight continuous hours of music, calls and podcasts with T10 Air

**8**  
hrs  
Playback Time

**2**  
hrs  
Charing Time

*Image: The headphones connected to the magnetic charging cable, illustrating the charging process and battery life.*

### 4.2 Wearing the Headphones

Place the headphones with the transducers resting on your cheekbones, just in front of your ears. The band should rest comfortably behind your head. Adjust for a secure fit.



# IPX8 Waterproof

Clear music, even underwater



Sweatproof



Waterproof



MP3 Player



Bluetooth signals can't reach  
underwater Please switch to MP3 Mode

*Image: A person wearing the HIFI WALKER T10 Air headphones, demonstrating the correct placement for optimal bone conduction audio.*

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Controls

The headphones feature intuitive buttons for controlling playback, volume, and calls. Refer to the diagram below for button functions:

# Key Function Introduction



Image: Close-up of the headphone controls, indicating the multi-function button, volume buttons, and microphone.

- **Power On/Off:** Long press the Multi-function Button for 3 seconds.
- **Play/Pause:** Single click the Multi-function Button.
- **Volume Up:** Single click the Volume Up button.
- **Volume Down:** Single click the Volume Down button.
- **Next Track:** Long press the Volume Up button for 3 seconds.
- **Previous Track:** Long press the Volume Down button for 3 seconds.
- **Answer/Hang Up Call:** Tap the Multi-function Button once.
- **Reject Call:** Press and hold the Multi-function Button for 3 seconds.
- **Voice Assistant:** Press and hold the Multi-function Button for 3 seconds.



*Image: A comprehensive guide to the headphone controls, detailing actions for volume, track selection, calls, and voice assistant.*

## 5.2 Switching Modes (MP3 / Bluetooth)

The headphones support both Bluetooth and MP3 modes. Double-click the Multi-function Button to switch between modes.

# 32 GB Memory



Stores over 8,000 songs



## MP3 & Bluetooth Mode

32GB of playback on the go  
no phone needed



ios



Android



Windows

| **Bluetooth 5.3**

*Image: The headphones displaying their 32GB internal memory and the option to switch between MP3 and Bluetooth modes.*

### 6. MP3 MODE (BUILT-IN 32GB MEMORY)

The built-in 32GB memory allows you to store and play music directly from the headphones without needing a connected device. This is ideal for activities where Bluetooth connectivity might be limited, such as swimming.

#### 6.1 Transferring Music

1. Connect the headphones to your computer using the magnetic charging cable.
2. The headphones will appear as a removable disk drive on your computer.
3. Drag and drop your desired MP3 files into the headphone's storage folder.
4. Safely eject the headphones from your computer before disconnecting.



*Image: A man enjoying music in a swimming pool, highlighting the use of MP3 mode for underwater listening.*

Your browser does not support the video tag.


*Video: Demonstrates the HIFI WALKER T10 Air Bone Conduction Headphones being used for swimming, showcasing their waterproof design and MP3 mode functionality.*

## 7. BLUETOOTH MODE

Connect your headphones wirelessly to your smartphone, tablet, or other Bluetooth-enabled devices for streaming audio and making calls.

### 7.1 Pairing Instructions

1. Ensure the headphones are powered off.
2. Press and hold the Multi-function Button for 5-7 seconds until the LED indicator flashes red and blue, indicating pairing mode.
3. On your device, enable Bluetooth and search for "T10 Air" in the list of available devices.
4. Select "T10 Air" to connect. The LED will turn solid blue once connected.

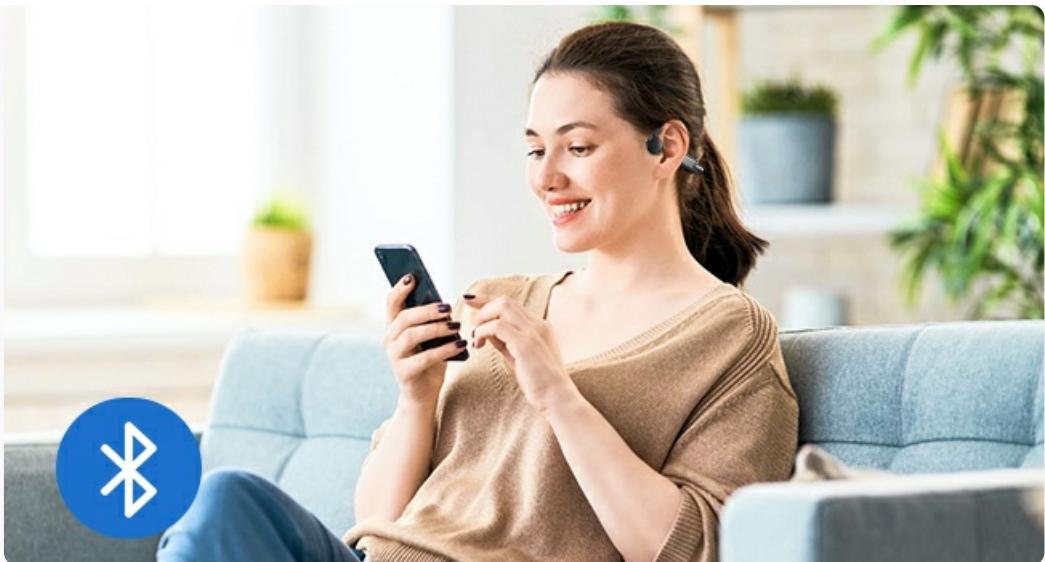

*Image: A woman comfortably using the headphones while connected to her smartphone via Bluetooth.*

Your browser does not support the video tag.

*Video: An animated demonstration of the HIFI WALKER T10 Air headphones, highlighting their open-ear design, premium audio, IPX8 waterproofing, and Bluetooth 5.3 connectivity.*

## 8. WATERPROOF USAGE (IPX8)

The T10 Air headphones are IPX8 rated, meaning they can be submerged in water up to 2 meters deep for up to 30 minutes. They are ideal for swimming and other water sports.

- For best audio quality underwater, switch to MP3 mode as Bluetooth signals do not transmit effectively through water.
- Use the included earplugs to enhance sound clarity and prevent water from entering your ears during swimming.
- After use in water, ensure the charging port is dry before connecting the magnetic charging cable.



*Image: The headphones fully submerged in water, showcasing their robust waterproof capabilities.*

Your browser does not support the video tag.

*Video: Highlights the waterproof features of the HIFI WALKER T10 Air headphones, showing them in various water*

## 9. MAINTENANCE

- Cleaning:** Wipe the headphones with a soft, damp cloth after each use, especially after workouts or exposure to water. Ensure the charging contacts are clean and dry.
- Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- Charging:** Use only the provided magnetic charging cable. Avoid using damaged cables or chargers.
- Water Exposure:** Always ensure the charging port is completely dry before charging after water exposure to prevent damage.

## 10. TROUBLESHOOTING

- No Power:** Ensure the headphones are fully charged. Connect to the charger and check the LED indicator.
- Cannot Pair via Bluetooth:**
  - Ensure the headphones are in pairing mode (flashing red and blue LED).
  - Check that Bluetooth is enabled on your device and it is within range (typically 10 meters).
  - Forget "T10 Air" from your device's Bluetooth list and try pairing again.
- No Sound in MP3 Mode:**
  - Ensure the headphones are switched to MP3 mode.
  - Verify that music files are correctly transferred to the internal 32GB memory.
  - Check the volume level on the headphones.
- Poor Sound Quality Underwater:** This is normal for Bluetooth. Switch to MP3 mode for optimal underwater audio.
- Charging Issues:** Ensure the magnetic charging cable is securely connected and the charging contacts on both the cable and headphones are clean and dry.

## 11. SPECIFICATIONS

Feature	Detail
Model Name	T10 Air
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth 5.3
Audio Driver Type	Bone Conduction Driver
Internal Memory	32GB (for MP3 mode)
Water Resistance Level	IPX8 Waterproof
Battery Life	Up to 8 Hours
Charging Time	Approximately 2 Hours

Standby Time	Up to 10 Days
Control Type	Media Control, Touch
Material	Plastic, Silicone
Item Weight	3.52 ounces (0.1 Kilograms)
Product Dimensions	4.72 x 5.91 x 1.97 inches

## 12. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official HIFI WALKER website or contact their customer service directly. Keep your purchase receipt for warranty claims.

For further assistance, you may visit the [HIFI WALKER Store on Amazon](#).