

HARPPA Toddler Swing Set_001

HARPPA 2-in-1 Toddler Swing Set & Baby Jumper Instruction Manual

Model: Toddler Swing Set_001

1. INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your HARPPA 2-in-1 Toddler Swing Set and Baby Jumper. Please read this manual thoroughly before use and retain it for future reference. This product is designed for children aged 6 months to 5 years, offering both swinging and jumping activities.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in serious injury or death.

- Always supervise children when using the swing set or jumper.
- Ensure all parts are securely fastened before each use. Regularly check for loose components.
- Do not use if any part is damaged or missing. Contact customer support for replacement parts.
- The baby jumper is suitable for children aged 6-18 months, with a maximum load weight of 35 lbs (15.8 kg).
- The toddler swing is suitable for children aged 1-5 years, with a maximum load weight of 88 lbs (40 kg).
- Ensure the product is placed on a flat, stable surface.
- Keep children away from moving parts during adjustment or folding.
- This product is for domestic use only.

SAFETY IS OUR PRIORITY!

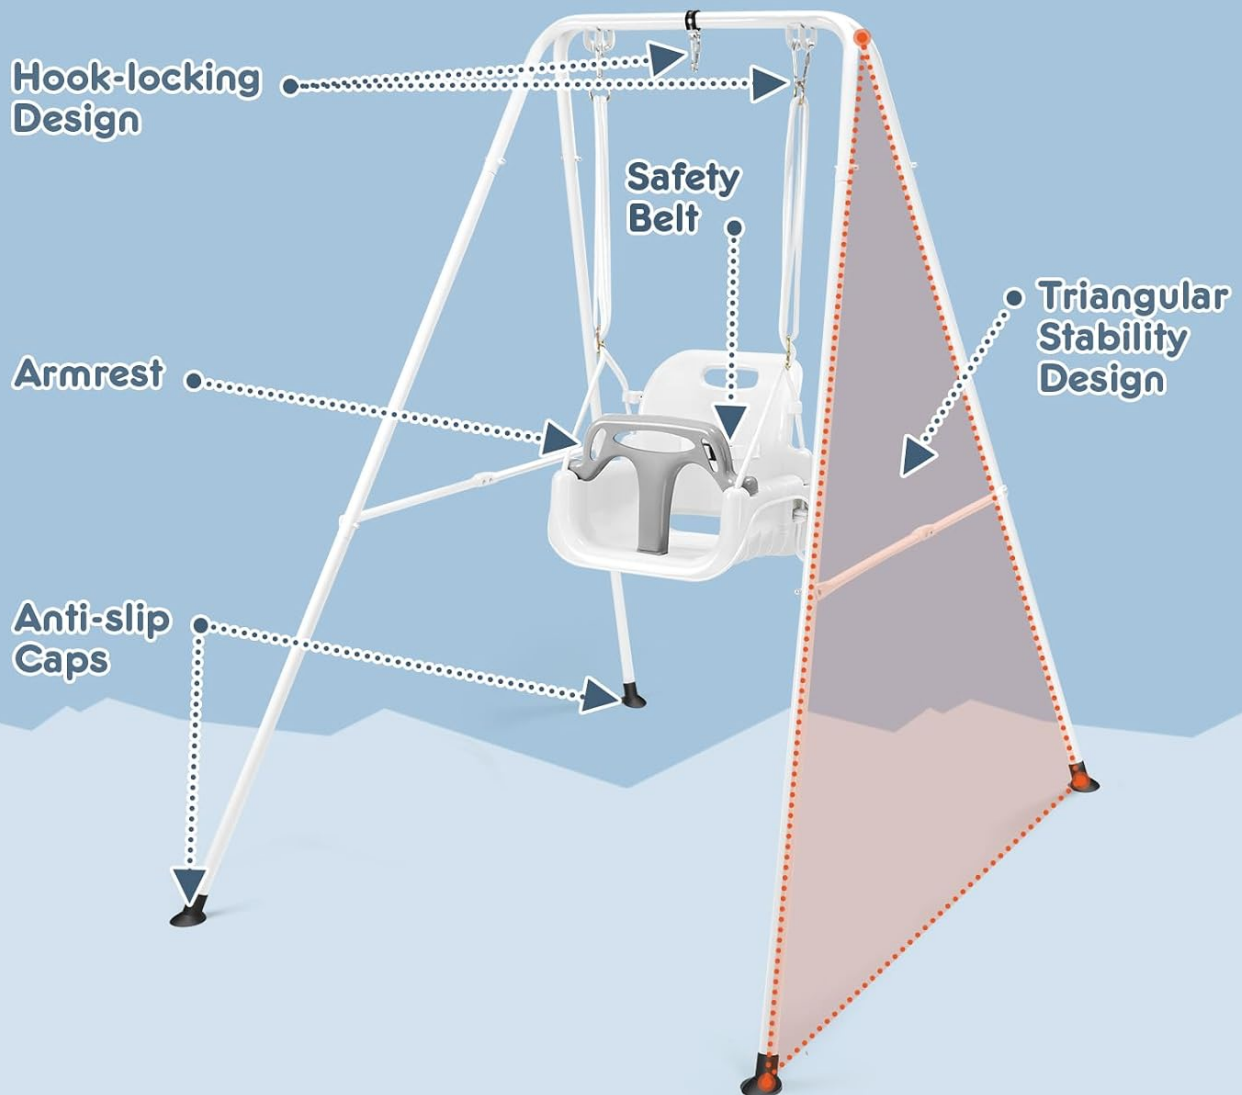


Figure 2.1: Safety Features Overview. This image highlights key safety elements such as the hook-locking mechanism, integrated safety belt, armrests, the triangular stability design of the frame, and anti-slip caps on the feet, all designed to enhance user safety.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. Refer to the product packaging for a detailed list of included parts. Typical components include:

- Main frame components (high carbon steel tubes)
- Swing seat (multi-stage adjustable)
- Baby jumper attachment
- Hanging straps and connectors
- Anti-slip caps for frame feet
- Assembly hardware (screws, bolts, tools if provided)

4. SETUP AND ASSEMBLY

Assembly requires careful attention to detail. It is recommended that two adults perform the assembly.

4.1 Frame Assembly

1. Unpack all components and lay them out on a clean, flat surface.
2. Connect the main frame tubes, ensuring they click securely into place. The frame utilizes a bracket fixation design for stability.
3. Attach the anti-slip caps to the bottom of each frame leg.
4. Ensure the triangular stability design is correctly formed and all connections are tight.

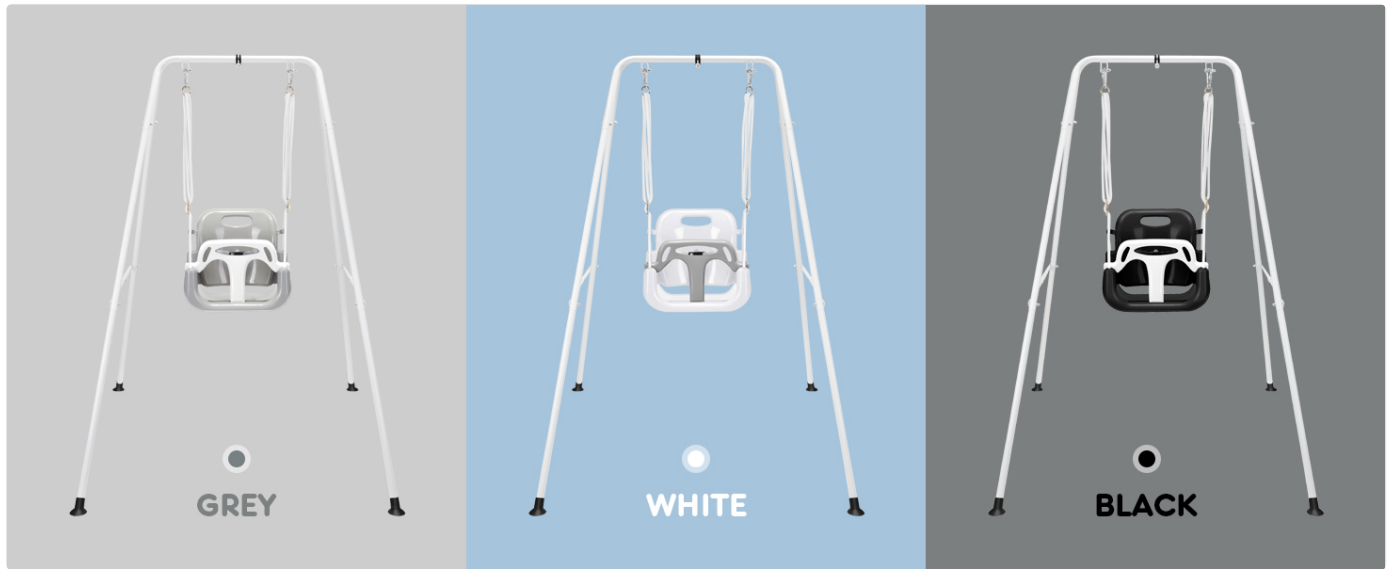


Figure 4.1: Easy Assembly and Storage. This image demonstrates the simple assembly process of the frame and its compact folded state for convenient storage.

4.2 Attaching the Swing Seat

1. Identify the swing seat and its hanging straps.
2. Attach the straps to the designated hooks on the top bar of the frame. Ensure the hook-locking design is engaged.
3. Verify the double cable hanging system is correctly installed for secure support.
4. Adjust the swing seat to the desired height using the adjustable straps.

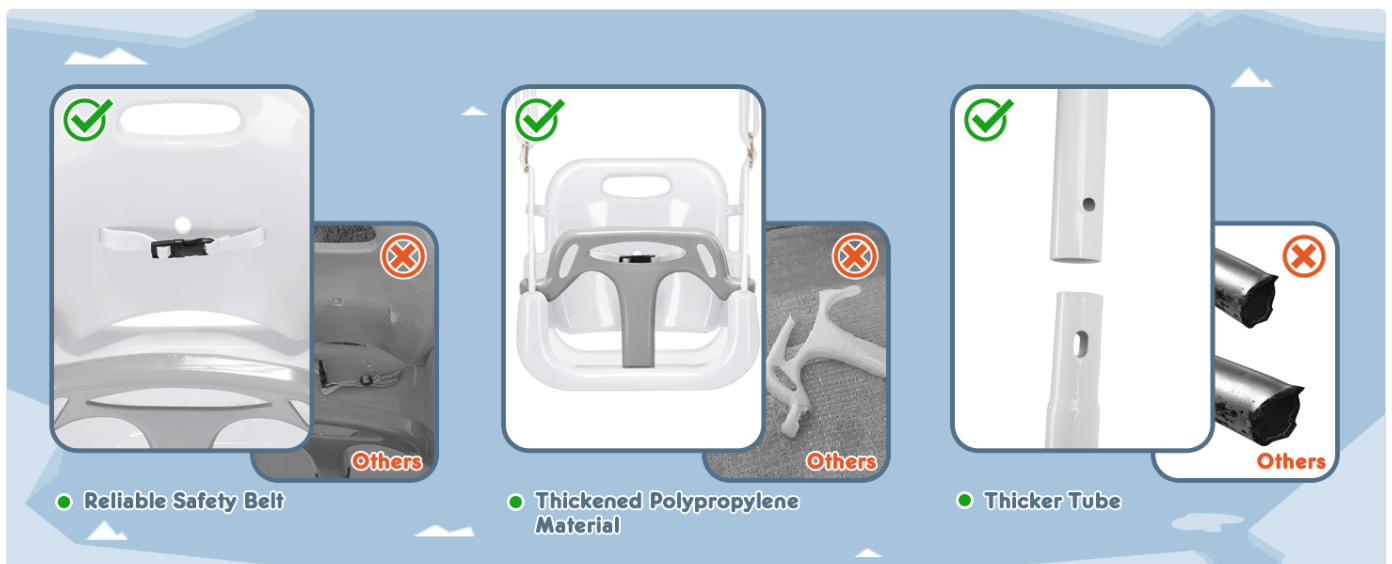


Figure 4.2: Secure Connections for Swing. This image illustrates the reliable latching design, the double cable hanging system, secure screw connections, and the armrest with safety belt protection, all contributing to the swing's safety.

4.3 Attaching the Baby Jumper

1. Remove the swing seat if it is currently attached.
2. Attach the baby jumper harness to the central hanging point on the top bar of the frame. Ensure the powerful spring mechanism is correctly installed.
3. Adjust the jumper's length to ensure the child's feet can comfortably touch the ground while supported.

5. OPERATING INSTRUCTIONS

5.1 Using the Toddler Swing

- **Age Range:** 1 to 5 years.
- **Weight Limit:** Up to 88 lbs (40 kg).
- **Seat Adjustment:** The swing seat is customizable to accommodate different ages.
 - For younger toddlers (1-2 years), use the full seat with front T-bar and back support.
 - For older toddlers (2-4 years), remove the front T-bar.
 - For children aged 4-5 years, the seat can be converted to a simple flat swing seat by removing the back support.
- Always secure the child with the safety belt and ensure the armrest is properly positioned.
- Gently push the swing to initiate motion. Avoid excessive force.

A SWING THAT GROWS WITH YOU!



1~2 Years



2~4 Years



4~5 Years



Swing

Load Weight: Up to 88 lbs

Figure 5.1: Multi-Stage Swing Seat. This image demonstrates how the swing seat adapts for children aged 1-2 years (full support), 2-4 years (without T-bar), and 4-5 years (simple seat), accommodating growth.

5.2 Using the Baby Jumper

- **Age Range:** 6 to 18 months.
- **Weight Limit:** Up to 35 lbs (15.8 kg).
- Place the child securely into the jumper harness, ensuring the safety belt and Velcro provide double protection.
- Adjust the jumper's height so the child's toes can touch the floor, allowing for bouncing motion.
- Encourage gentle bouncing. Do not force the child to jump excessively.

ENDLESS GIGGLES WITH EVERY BOUNCE!



6~18
Months



Adjustable
Height



Exercise Child's
Leg Muscles



Safety Belt & Velcro
for Double Protection



Jumper

Load Weight: Up to 35 lbs

Figure 5.2: Baby Jumper Features. This image highlights the key attributes of the baby jumper, including its recommended age range (6-18 months), adjustable height, contribution to leg muscle development, and the dual safety features of a belt and Velcro closure.

6. MAINTENANCE

6.1 Cleaning

- Wipe down all plastic and metal surfaces with a damp cloth and mild soap.
- Rinse thoroughly and dry completely before storage or next use.
- Do not use abrasive cleaners or solvents.

6.2 Storage

- The HARPPA 2-in-1 Swing Set features a foldable design for convenient storage.
- To fold, follow the reverse steps of assembly for the frame, ensuring all locking mechanisms are disengaged.
- Store in a dry, cool place away from direct sunlight and extreme temperatures.

FOLDABLE FRAME FOR STORAGE

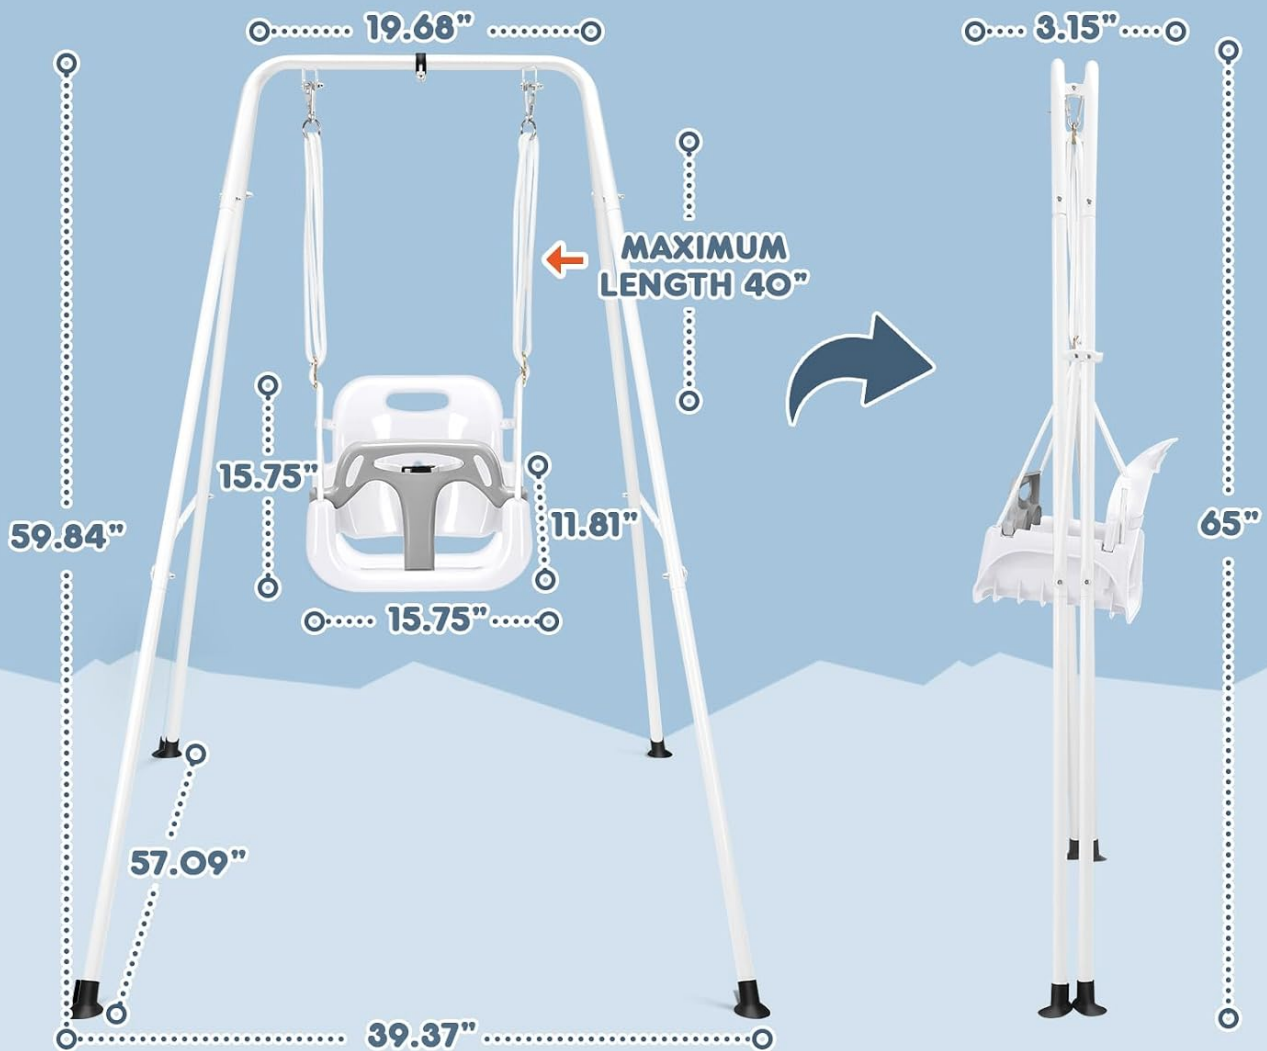


Figure 6.1: Foldable Frame for Storage. This image illustrates the compact dimensions of the swing set when folded, emphasizing its space-saving design for easy storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing/Jumper feels unstable.	Loose connections or uneven surface.	Ensure all frame connections are secure and the product is on a flat, level surface. Check anti-slip caps.
Child not comfortable in jumper.	Incorrect height adjustment or harness fit.	Adjust jumper height so child's toes touch the floor. Ensure safety belt and Velcro are snug but not too tight.
Difficulty folding the frame.	Locking mechanisms not disengaged.	Refer to assembly instructions to ensure all locking pins or buttons are released before attempting to fold.

8. PRODUCT SPECIFICATIONS

Brand:	HARPPA
Model Number:	Toddler Swing Set_001
Product Dimensions (Open):	100D x 145W x 152H Centimetres (39.37D x 57.09W x 59.84H inches)
Item Weight:	7 kg (15.44 lbs)
Material:	High carbon steel (frame), Polypropylene (seat)
Jumper Age Range:	6-18 Months
Jumper Max Load:	35 lbs (15.8 kg)
Swing Age Range:	1-5 Years
Swing Max Load:	88 lbs (40 kg)
UPC:	709688504236

9. WARRANTY AND CUSTOMER SUPPORT

HARPPA products are manufactured to high-quality standards. For warranty information or customer support, please contact your retailer or the manufacturer directly.

Contacting Customer Support:

If you require assistance or have questions regarding your product, please follow these steps:

1. Log in to your Amazon Account.
2. Navigate to "Your Orders".
3. Find the Order ID for your HARPPA 2-in-1 Toddler Swing Set.
4. Click on "Contact Seller" to reach HARPPA customer service.

© 2024 HARPPA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question