

[Manuals.plus](#) /

› [PHILIPS](#) /

› Philips Airfryer 3000 Series 6.5qt User Manual

PHILIPS NA330/00

Philips Airfryer 3000 Series User Manual

Model: NA330/00

1. INTRODUCTION

Welcome to the Philips Airfryer 3000 Series user manual. This appliance is designed to provide a healthier way to cook your favorite meals with up to 90% less fat. Featuring RapidAir Plus Technology, a convenient cooking window, and 16 versatile cooking functions, this airfryer simplifies meal preparation and cleanup.

Please read this manual thoroughly before first use to ensure safe and optimal operation of your new Philips Airfryer.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended household use.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.
- Adequate air circulation is required around the airfryer during operation.

3. PRODUCT OVERVIEW

The Philips Airfryer 3000 Series (Model NA330/00) is designed for efficient and healthy cooking. Key components and features include:

3.1 Components



Figure 1: Philips Airfryer 3000 Series, showing the main unit with its digital display and handle.



HomeID



Figure 2: Product dimensions: 12.75 inches (D) x 17.3 inches (W) x 11.8 inches (H).

- **Main Unit:** Houses the heating element and fan.
- **Digital Touchscreen Display:** For setting time, temperature, and selecting presets.
- **Removable Basket and Pan:** Non-stick and dishwasher safe for easy cleaning.
- **Handle:** For safely pulling out the basket.
- **Cooking Window:** Allows monitoring of food without opening the basket.

3.2 Key Features

- **RapidAir Plus Technology:** Utilizes a unique star-shaped design to circulate hot air with faster airflow, ensuring even cooking and crispy results with up to 90% less fat.



Figure 3: Visual representation of RapidAir Plus Technology circulating hot air.

- **Cooking Window:** A transparent window allows you to monitor the cooking process without interrupting it, preserving heat and ensuring perfect results.



RapidAir Plus Technology

Figure 4: The cooking window provides visibility into the airfryer's interior.

- **6.5qt Capacity:** Generous capacity suitable for family meals, holding up to 35.27oz of vegetables, 8 chicken drumsticks, 5 pieces of salmon, or 7 muffins.

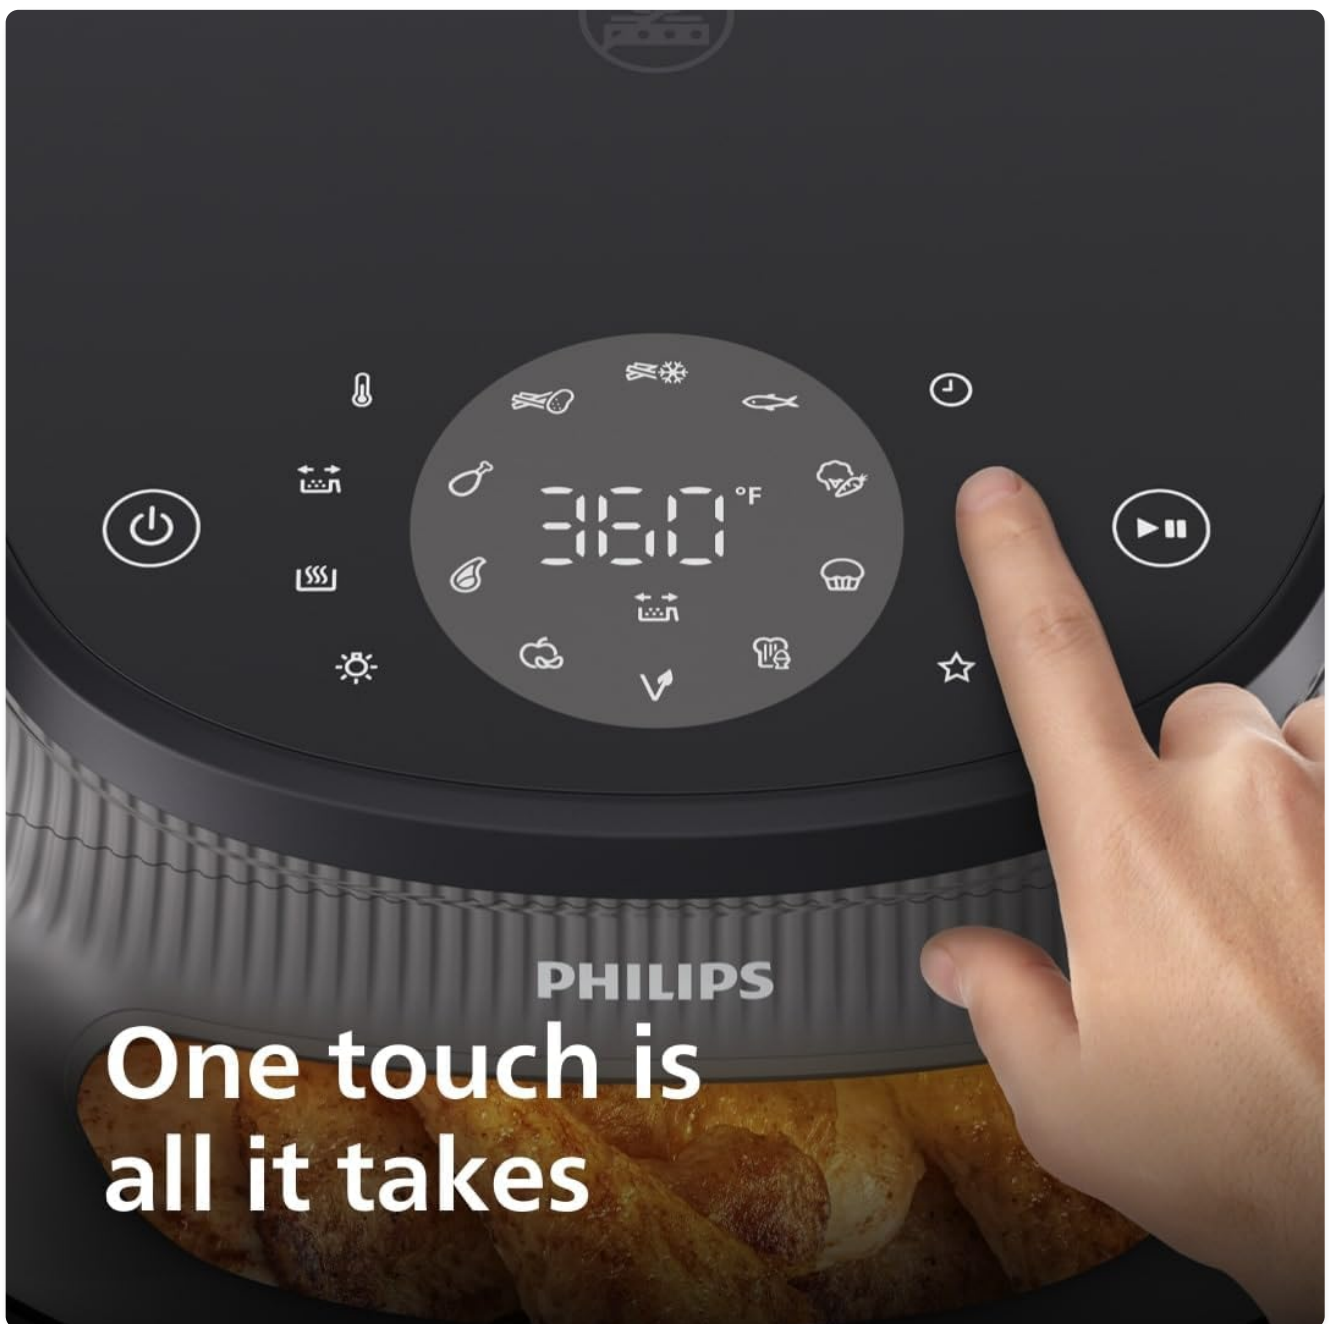


Figure 5: The spacious 6.5-quart basket accommodates various food items.

- **16-in-1 Cooking Functions:** Offers a wide range of cooking possibilities including baking, grilling, roasting, defrosting, reheating, dehydrating, and fermentation.



Figure 6: Examples of meals prepared with the airfryer's diverse functions.

- **Fat Removal:** Designed to drip away up to 40% of excess fat, contributing to healthier meals without compromising flavor.



Figure 7: The fat removal system separates excess fat for healthier cooking.

- **HomeID Recipe App:** Access a wide selection of recipes tailored for your airfryer, providing inspiration and step-by-step guidance.



Figure 8: The HomeID app offers a variety of recipes and cooking tips.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the airfryer.
2. **Clean:** Before first use, thoroughly clean the basket and pan with hot water, dish soap, and a non-abrasive sponge. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the airfryer on a stable, level, and heat-resistant surface, ensuring at least 4 inches (10 cm) of clear space around the back and sides for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.
5. **Pre-heat (Optional):** For optimal results, pre-heat the airfryer for 3-5 minutes before adding food. This can be done by setting the temperature and time, then allowing it to run empty.

5. OPERATING INSTRUCTIONS

The Philips Airfryer 3000 Series features an intuitive touchscreen display for easy operation.

5.1 Basic Operation

1. **Power On:** Press the power button () on the touchscreen to turn on the appliance.
2. **Insert Basket:** Pull out the basket by the handle, place your ingredients inside the basket, and then slide the basket back into the airfryer until it clicks into place. Do not overfill.
3. **Select Cooking Mode:**
 - **Using Presets:** The airfryer offers 12 customizable presets for common foods (e.g., frozen fries, chicken drumsticks, fish, vegetables). Select the desired preset icon on the touchscreen. The airfryer will automatically set the optimal temperature and time.



Figure 9: The touchscreen display with various preset options.

- **Manual Setting:** To manually adjust temperature and time, use the temperature and time adjustment buttons. Temperature can be set from 104°F (40°C) to 392°F (200°C). Cooking time can be set up to 24 hours for low-temperature functions (below 212°F/100°C) and up to 3 hours for higher temperatures.
4. **Start Cooking:** Press the Start/Pause button (▶||) to begin the cooking process.
 5. **Monitoring:** Use the built-in cooking window to observe your food without opening the basket.
 6. **Shake Reminder:** For certain foods, the airfryer may beep halfway through the cooking cycle to remind you to shake or flip the food for even cooking.

7. **Completion:** The airfryer will beep when the cooking cycle is complete. Carefully pull out the basket and remove the cooked food.
8. **Power Off:** Press and hold the power button to turn off the appliance.

5.2 HomeID App Integration

Enhance your cooking experience by downloading the free HomeID App. The app provides:

- Access to over 10,000 recipes tailored for your Philips Airfryer.
- Step-by-step cooking guidance.
- Nutritional information for recipes.
- Ability to save your favorite presets.

The app does not control the airfryer remotely but serves as a comprehensive recipe and guidance tool.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your airfryer.

1. **Unplug and Cool:** Always unplug the airfryer from the power outlet and allow it to cool completely before cleaning.
2. **Clean Basket and Pan:** The removable basket and pan are dishwasher safe. For manual cleaning, wash them with hot water, dish soap, and a non-abrasive sponge. The non-stick coating makes cleanup easy.

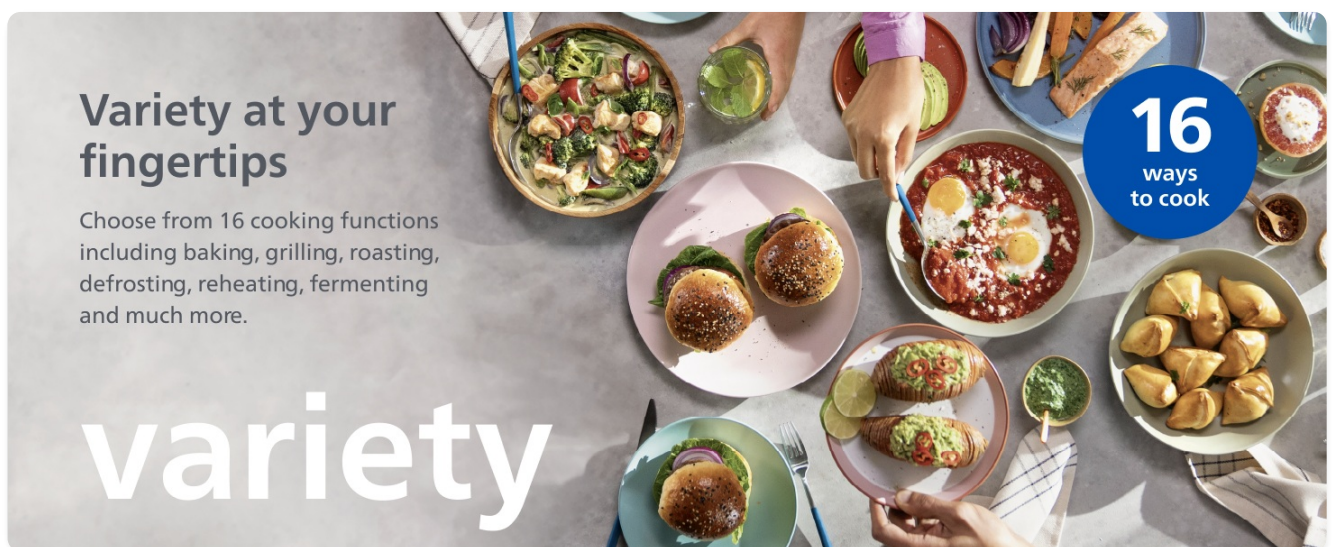


Figure 10: Dishwasher-safe parts simplify the cleaning process.

3. **Clean Interior:** Wipe the interior of the airfryer with a damp cloth. For stubborn food residue, use a soft brush. Do not use abrasive cleaners or metal scouring pads.
4. **Clean Exterior:** Wipe the exterior of the appliance with a soft, damp cloth.
5. **Storage:** Ensure all parts are clean and dry before storing the airfryer in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your Philips Airfryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Airfryer does not turn on.	Not plugged in; power outlet issue; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped; incorrect temperature/time.	Do not overfill the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke comes from the appliance.	Greasy residue from previous use; high-fat food cooking.	Clean the basket and pan thoroughly after each use. For high-fat foods, add a little water to the pan to prevent smoke.
Food is not crispy.	Too much moisture; not enough oil (for certain foods); incorrect temperature.	Pat food dry before air frying. Lightly coat with oil if desired. Increase temperature or cooking time slightly.

If the problem persists, please contact Philips customer support.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	PHILIPS
Model Name	NA330/00
Capacity	6.5 Quarts (5 Liters)
Product Dimensions	12.75"D x 17.3"W x 11.8"H
Item Weight	15.95 pounds
Color	Black
Material	Plastic
Wattage	1700 Watts
Voltage	120 Volts
Control Method	Touch
Max Temperature Setting	200 Degrees Celsius (392 Degrees Fahrenheit)
Has Nonstick Coating	Yes
Is Dishwasher Safe	Yes (removable parts)
Country of Origin	China

9. WARRANTY AND SUPPORT

Philips provides a standard manufacturer's warranty for this product. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty duration and coverage details.

For technical support, product registration, or to find replacement parts and accessories, please visit the official Philips website or contact Philips customer service. You can also visit the [Philips Kitchen Appliances Store on Amazon](#) for more information.