

COMFIER CF-2307A

COMFIER Shiatsu Neck and Back Massager with Heat and Compression (Model CF-2307A) Instruction Manual

INTRODUCTION



Thank you for choosing the COMFIER Shiatsu Neck and Back Massager. This versatile massage chair pad is designed to provide deep tissue relief for your neck, back, waist, and hips. It combines multiple massage techniques including shiatsu, rolling, heat therapy, and air compression to help alleviate muscle fatigue and tension. Please read this manual thoroughly before use to ensure safe and effective operation.

PRODUCT FEATURES

- **Deep Tissue Back Massage:** Features 4 shiatsu nodes that move up and down, targeting the full back for deep kneading massage.
- **Shiatsu Neck & Back Relief:** Includes 4 flexible shiatsu nodes for neck massage. Node position is adjustable to fit various user heights, providing personalized deep tissue massage for the neck and shoulders.
- **Rolling, Spot & Heat Therapy:** Offers rolling massage for gentle spinal stretching and spot massage to focus on specific sore areas. Optional heat function provides soothing warmth to relax stiff muscles.
- **Air Compression for Waist & Hips:** Comes with 3 adjustable compression levels on the waist and hips, simulating air pressure massage to improve circulation and reduce lower back fatigue.
- **Versatile Use:** Easily straps onto any office chair, recliner, sofa, or couch.

ADJUSTABLE NECK MASSAGE

Is suitable for Women/ Men of different Heights

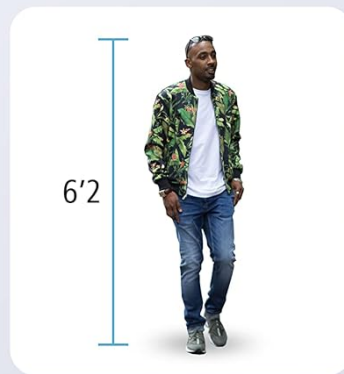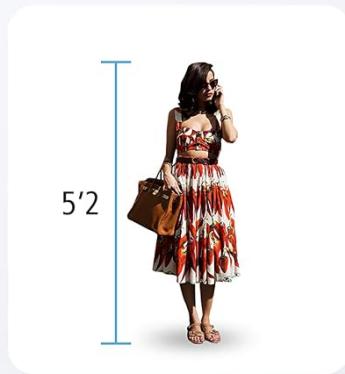

Suitable for height of 5'2-6'2

Note: If the neck rollers still can't reach neck,by placing a seat cushion or a pillow on the sitting part



Figure 1: Overview of COMFIER Back Massager features and target areas.



PRESSURE MASSAGE

Relax your waist and thighs muscles


Figure 2: Detail of the adjustable shiatsu neck massage nodes.



Figure 3: Illustration of the air compression massage for waist and hips.

SETUP

1. **Placement:** Place the massager on your desired chair (office chair, recliner, sofa, etc.). Ensure the chair provides adequate back support.
2. **Secure the Massager:** Use the integrated elastic straps on the back of the massager to secure it firmly to your chair, preventing it from slipping during use.
3. **Connect Power:** Plug the power adapter into the massager's input port, then plug the adapter into a standard electrical outlet.
4. **Remote Control:** The remote control is wired and conveniently stored in a side pocket. Ensure it is easily accessible for operation.

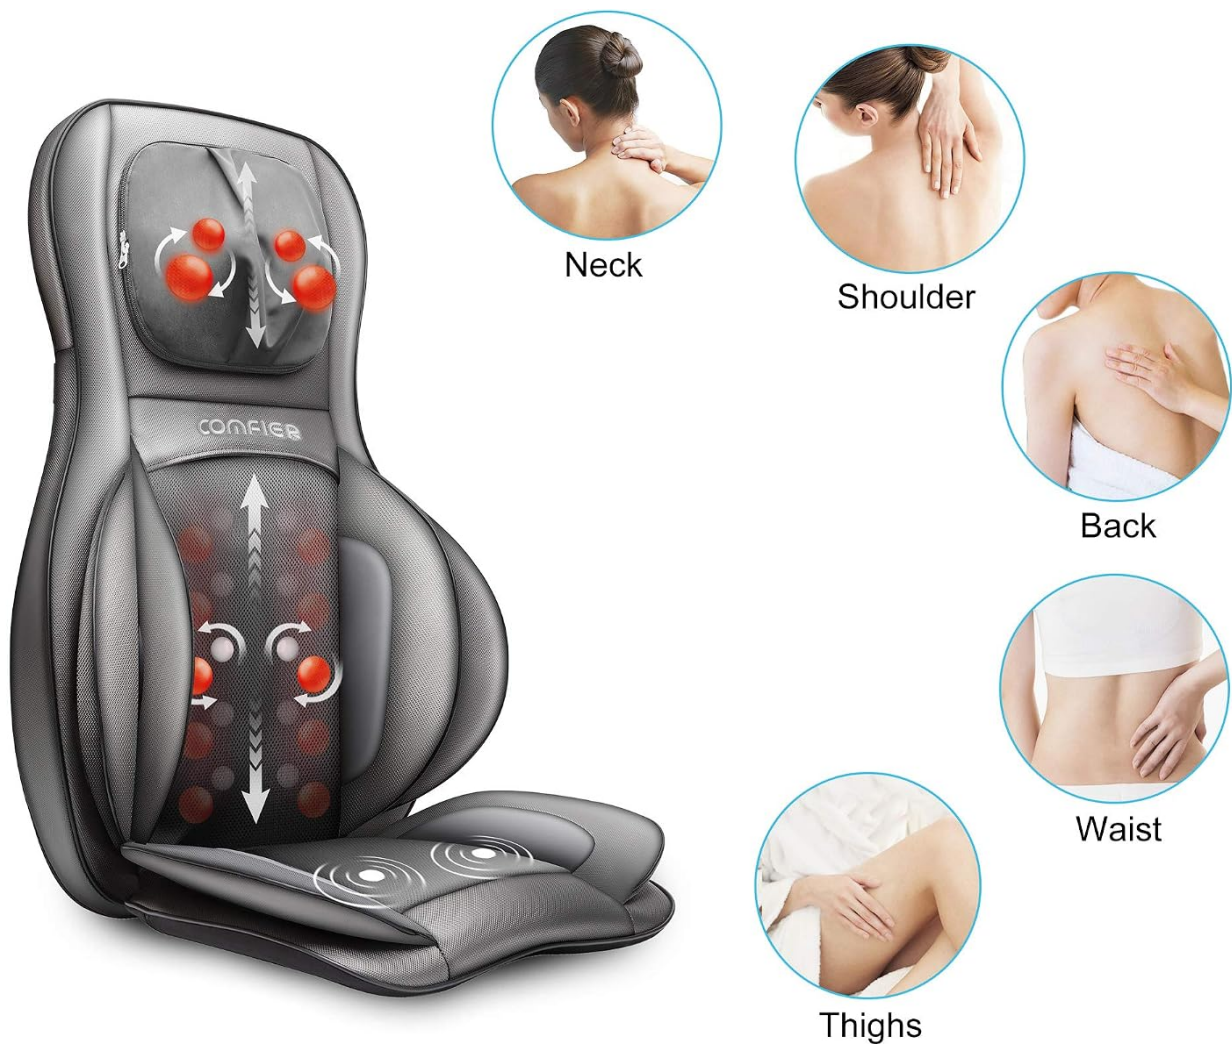

DEEP KNEADING SHIATSU MASSAGE

To relax tense muscles

Figure 4: Proper placement of the massager on a chair.

OPERATING INSTRUCTIONS

Use the wired remote control to select and customize your massage experience.



Figure 5: Remote control layout and functions.

- **Power On/Off:** Press the power button at the bottom of the remote to turn the massager on or off.
- **Auto Mode:** Select 'Auto' for a pre-programmed massage session that cycles through various functions.
- **Vibration:** Choose from 3 intensity levels for seat vibration.
- **Neck Massage:** Adjust the height of the neck nodes using the up/down arrows. Select rotation direction.
- **Back Massage Modes:**
 - **2D/3D Shiatsu:** Activates deep kneading shiatsu massage.
 - **Rolling:** Provides a gentle rolling massage along the spine.
 - **Spot:** Use up/down arrows to pinpoint a specific area for focused massage.
- **Heat Function:** Press 'Heat' to activate soothing warmth for your back.
- **Air Compression:** Select 'Air Back' or 'Air Seat' and adjust intensity for compression massage on your waist/hips.
- **Timer:** Set massage duration to 15, 20, or 30 minutes.

MAINTENANCE

- **Cleaning:** Unplug the massager before cleaning. Wipe the surface with a soft, damp cloth. Do not use abrasive cleaners.
- **Removable Neck Cover:** The neck cover is removable and washable for hygiene. Unzip, remove, and hand wash or machine wash on a gentle cycle. Air dry completely before reattaching.
- **Storage:** When not in use, store the massager in a cool, dry place. It can be folded for compact storage.



Figure 6: Removable and washable neck cover for easy maintenance.

SAFETY INFORMATION

- May cause burns if used for extended periods on high heat settings.
- Do not use if you have a blood clotting disorder, are pregnant, or have a heart condition.
- Keep away from water.

- Unplug when not in use.
- Always follow the manufacturer's instructions for use and maintenance.

TROUBLESHOOTING

- **No Power:** Ensure the power adapter is securely plugged into both the massager and a working electrical outlet.
- **Massage Nodes Not Moving:** Check if the correct massage mode (Shiatsu, Rolling, Spot) is selected on the remote. Ensure the massager is placed on a stable surface.
- **Heat Not Working:** Verify the heat function is activated on the remote. Allow a few minutes for the heat to build up.
- **Compression Not Working:** Ensure 'Air Back' or 'Air Seat' is selected and intensity is set.
- **Massage Too Intense:** Use the detachable flap over the back massage area to reduce intensity. Adjust intensity levels on the remote.

SPECIFICATIONS

Feature	Detail
Product Dimensions	18 x 30 x 17 inches
Item Model Number	CF-2307A
Item Weight	22.1 Pounds
Power Source	Corded Electric
Material	Leather
Color	Gray

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included in your product packaging or visit the official COMFIER website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question