



Manuals.plus /

› **Infraovens /**

› Infraovens Reusable Liner Accessories and Cooking Guide for Ninja Woodfire Outdoor Oven

Infraovens For: Ninja Woodfire Outdoor Oven

Infraovens Accessories and Cooking Guide for Ninja Woodfire Outdoor Oven

Model: For: Ninja Woodfire Outdoor Oven (OO100, OO101, OO101B, OO101B1, OO101B2)

INTRODUCTION

This manual provides comprehensive instructions for the use and care of your Infraovens Reusable Liner Accessories and Cooking Guide Cheat Sheet, designed specifically for the Ninja Woodfire Outdoor Oven models OO100, OO101, OO101B, OO101B1, and OO101B2. These accessories are intended to enhance your outdoor cooking experience by providing non-stick surfaces for various cooking methods, a convenient tool for rack management, and a detailed guide for optimal results.



Figure 1: Complete Infraovens Accessory Kit for Ninja Woodfire Outdoor Oven. This kit includes three reusable non-stick liners (one mesh, one perforated, one solid), a wooden anti-burn rack puller stick, and a comprehensive cooking guide cheat sheet.

PRODUCT COMPONENTS

- **Reusable Non-Stick Liners (3):** Includes one mesh mat, one perforated mat, and one solid mat. Made from PFOA-free fiberglass, heat-resistant up to 450°F.
- **Anti-Burn Rack Puller Stick:** A wooden tool designed for safely pulling and pushing oven racks.
- **Cooking Guide Cheat Sheet:** A weather-proof, scratch-resistant booklet providing time, temperature, and action guidelines for roasting, smoking, baking, broiling, dehydrating, and pizza making.

SETUP AND FIRST USE

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Initial Cleaning:** Before first use, wash all reusable liners with warm, soapy water. The liners are dishwasher safe.


Rinse thoroughly and allow to air dry completely. The wooden rack puller can be wiped clean with a damp cloth.

3. **Review Cooking Guide:** Familiarize yourself with the cooking guide cheat sheet. It is designed to be kept outdoors near your oven.

OPERATING INSTRUCTIONS

Using the Reusable Liners

The three types of liners are designed for specific cooking needs, helping to keep your oven's bottom tray clean and facilitating cooking of various food types.

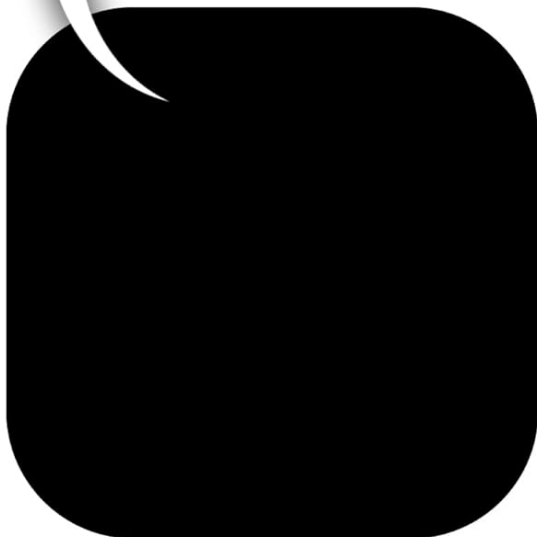

REUSABLE LINER


*TO PROTECT YOUR TRAY
FROM STICKIER, MESSIER FOODS
AND TO CATCH FOOD DRIPPINGS*

- NON-STICK
- PFOA-FREE FIBERGLASS
- DISHWASHER SAFE

 INFRAOVENS®

Figure 2: Solid Reusable Liner. This liner protects your oven tray from sticky or messy foods and catches food drippings, making cleanup easier.

- **Solid Liner:** Ideal for roasting, smoking, baking, broiling, and warming. Place directly on the oven tray to protect it from drippings and sticky foods. This liner ensures easy cleanup.

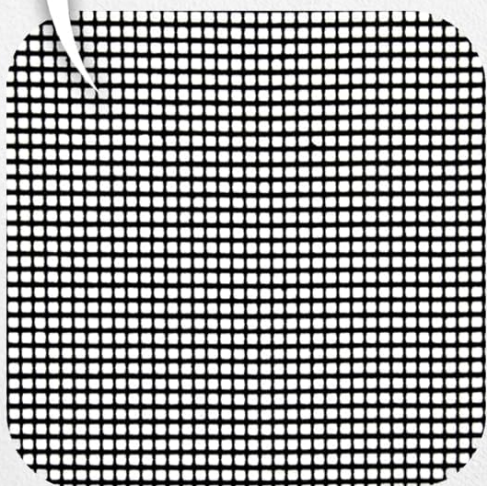

MESH MAT

*TO COOK SMALLER FOODS THAT
WOULD OTHERWISE FALL THROUGH
THE CRACKS OF THE RACK*

- NON-STICK
- PFOA-FREE FIBERGLASS
- DISHWASHER SAFE

 **INFRAOVENS®**

Figure 3: Mesh Mat. Use this mat for cooking smaller foods like shrimp or chopped vegetables that might otherwise fall through the oven rack.

- **Mesh Mat:** Use this mat when cooking smaller items such as shrimp, chopped vegetables, or for dehydrating. It prevents small foods from falling through the oven's rack while allowing heat and air circulation.



PERFORATED MAT

*TO PROTECT YOUR TRAYS
WHILE ALLOWING OILS AND GREASE
TO DRIP AWAY FROM YOUR FOOD*

- NON-STICK
- PFOA-FREE FIBERGLASS
- DISHWASHER SAFE

 INFRAOVENS®

Figure 4: Perforated Mat. This mat is designed to protect your trays while allowing excess oils and grease to drip away from your food, ideal for items like chicken wings.

- **Perforated Mat:** Suitable for foods where you want excess oils and grease to drip away, such as chicken wings or crispy items. It protects the tray while promoting even cooking.

Note: All liners are designed to gather heat evenly and efficiently due to their fiberglass material and thin profile.

Using the Anti-Burn Rack Puller Stick

The wooden rack puller is designed to safely manage hot oven racks, especially useful for appliances with small openings like the Ninja Woodfire Outdoor Oven, air fryers, toaster ovens, and convection ovens.

EASILY
PULL AND PUSH
YOUR OVEN RACK

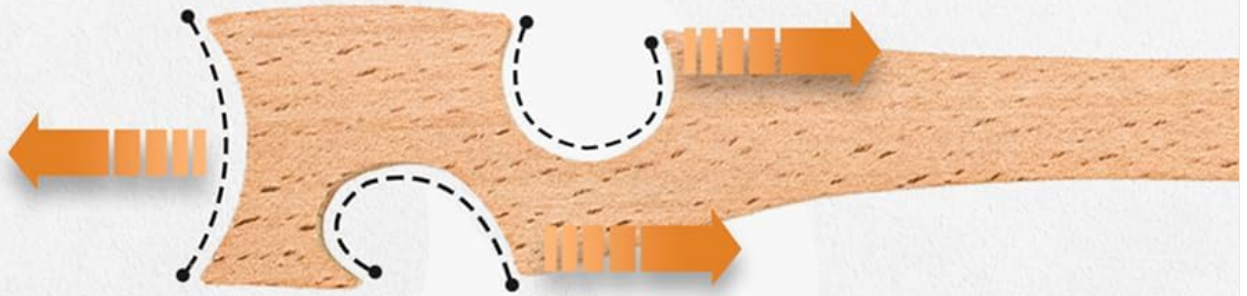


Figure 5: Anti-Burn Rack Puller Stick in Use. This tool allows you to safely pull out or push in hot oven racks, preventing accidental burns.

- **Pulling the Rack:** Use the curved notch at the end of the stick to hook onto the oven rack and pull it towards you.
- **Pushing the Rack:** Use the flat end or the other curved notch to gently push the rack back into the oven.
- Always ensure a firm grip on the stick and maintain a safe distance from the hot oven interior.

Utilizing the Cooking Guide Cheat Sheet

The cooking guide provides essential information for various cooking functions of your Ninja Woodfire Outdoor Oven.

ALL INFORMATION IN ONE PLACE

Roasting, Smoking, Dehydrating & Pizza Making



Figure 6: Cooking Guide Cheat Sheet. This weather-proof guide provides ideal times, temperatures, and actions for roasting, smoking, dehydrating, and pizza making.

- **Accessing Information:** The guide is ring-bound for easy flipping and is designed to be durable for outdoor use.
- **Cooking Parameters:** Refer to the guide for recommended time, temperature, and specific actions for different cooking methods (roast, smoke, bake, broil, dehydrate, pizza) and food types.
- **Weather-Proof Design:** The guide is waterproof, scratch-resistant, and easily cleaned, making it suitable for use near your outdoor oven.

MAINTENANCE AND CARE

- **Liners:** All three reusable liners are dishwasher safe. For manual cleaning, wash with warm, soapy water and a soft sponge. Avoid abrasive cleaners or scouring pads that could damage the non-stick surface.
- **Rack Puller:** Wipe the wooden rack puller with a damp cloth as needed. Do not soak in water or put in a dishwasher, as this can damage the wood.
- **Cooking Guide:** The guide is waterproof and scratch-resistant. Wipe clean with a damp cloth if it gets soiled.

- **Storage:** Store all accessories in a clean, dry place when not in use.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Food sticking to liners.	Insufficient preheating, damaged non-stick surface, or improper cleaning.	Ensure the oven and liner are adequately preheated. Avoid using sharp utensils on the liner. Clean thoroughly after each use to remove all residue.
Liners appear discolored or stained.	Normal wear and tear from high heat or food residue.	Discoloration is often cosmetic and does not affect performance. Ensure thorough cleaning. If performance is affected, consider replacement.
Rack puller feels uncomfortable or rough.	Natural wood texture or sharp edges.	The wooden puller may have natural variations. If edges are sharp, gentle sanding with fine-grit sandpaper may improve comfort.

SPECIFICATIONS

- **Brand:** Infraovens
- **Model Compatibility:** Ninja Woodfire Outdoor Oven (OO100, OO101, OO101B, OO101B1, OO101B2)
- **Material:** Fiberglass (Liners), Wood (Rack Puller)
- **Heat Resistance (Liners):** Up to 450°F (232°C)
- **Liner Features:** Non-stick, PFOA-free, Dishwasher Safe
- **Cooking Guide Features:** Waterproof, Scratch-resistant, Easily Cleaned
- **Item Weight:** Approximately 141 g (0.31 lbs)
- **Parcel Dimensions:** Approximately 29.49 x 29.49 x 2.21 cm

SUPPORT

For further assistance or inquiries regarding your Infraovens accessories, please refer to the contact information provided with your product packaging or visit the official Infraovens website. While this manual provides comprehensive usage guidelines, specific warranty details are typically provided at the point of purchase or through the manufacturer's official channels.