

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [alpina](#) /

› [alpina 2L Air Fryer Instruction Manual](#)

alpina 8711252574332

# alpina 2L Air Fryer Instruction Manual

Model: 8711252574332 | Brand: alpina

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your alpina 2L Air Fryer. This appliance is designed for preparing meals for 2 to 3 people, offering a healthier alternative to traditional frying by using hot air circulation. It functions as a hot air oven, allowing for faster cooking with less space and no gas. Please read all instructions carefully before first use and retain this manual for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

**WARNING: To prevent electric shock, fire, or injury, always follow basic safety precautions.**

- Read all instructions before using the appliance.
- Do not immerse the cord, plug, or the appliance housing in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.
- The outer surfaces may become hot during use. Avoid touching hot surfaces directly.

### 3. PRODUCT OVERVIEW

The alpina 2L Air Fryer features a compact design with intuitive controls for temperature and time. It includes a removable basket and grilling plate for easy food preparation and cleaning.



Image 1: Front view of the alpina 2L Air Fryer, showcasing its compact design and control panel.

#### Components:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Features a temperature dial and a timer dial.
- **Removable Basket:** For holding food during cooking.
- **Grilling Plate:** Inserted into the basket for optimal air circulation and crisping.
- **Handle:** For safely removing the basket from the main unit.

- **Power Indicator Light:** Illuminates when the appliance is operating.

## REMOVABLE BASKET AND GRILLING PLATE

With a capacity of 2 litres



Image 2: The removable basket and grilling plate, designed for easy cleaning and efficient cooking.

### 4. SETUP

---

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Clean:** Wash the removable basket and grilling plate with warm, soapy water. Rinse thoroughly and dry completely. Wipe the interior and exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances to ensure proper ventilation. Ensure there is at least 10 cm of free space on the back and sides, and 10 cm above the appliance.
4. **Initial Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 200°C to burn off any manufacturing residues. A slight odor may be present, which is normal. Ensure the area is well-ventilated.

### 5. OPERATING INSTRUCTIONS

---

Follow these steps to operate your alpina 2L Air Fryer:

1. **Prepare Food:** Place your ingredients into the removable basket. Do not overfill the basket to allow

for proper air circulation.

2. **Insert Basket:** Slide the basket back into the main unit until it clicks securely into place.
3. **Plug In:** Connect the power cord to a grounded electrical outlet.
4. **Set Temperature:** Turn the temperature dial to your desired cooking temperature (80°C to 200°C).
5. **Set Timer:** Turn the timer dial to the required cooking time (up to 60 minutes). The power indicator light will illuminate, and the air fryer will begin heating.
6. **Cooking Process:** The air fryer will automatically turn off when the timer reaches zero. For even cooking, especially with items like fries, shake the basket halfway through the cooking time. To do this, carefully pull out the basket by its handle, shake the contents, and then reinsert it. The air fryer will resume cooking.
7. **Remove Food:** Once cooking is complete, carefully pull out the basket and place it on a heat-resistant surface. Use tongs to remove the cooked food.
8. **Unplug:** Always unplug the appliance after use.



Image 3: The mechanical dials for setting temperature (80-200°C) and time (0-60 minutes).

## 6. COOKING GUIDE

The following table provides general guidelines for cooking various foods. Cooking times and temperatures may vary based on food quantity, size, and desired crispness. Always ensure food is cooked thoroughly.

## FAST AIR CIRCULATION

Suitable for baking, roasting, grilling and reheating



Image 4: Examples of food cooked in the air fryer with suggested time and temperature settings.

Food Item	Temperature	Time	Notes
Fries (300-400g)	180-200°C	18-25 min	Shake basket 2-3 times.
Shrimp (300-400g)	180-200°C	10-18 min	
Fish (300-400g)	180-200°C	12-30 min	
Chicken Wings (400-600g)	180-200°C	20-30 min	
Steak (140-160g)	180-200°C	12-25 min	
Pizza	170°C	20 min	
Chicken (e.g., Nuggets)	190°C	23 min	

## 7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Clean Basket and Grilling Plate:** Wash the removable basket and grilling plate with hot water, dish soap, and a non-abrasive sponge. The non-stick coating should not be damaged by harsh scrubbing. These parts are **not dishwasher safe**.
3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residues, use a mild detergent. Avoid abrasive cleaners or metal scouring pads.
4. **Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

## 8. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
	Timer is not set.	Turn the timer dial to the desired cooking time.
Food is not cooked evenly.	Basket is overfilled.	Reduce the amount of food in the basket. Cook in smaller batches.
	Food was not shaken.	Shake the basket 2-3 times during cooking, especially for items like fries.
White smoke comes from the appliance.	Fat residues from previous use.	Clean the basket and grilling plate thoroughly after each use.
	Cooking fatty ingredients.	This is normal for fatty foods. Ensure proper ventilation.


## 9. SPECIFICATIONS

Feature	Specification
Model Name	alpina Airfryer 2L
Model Number	8711252574332
Capacity	2 Liters
Power Output	900 Watts
Voltage	240V

Feature	Specification
Temperature Range	80°C - 200°C
Timer	Up to 60 minutes
Product Dimensions (D x W x H)	21.5D x 29.2W x 29.7H cm
Item Weight	2.5 Kilograms
Outer Material	Plastic
Inner Material	Metal
Non-stick Coating	Yes
Dishwasher Safe Parts	No
Control Method	Dial (Mechanical)



**2 liter**

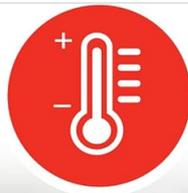

**Instelbare temperatuur**



**Instelbare tijd**



**Indicatielampje**



Image 5: Detailed dimensions of the alpina 2L Air Fryer.

## 10. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation included with your purchase or contact alpina customer service. Keep your proof of purchase for any warranty claims.

© 2024 alpina. All rights reserved.