

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Swiss Pro+](#) /

› [Swiss Pro+ Digital Air Fryer SP-AF6.5L.BG Instruction Manual](#)

Swiss Pro+ SP-AF6.5L.BG

Swiss Pro+ Digital Air Fryer SP-AF6.5L.BG Instruction Manual

Model: SP-AF6.5L.BG | Brand: Swiss Pro+

INTRODUCTION

Thank you for choosing the Swiss Pro+ Digital Air Fryer SP-AF6.5L.BG. This appliance is designed to provide a healthier way to cook your favorite foods, using rapid hot air circulation to fry, grill, roast, and bake with little to no added oil. Please read this instruction manual thoroughly before first use to ensure safe and optimal operation of your new air fryer. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.
- Do not block any ventilation openings.
- Never fill the basket with oil.

PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main parts of your Swiss Pro+ Digital Air Fryer.

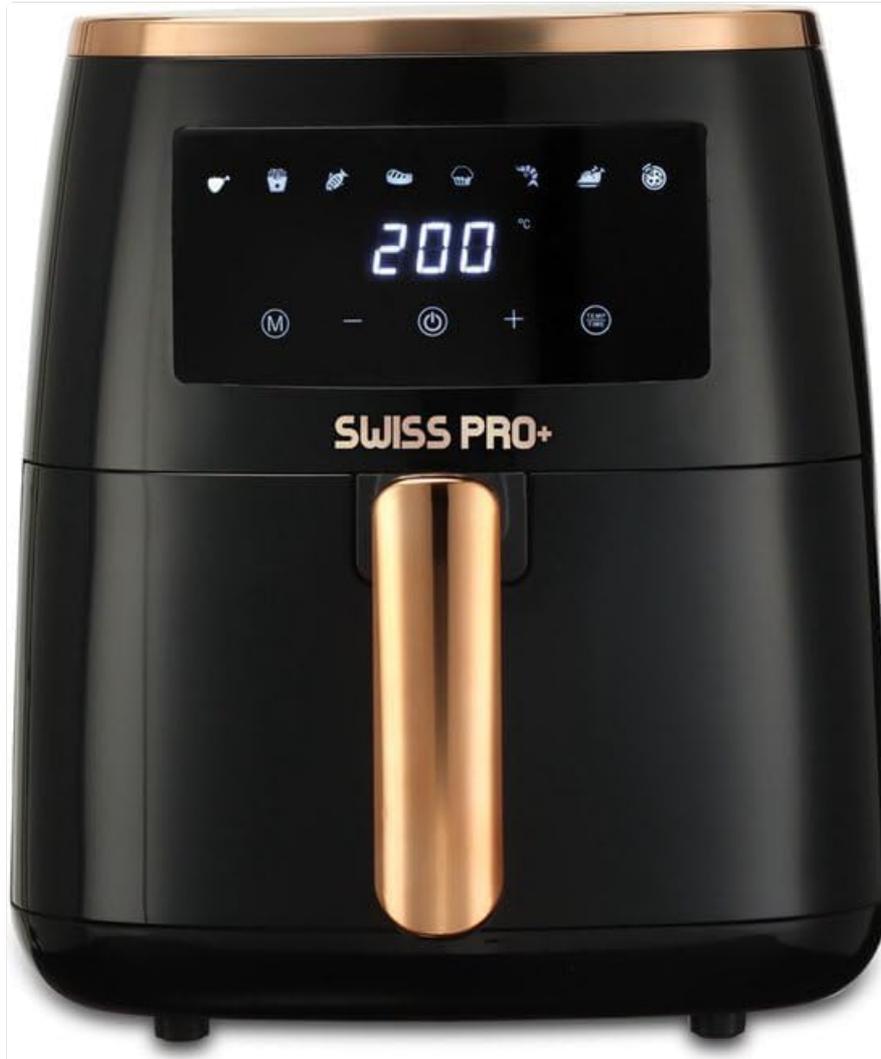


Figure 1: Front view of the Swiss Pro+ Digital Air Fryer, showcasing the digital display and control panel.



Figure 2: The removable frying basket and the grill plate, designed for easy cleaning and efficient cooking.



Figure 3: Top view of the air fryer, highlighting the digital control panel with various preset cooking functions.

- **Main Unit:** Houses the heating element and fan for hot air circulation.
- **Digital Control Panel:** Touch-sensitive display for setting temperature, time, and selecting presets.
- **Frying Basket:** Removable, non-stick coated basket for holding food.
- **Grill Plate (or Crisper Plate):** Sits at the bottom of the frying basket to allow air circulation around food and collect excess fat.
- **Handle:** Ergonomic handle for safely pulling out the frying basket.

SETUP

1. **Unpacking:** Carefully remove all packaging materials from the air fryer.
2. **Initial Cleaning:** Before first use, clean the frying basket and grill plate with hot water, dish soap, and a non-abrasive sponge. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, level, heat-resistant surface, away from walls and other appliances to allow for proper air circulation. Ensure there is at least 10 cm (4 inches) of free space on the back, sides, and above the appliance.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

OPERATING INSTRUCTIONS

General Operation

1. **Prepare Food:** Place your ingredients into the frying basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the frying basket back into the main unit until it clicks into place.
3. **Power On:** Press the power button on the digital control panel to turn on the appliance.
4. **Set Temperature and Time:**
 - Use the temperature control buttons (usually '+' and '-') to adjust the desired cooking temperature.
 - Use the time control buttons (usually '+' and '-') to set the cooking duration.
5. **Use Preset Programs:** The digital interface features quick-select programs for common foods like frozen fries, meat, fish, and chicken legs. Simply touch the corresponding icon to activate a preset. The appliance will automatically set the optimal temperature and time.
6. **Start Cooking:** Press the start/pause button to begin the cooking process. The air fryer will preheat briefly, then start cooking.
7. **Shake Basket (Optional):** For some foods, it is recommended to shake the basket halfway through the cooking time to ensure even browning. The air fryer may beep to remind you. Carefully pull out the basket, shake, and reinsert.
8. **End of Cooking:** The air fryer will beep when the set cooking time has elapsed. Carefully pull out the basket and transfer the cooked food to a serving plate.

Keep Warm Function

The Swiss Pro+ Air Fryer includes a convenient "Keep Warm" function. After cooking is complete, you can activate this function to keep your food warm for up to 30 minutes. This allows flexibility in serving times without compromising food quality.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your air fryer.

- Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
- Clean Basket and Grill Plate:** The non-stick coated basket and grill plate are dishwasher safe. Alternatively, you can wash them with hot water, dish soap, and a non-abrasive sponge. Avoid using metal utensils or abrasive cleaning materials that could damage the non-stick coating.
- Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn residue, use a mild detergent.
- Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
- Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your air fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Basket is overfilled. Food pieces are too large.	Do not overfill the basket. Cut food into smaller, more uniform pieces. Shake the basket halfway through cooking.
White smoke comes from the appliance.	Fat residue from previous use. Excess oil on food.	Clean the basket and grill plate thoroughly. Remove excess oil from food before placing it in the air fryer.
Food is not crispy.	Too much moisture in food. Not enough oil (for certain foods). Temperature too low.	Pat food dry before cooking. Lightly brush with oil if desired. Increase temperature or cooking time.

If the problem persists after checking these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Swiss Pro+
Model Number	SP-AF6.5L.BG
Color	Black

Feature	Detail
Capacity	6.5 Liters
Power / Wattage	1500 Watts
Material	Stainless Steel
Product Dimensions (D x W x H)	42 x 39 x 44 cm
Item Weight	6 Kilograms
Special Features	Programmable, Digital Display, Keep Warm Function, Hero Air Technology
Control Method	Touch

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Swiss Pro+ website. Keep your proof of purchase for any warranty claims.

OFFICIAL PRODUCT VIDEOS

There are no official product videos provided for this model at this time. Please refer to the written instructions and images for guidance.