

[Manuals.plus](#) /

› [MIRASTON](#) /

› MIRASTON 4.5QT Air Fryer with Dials Control User Manual (Model MS-1808-blk)

MIRASTON MS-1808-blk

MIRASTON 4.5QT Air Fryer with Dials Control User Manual

Model: MS-1808-blk

IMPORTANT SAFEGUARDS

Please read all instructions carefully before using your MIRASTON 4.5QT Air Fryer. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the air fryer is placed on a stable, heat-resistant surface with adequate ventilation around it.

PRODUCT OVERVIEW

The MIRASTON 4.5QT Air Fryer is designed for convenient and healthy cooking, utilizing 360° hot air circulation technology to deliver crispy results with little to no oil. Its compact design makes it suitable for various kitchen spaces.

Components

- Main Unit

- Nonstick Square Fry Basket
- Removable Crisper Tray

Features

- **4.5 Quart Capacity:** Ideal for 1-3 people.
- **Classic Black Dials Control:** Intuitive temperature and timer settings.
- **360° Hot Air Technology:** Ensures even cooking and crispy results.
- **Nonstick Square Basket:** Maximizes cooking space and prevents food from sticking.
- **Dishwasher Safe Parts:** Basket and crisper tray are easy to clean.
- **Automatic Shut-Off:** For safety and convenience.



The MIRASTON 4.5QT Air Fryer in classic black, showcasing its compact design.

SETUP

Follow these steps to prepare your air fryer for its first use.

1. **Unpacking:** Carefully remove all packaging materials, stickers, and labels from the air fryer.
2. **Initial Cleaning:** Wash the fry basket and crisper tray thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely. Wipe the interior and exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 6 inches (15 cm) of clear space around the back and sides of the appliance for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.



The MIRASTON 4.5QT Air Fryer placed on a kitchen countertop, ready for use.

OPERATING INSTRUCTIONS

Your MIRASTON 4.5QT Air Fryer features intuitive dials for easy temperature and time control.

Setting Temperature and Time

1. **Insert Food:** Place the food you wish to cook into the fry basket, ensuring it is not overfilled. Slide the basket firmly back into the main unit.
2. **Set Temperature:** Rotate the top dial (temperature dial) clockwise to select your desired cooking temperature, ranging from 0°F to 400°F.
3. **Set Time:** Rotate the bottom dial (timer dial) clockwise to set the desired cooking time, up to 30 minutes.
4. **Start Cooking:** The air fryer will automatically begin the cooking process once both dials are set. The indicator light will illuminate.
5. **Automatic Shut-Off:** The air fryer will automatically shut off when the timer reaches zero. A bell will sound to indicate completion.

DINNER'S DONE IN MINUTES

Meals for 2-4 People in One Go



Close-up view of the MIRASTON 4.5QT Air Fryer's classic black dials for temperature and time control.

Using the Pause Feature

The air fryer features an automatic pause function for convenience and safety:

- If you pull out the fry basket during operation, the air fryer will automatically pause.

- To resume cooking, simply reinsert the fry basket firmly into the main unit. The cooking cycle will continue from where it left off.

Your browser does not support the video tag.

Video demonstrating how to use the dial controls on the MIRAston Air Fryer, including setting temperature and time.

COOKING GUIDE

Achieve optimal results with your air fryer by following these tips.

Food Preparation

- For best results, pat food dry before air frying.
- Lightly coat food with oil or cooking spray for extra crispiness, if desired.

Food Placement and Capacity

The 4.5QT square basket is designed to maximize cooking space, allowing you to cook meals for 1-3 people efficiently. Avoid overfilling the basket to ensure proper air circulation and even cooking.

FAMILY-SIZED & HEALTHY MEALS

4.5 Quart Food Capacity, Crispier Fried Meals with 70% Fewer Calories from Fat



The nonstick square basket of the MIRASTON 4.5QT Air Fryer filled with food, demonstrating its capacity.

Shaking and Flipping

For many foods, especially smaller items like fries or nuggets, shaking or flipping them halfway through the cooking time will ensure more even browning and crispiness.

CRISP AND TENDER RESULTS

MIRASTON Crisp Technology for perfectly crispy and evenly cooked foods



Crispy food being removed from the MIRASTON 4.5QT Air Fryer basket.

Recommended Cooking Times

The following table provides general guidelines. Adjust times and temperatures based on food quantity, thickness, and desired crispiness.

Food Item	Temperature	Time	Notes
French Fries (frozen)	380°F (195°C)	15-20 min	Shake halfway
Chicken Wings	360°F (180°C)	20-25 min	Flip halfway
Fish Fillets	350°F (175°C)	12-15 min	Flip halfway
Steak	400°F (200°C)	10-15 min	Flip halfway, adjust for doneness
Vegetables (chopped)	375°F (190°C)	10-18 min	Shake halfway

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your air fryer.

Before Cleaning


- Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.

Cleaning the Basket and Crisper Tray

The nonstick square fry basket and removable crisper tray are dishwasher safe for easy cleaning. Alternatively, you can wash them by hand:

- Wash with hot water, dish soap, and a non-abrasive sponge.
- For stubborn food residue, soak the basket and tray in hot, soapy water for about 10 minutes before cleaning.
- Ensure all parts are completely dry before reassembling or storing.

360° RAPID AIR HEATING CIRCULATION TECHNOLOGY

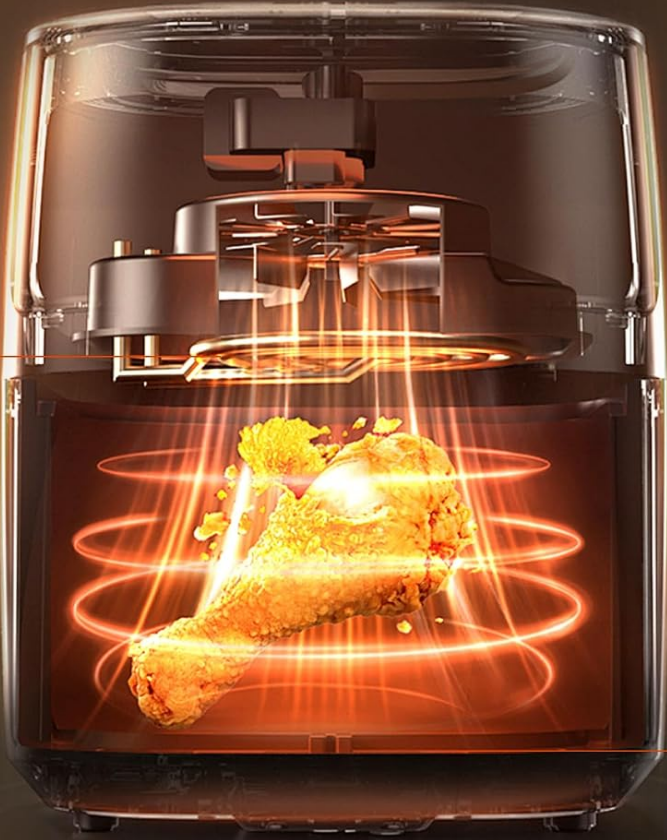



PART 1
400°F, Super Heated
Crispy Results with
Little to No Oil



PART 2
1400W, Cook Fast,
Up to 30% faster
than traditional oven

The removable nonstick basket and crisper tray of the MIRASTON 4.5QT Air Fryer, highlighting their dishwasher-safe

Cleaning the Main Unit

- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Clean the interior of the air fryer with a damp cloth and mild detergent.
- Never immerse the main unit in water or any other liquid.

TROUBLESHOOTING

If you encounter any issues with your air fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	The appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded wall outlet.
	The fry basket is not inserted correctly.	Push the fry basket firmly into the main unit until it clicks into place.
Food is not cooked evenly.	The basket is overfilled.	Cook food in smaller batches to allow for better air circulation.
	Food was not shaken or flipped.	Shake or flip food halfway through the cooking time.
Food is not crispy.	Incorrect temperature or time settings.	Adjust temperature and time according to the cooking guide or recipe. Lightly coat food with oil for extra crispiness.
White smoke comes from the appliance.	Grease residue from previous use.	Clean the basket and crisper tray thoroughly after each use.
	Cooking fatty foods.	This is normal for fatty foods. Ensure the crisper tray is in place to drain excess fat.

SPECIFICATIONS

- **Model Name:** MS-1808-blk
- **Capacity:** 4.5 Quarts
- **Product Dimensions:** 13"D x 13"W x 15"H
- **Item Weight:** 9.18 pounds (4.17 Kilograms)
- **Color:** Gloss Black
- **Material:** Plastic (Outer Material: Stainless Steel)
- **Control Method:** Hand Control (Dials)
- **Output Wattage:** 1500 Watts
- **Voltage:** 120 Volts
- **Max Temperature Setting:** 400 Degrees Fahrenheit
- **Special Features:** Automatic Shut-Off, Temperature Control, Timer, Nonstick Coating, Dishwasher Safe (basket/tray)
- **Air Frying Technology:** 360° Hot Air Circulation Technology

WARRANTY AND SUPPORT

MIRASTON products are manufactured to the highest quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or contact MIRASTON customer service.

Customer Support: For assistance, please visit the official MIRASTON website or contact our support team through the contact information provided in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question