

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SOGO](#) /

› [SOGO FRE-SS-10915 8L Digital Air Fryer Instruction Manual](#)

SOGO FRE-SS-10915

SOGO FRE-SS-10915 8L Digital Air Fryer Instruction Manual

Model: FRE-SS-10915 | Brand: SOGO

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

General Safety

- Always ensure the appliance is unplugged from the power outlet before assembly, disassembly, or cleaning.
- Do not immerse the main unit, cord, or plug in water or any other liquid to prevent electric shock.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Always place the appliance on a stable, heat-resistant surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper ventilation.
- Do not use the appliance for anything other than its intended use.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- The air fryer generates hot air during operation. Keep hands and face at a safe distance from the air outlet opening.
- Do not cover the air inlet or air outlet openings while the appliance is operating.
- The outer surfaces of the appliance may become hot during use. Use oven mitts when handling hot components.
- Only use accessories recommended by the manufacturer.

PRODUCT OVERVIEW

Components

The SOGO FRE-SS-10915 air fryer consists of a main unit with a digital control panel, a removable cooking basket, and a crisper plate designed for optimal air circulation.



Figure 1: The SOGO FRE-SS-10915 air fryer with the cooking basket containing fries, showcasing the digital control panel on top.

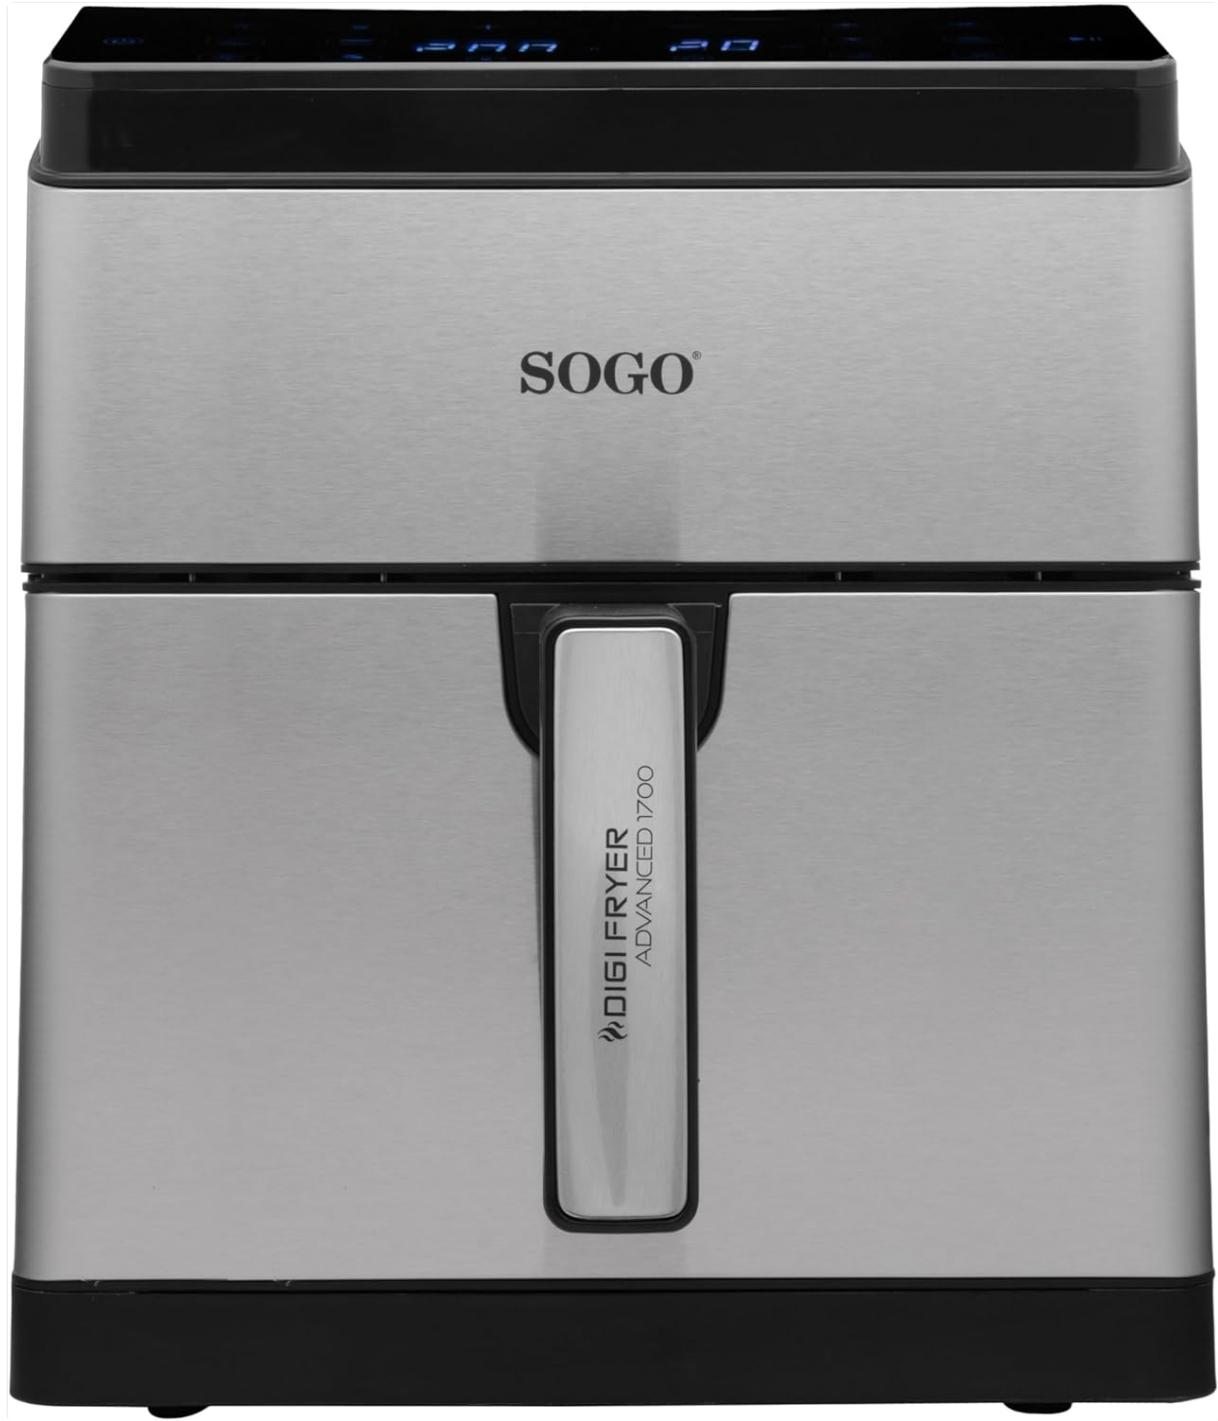


Figure 2: Front view of the air fryer, highlighting its sleek design and handle for the cooking basket.



Figure 3: The cooking basket partially pulled out from the main unit, showing the interior cavity.



Figure 4: Disassembled view of the air fryer, showing the cooking basket, the removable crisper plate, and the heating element inside the main unit.



Figure 5: Diagram illustrating the 360-degree hot air circulation technology within the air fryer, ensuring even cooking.

BEFORE FIRST USE (SETUP)

Unpacking and Initial Cleaning

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wash the cooking basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge. These parts are dishwasher safe.
3. Wipe the inside and outside of the appliance with a damp cloth. Do not immerse the main unit in water.
4. Ensure all parts are completely dry before use.

Placement

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10 cm of free space on the back, sides, and above the appliance to allow for proper air circulation.
- Do not place the appliance directly against a wall or under cabinets during operation, as hot steam may cause damage.

OPERATING INSTRUCTIONS

Control Panel Overview

The SOGO FRE-SS-10915 features an intuitive LED touch screen control panel. This panel allows you to adjust temperature, set cooking time, and select from various preset cooking programs.

The display shows the set temperature and remaining cooking time. Dedicated icons represent different food types for quick selection of preset programs.

Basic Operation

- Prepare Food:** Place the crisper plate into the cooking basket. Place your ingredients into the cooking basket. Do not overfill the basket to ensure even cooking.
- Insert Basket:** Slide the cooking basket back into the main unit until it clicks securely into place.
- Power On:** Plug the power cord into a grounded wall outlet. The appliance will beep, and the display will light up.
- Set Temperature and Time:** Use the temperature control buttons (usually '+' and '-') to set the desired cooking temperature. Use the time control buttons to set the cooking duration.
- Start Cooking:** Press the Start/Pause button to begin the cooking process. The fan and heating element will activate.
- Shake Reminder:** For some recipes, the air fryer may emit a 'shake' reminder during cooking. Carefully pull out the basket, shake the contents, and reinsert the basket to resume cooking.
- End of Cooking:** Once the set time has elapsed, the air fryer will beep and automatically shut off. Carefully pull out the basket and transfer the cooked food to a serving dish.

Preset Programs

The air fryer includes 12 preset cooking functions for common food items. To use a preset:

- After placing food in the basket and powering on, press the 'Menu' or 'Preset' button to cycle through the available programs.
- Once the desired program icon is selected, the air fryer will automatically set the recommended temperature and time.
- Press the Start/Pause button to begin cooking. You can manually adjust the temperature and time even after selecting a preset if needed.

COOKING TIPS

- Oil Usage:** While air frying requires significantly less oil, a small amount (1-2 tablespoons) can enhance crispiness and flavor for certain foods. Use an oil spray for even coating.
- Shaking:** For best results with smaller foods like fries, nuggets, or vegetables, shake the basket halfway through the cooking time to ensure even browning.
- Preheating:** Preheating the air fryer for 3-5 minutes at the desired temperature can improve cooking performance and reduce overall cooking time.
- Batch Cooking:** Avoid overcrowding the basket. Cook food in smaller batches if necessary to allow hot air to circulate effectively around each piece.
- Food Doneness:** Cooking times and temperatures are guidelines. Always check food for doneness,

especially meats and poultry, using a food thermometer if necessary.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

Cleaning the Air Fryer

- Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
- Clean Basket and Crisper Plate:** The cooking basket and crisper plate have a non-stick ceramic coating and are dishwasher safe. For hand washing, use hot water, dish soap, and a non-abrasive sponge. Avoid metal utensils or abrasive cleaning materials that could damage the non-stick coating.
- Wipe Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Clean Interior:** If necessary, wipe the interior of the appliance with a damp cloth. For stubborn residue, a small amount of mild dish soap can be used, followed by wiping with a clean, damp cloth. Ensure no water enters the heating element area.
- Dry Thoroughly:** Ensure all parts are completely dry before storing or using the appliance again.

Storage

Store the air fryer in a cool, dry place, away from direct sunlight and moisture. Ensure the power cord is neatly wrapped and not kinked.

TROUBLESHOOTING

If you encounter any issues with your air fryer, refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	The appliance is not plugged in. The power outlet is not working.	Check if the power cord is securely plugged into a grounded outlet. Try plugging another appliance into the same outlet to check if it is working.
Food is not cooked evenly.	The basket is overcrowded. Food was not shaken during cooking.	Cook food in smaller batches. Shake the basket halfway through the cooking process.
Food is not crispy.	Not enough oil was used (for certain foods). Temperature or time settings are incorrect.	Lightly brush or spray food with oil. Adjust temperature or increase cooking time.
White smoke comes from the appliance.	Fat residue from previous use. Excess oil on food.	Clean the basket and crisper plate thoroughly after each use. Pat food dry before adding to the air fryer.

Problem	Possible Cause	Solution
Appliance smells during first use.	This is normal for new appliances.	The smell will dissipate after a few uses. Ensure good ventilation during initial operation.

SPECIFICATIONS

Technical details for the SOGO FRE-SS-10915 8L Digital Air Fryer.

Feature	Value
Model Number	FRE-SS-10915
Brand	SOGO
Capacity	8 Liters
Power	1800 Watts
Dimensions (L x W x H)	40 x 36 x 30 cm
Weight	5.9 Kilograms
Material	Metal
Control Method	Touch
Color	Metallic Silver



Figure 6: Product label displaying model number, voltage, frequency, and power consumption (220-240V~ 50-60Hz - 1800W).

WARRANTY AND SUPPORT

Warranty Information

Specific warranty details for the SOGO FRE-SS-10915 air fryer are not provided within this document. Please refer to the warranty card included with your product packaging or visit the official SOGO website.

for detailed warranty terms and conditions.

Customer Support

For technical assistance, service, or any questions regarding your SOGO FRE-SS-10915 air fryer, please contact SOGO customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.