

Fritaire Fritaire-01-BL-FBA

Fritaire Glass Air Fryer Instruction Manual

Model: Fritaire-01-BL-FBA

WELCOME TO YOUR FRITAIRE GLASS AIR FRYER

Congratulations on your purchase of the Fritaire Glass Air Fryer! This innovative appliance is designed to provide a healthier and more convenient way to prepare your favorite meals. Featuring a unique 360° glass viewing window, self-cleaning mode, and 6-in-1 cooking versatility, your Fritaire air fryer offers unparalleled ease of use and exceptional results. Its non-toxic, BPA-free, and Teflon-free glass bowl ensures safe and healthier cooking for you and your family. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, read these important safety instructions before operating the appliance.

- Always place the appliance on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts when handling hot materials.
- Ensure the glass bowl is fully cooled before washing. Do not submerge the top burner lid (electrical components) in water.
- Keep the appliance and its cord out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

WHAT'S INCLUDED

Your Fritaire Glass Air Fryer comes with the following components:

- **Main Unit:** Consists of the top lid with the heating element and control panel, and the transparent glass bowl.
- **Rotisserie Skewer:** For roasting whole chickens or larger cuts of meat.
- **Rack:** A versatile rack for various cooking needs.
- **Tumbler:** A rotating basket ideal for fries, nuts, or other small items.



Image: Fritaire Glass Air Fryer with all included accessories.

INITIAL SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean Before First Use:** Wash the glass bowl and all accessories (rotisserie skewer, rack, tumbler) with warm, soapy water. Rinse thoroughly and dry completely. The glass bowl is not dishwasher safe, but the accessories are. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit (lid with electrical components) in water.
3. **Placement:** Place the Fritaire air fryer on a flat, stable, heat-resistant surface, ensuring adequate ventilation around the unit. Keep it away from walls and other appliances.

OPERATING YOUR FRITAIRE AIR FRYER

The Fritaire Glass Air Fryer features a user-friendly touch control panel for easy operation.

General Operation

- **Power On/Off:** Press the power button to turn the unit on or off.
- **Temperature Adjustment:** Use the temperature controls (plus/minus buttons) to set your desired cooking temperature, up to 400°F.
- **Time Adjustment:** Use the time controls (plus/minus buttons) to set your desired cooking duration.
- **Pre-set Functions:** The control panel includes icons for various pre-set cooking functions (e.g., fries, chicken, fish, cake, dehydrate). Select the appropriate icon for automatic temperature and time settings, which can then be adjusted manually if needed.

6-in-1 Cooking Versatility

Your Fritaire air fryer is capable of performing multiple cooking functions:

- **Air Frying:** Ideal for achieving crispy textures with minimal oil. Perfect for fries, chicken wings, and vegetables.
- **Baking:** Suitable for small cakes, muffins, and other baked goods.
- **Roasting:** Great for roasting meats and vegetables to perfection.
- **Broiling:** Use for quick browning or melting cheese.
- **Reheating:** Efficiently warms up leftovers while maintaining texture.
- **Dehydrating:** Prepare healthy snacks like fruit chips or jerky.

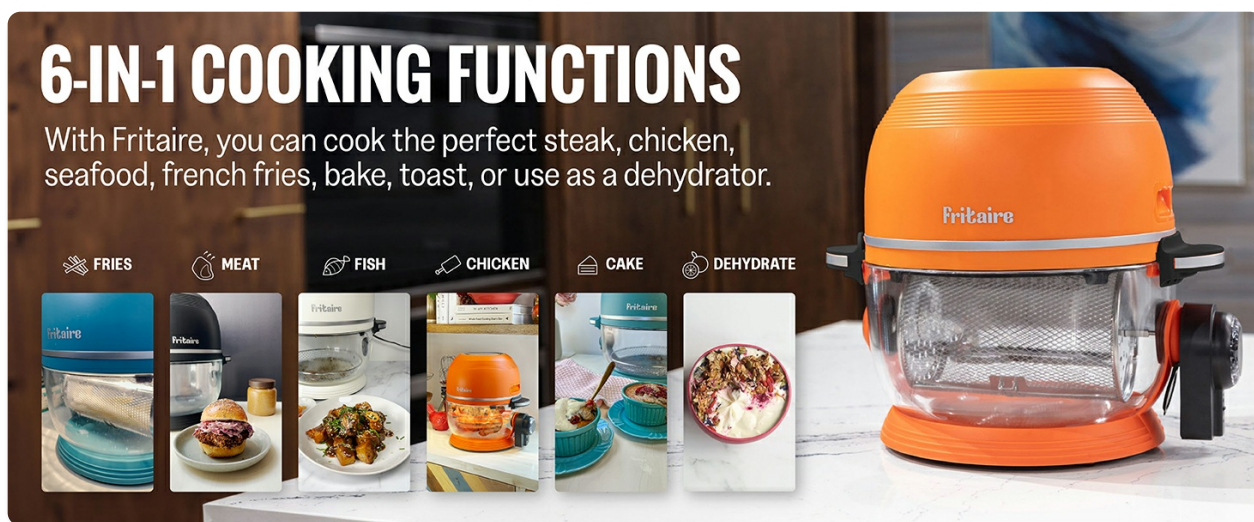


Image: Visual representation of the 6-in-1 cooking functions.

Using the Rotisserie Function

The rotisserie function allows for even cooking of larger items like whole chickens or for tumbling smaller items like fries.

- To use the rotisserie skewer, secure your food onto the skewer and insert it into the designated slots inside the glass bowl. Ensure it is properly balanced.

- For the tumbler, place items like fries or nuts inside the basket, close it securely, and insert it into the rotisserie slots.
- Attach the external motor to the side of the glass bowl to enable automatic rotation during cooking.



Image: A whole chicken being cooked using the rotisserie function.

Note: No official seller videos demonstrating the rotisserie function were available for embedding.

CLEANING AND MAINTENANCE

Self-Cleaning Mode

The Fritaire Glass Air Fryer features a convenient self-cleaning mode for effortless cleanup of the glass bowl.

1. After cooking and once the unit has cooled slightly (but is still warm), remove any food debris.

2. Fill the glass bowl with warm water and a small amount of dish soap.
3. Place the lid back on the unit and select the self-cleaning function (refer to the control panel icon, usually a water droplet or bubble icon).
4. The unit will heat the soapy water and circulate it to loosen food residue.
5. Once the cycle is complete, unplug the unit, carefully empty the soapy water, and rinse the glass bowl thoroughly with clean water. Dry completely before next use.



Image: The self-cleaning function in action, showing soapy water circulating in the bowl.

General Cleaning

- **Glass Bowl:** Hand wash the glass bowl with warm, soapy water. Do not place it in the dishwasher as it may affect its longevity.
- **Accessories:** The rotisserie skewer, rack, and tumbler are dishwasher safe for easy cleaning.
- **Main Unit (Lid):** Wipe the exterior of the lid with a damp cloth. Ensure no water enters the electrical components. Never immerse the lid in water.
- **Storage:** Store the clean and dry air fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your Fritaire Glass Air Fryer, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet malfunction; Unit not properly assembled.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Ensure the lid is correctly seated on the glass bowl.

Problem	Possible Cause	Solution
Food is not cooking evenly.	Overcrowding the basket; Incorrect temperature/time; Food not rotated.	Cook in smaller batches. Adjust temperature or cooking time. Shake or flip food halfway through cooking. Utilize rotisserie function for even cooking of suitable items.
White smoke coming from the appliance.	Grease residue from previous use; Fatty ingredients.	Clean the glass bowl and heating element thoroughly after each use. For fatty foods, place a small amount of water at the bottom of the bowl to reduce smoke.
Food is not crispy.	Not enough oil; Overcrowding; Incorrect temperature.	Lightly coat food with oil. Do not overcrowd the basket. Increase temperature or cooking time slightly.

PRODUCT SPECIFICATIONS

Feature	Specification
Model Name	Fritaire-01-BL-FBA
Capacity	5 Quarts
Output Wattage	1300 Watts
Voltage	60 Volts
Max Temperature Setting	400 Degrees Fahrenheit
Control Method	Touch
Product Dimensions	10.8"D x 13.9"W x 12.6"H
Materials	Stainless Steel, Glass, Plastic
Item Weight	15.42 pounds
Country of Origin	China

WARRANTY AND CUSTOMER SUPPORT

Fritaire stands behind the quality of its products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Fritaire website. If you have any questions, require technical assistance, or need to claim warranty service, please contact Fritaire customer support through the contact information provided on the product packaging or their official website.