

## LEHMANN LHODF-2811

# LEHMANN 9L XXL Dual Basket Air Fryer User Manual

Model: LHODF-2811

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the cord, plug, or appliance in water or other liquids. Do not operate the appliance with a damaged cord or plug.
- **Hot Surfaces:** Surfaces become hot during use. Always use oven mitts when handling hot components. Do not touch hot surfaces directly.
- **Ventilation:** Do not block any ventilation openings. Allow at least 10 cm of free space on the back and sides, and 10 cm above the appliance.
- **Placement:** Place the appliance on a stable, heat-resistant surface, away from walls and other heat-sensitive materials.
- **Children:** This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- **Usage:** Do not use the appliance for purposes other than those described in this manual. Do not leave the appliance unattended during operation.
- **Maintenance:** Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down completely before handling or cleaning.

## 2. PRODUCT OVERVIEW

The LEHMANN 9L XXL Dual Basket Air Fryer is designed for efficient and healthy cooking. It features two independent cooking zones, a powerful 2400W heating system, 12 preset programs, and WiFi connectivity for smart control.



Figure 2.1: Front view of the LEHMANN Dual Basket Air Fryer with included paper liners.

## 2.1 Key Features

- **Dual Independent Baskets:** Cook two different foods at different temperatures and times simultaneously.
- **9L XXL Capacity:** Large total capacity suitable for family-sized meals.
- **2400W Power:** Ensures rapid heating and efficient cooking.
- **12 Preset Programs:** One-touch cooking for popular dishes.
- **Adjustable Temperature:** Range from 80°C to 200°C.
- **Touch Screen Control:** Intuitive digital display for easy operation.
- **WiFi Connectivity:** Control and monitor cooking via a smartphone app.

## 2.2 Control Panel Overview



Figure 2.2: Detailed view of the control panel with key functions highlighted.

1. **Time/Temperature Adjustment:** Use '+' and '-' buttons to set cooking time and temperature.
2. **Preset Programs:** Icons representing various food types for quick selection.
3. **Power Button:** Turns the appliance on/off.
4. **WiFi Indicator:** Shows connection status.
5. **Light Button:** Activates the internal basket light.
6. **Shake Reminder:** Icon indicates when to shake the basket for even cooking.
7. **SYNC Function:** Synchronizes the finish time of both baskets.
8. **DUAL COOK Function:** Applies the settings of one basket to the other.
9. **Start/Stop Button:** Initiates or pauses the cooking process.

### 3. BEFORE FIRST USE

#### 3.1 Unpacking and Initial Cleaning

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wash the baskets and crisper plates thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely.
3. Wipe the inside and outside of the appliance with a damp cloth. Do not immerse the main unit in water.
4. Ensure all parts are dry before plugging in the appliance.

### **3.2 Placement**

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is adequate air circulation around the appliance (at least 10 cm clearance on all sides).
- Do not place the appliance near flammable materials or heat sources.

## **4. OPERATING INSTRUCTIONS**

---

### **4.1 Basic Operation**

1. Place the crisper plate into the basket and then insert the basket into the main unit.
2. Add your ingredients to the basket. Do not overfill.
3. Plug the power cord into a grounded wall outlet. The appliance will beep, and the display will illuminate.
4. Press the Power button (3) to turn on the air fryer.
5. Select the desired basket (1 or 2) if not already selected.
6. Adjust the temperature using the '+' and '-' buttons for temperature.
7. Adjust the cooking time using the '+' and '-' buttons for time.
8. Press the Start/Stop button to begin cooking.

### **4.2 Using Preset Programs**



Figure 4.1: The control panel showing various preset cooking program icons.

The air fryer comes with 12 preset programs for common foods. To use a preset program:

1. After turning on the appliance, select the desired basket.
2. Tap the icon corresponding to your desired food (e.g., fries, chicken, fish). The display will show the default time and temperature for that program.
3. You can adjust the time and temperature manually if needed.
4. Press the Start/Stop button to begin cooking.

### 4.3 Dual Zone Cooking

The dual basket design allows for versatile cooking. You can cook two different foods or larger quantities of one food.





Figure 4.2: Example of dual zone cooking with different foods and temperature settings.

- **SYNC Function:** To ensure both baskets finish cooking at the same time, set the cooking parameters for each basket. Then, press the SYNC button. The air fryer will automatically adjust the cooking times to synchronize completion.
- **DUAL COOK Function:** If you want to cook the same food in both baskets with identical settings, set the parameters for one basket, then press the DUAL COOK button. This will copy the settings to the second basket.

#### 4.4 WiFi Connectivity

Control your air fryer remotely using the dedicated smartphone app.



Figure 4.3: Controlling the air fryer via the smartphone application.

1. Download the LEHMANN Home app from your smartphone's app store.
2. Follow the in-app instructions to pair your air fryer with your device. Ensure your air fryer is powered on and your phone is connected to a 2.4GHz WiFi network.
3. Once connected, you can remotely start, stop, adjust settings, and monitor the cooking process.

## 5. COOKING TIPS

- **Preheating:** For best results, preheat the air fryer for 3-5 minutes before adding food.
- **Shaking:** For even cooking and crispiness, shake the baskets halfway through the cooking time, especially for smaller items like fries or nuggets. The air fryer may have a built-in 'Shake' reminder.
- **Oil:** While air frying requires little to no oil, a small amount of oil (1 tablespoon) can enhance crispiness for some foods.
- **Food Placement:** Arrange food in a single layer in the basket to allow hot air to circulate effectively. Avoid overcrowding.
- **Doneness:** Cooking times may vary based on food type, quantity, and desired crispiness. Always check food for doneness.



Figure 5.1: Illustration of the rapid hot air circulation technology for even cooking.

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

### 6.1 Cleaning the Baskets and Crisper Plates

1. Unplug the air fryer and allow it to cool completely before cleaning.
2. Remove the baskets and crisper plates. They are dishwasher safe, or you can wash them by hand with hot water, dish soap, and a non-abrasive sponge.
3. For stubborn food residue, soak the baskets in warm, soapy water for about 10 minutes before cleaning.
4. Ensure all parts are thoroughly dry before reassembling or storing.

### 6.2 Cleaning the Main Unit

1. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
2. Clean the interior of the appliance with a damp cloth. If necessary, a mild detergent can be used.
3. Never immerse the main unit in water or any other liquid.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your air fryer, refer to the table below for common problems and solutions.



Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet.
Food is not cooked evenly.	Baskets overcrowded; food not shaken.	Do not overcrowd baskets. Shake food halfway through cooking.
Food is not crispy.	Not enough oil (for some foods); temperature too low; cooking time too short.	Lightly brush food with oil. Increase temperature or cooking time.
White smoke coming from appliance.	Grease residue from previous use; fatty food.	Clean baskets and crisper plates thoroughly. Remove excess fat from food.
WiFi connection fails.	Incorrect network; app issue.	Ensure your phone is on a 2.4GHz WiFi network. Restart the app and air fryer. Refer to the app's help section.

## 8. TECHNICAL SPECIFICATIONS

Detailed specifications for the LEHMANN 9L XXL Dual Basket Air Fryer.




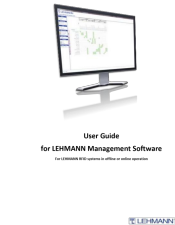



Figure 8.1: Product dimensions of the air fryer.

Specification	Value
Brand	LEHMANN
Model	LHODF-2811
Capacity	9 Liters
Wattage	2400 Watts
Voltage	230 Volts
Temperature Range	80°C - 200°C
Dimensions (L x W x H)	40.5 x 40.5 x 38.5 cm
Weight	7.3 Kilograms
Material	Metal, Plastic
Special Features	Temperature Control, Dual Zone Functionality, Non-stick Coating, Timer, WiFi Control

## 9. WARRANTY AND CUSTOMER SUPPORT

LEHMANN products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official LEHMANN website.

If you have any questions, require technical assistance, or need to report an issue, please contact LEHMANN customer support through the contact information provided in your product packaging or on the official LEHMANN website. Please have your model number (LHODF-2811) and purchase details ready when contacting support.

	<p><a href="#">Lehmann Chowmei Blender Ręczny - Instrukcja Obsługi</a></p> <p>Kompleksowa instrukcja obsługi blendera ręcznego Lehmann Chowmei, zawierająca szczegółowe informacje dotyczące bezpieczeństwa, użytkowania, czyszczenia i gwarancji. Dokument dostępny w wielu językach.</p>
	<p><a href="#">LEHMANN Management Software User Guide: Configuration and Operation</a></p> <p>Comprehensive user guide for LEHMANN Management Software (LMS), detailing configuration, operation, and management of LEHMANN RFID systems in both offline and online modes. Covers transponder and lock management, user settings, and system administration.</p>
	<p><a href="#">LEHMANN CNC Rotary Tables - Main Catalog Edition 4   PGD, E, DD Series</a></p> <p>LEHMANN's Main Catalog Edition 4 for CNC Rotary Tables. Explore PGD, E-Series, DD Series, and more. High-speed, backlash-free solutions for industrial automation and precision manufacturing.</p>
	<p><a href="#">Bell 505 Alert Service Bulletin 505-25-47: Tail Cone Identification Correction</a></p> <p>Official Bell 505 Alert Service Bulletin (ASB 505-25-47) providing instructions for verifying and correcting tail cone assembly identification plates and historical service records for Bell 505 helicopters. Includes compliance, material, and procedural steps.</p>
	<p><a href="#">Race for the Galaxy Rulebook</a></p> <p>A comprehensive rulebook for the board game Race for the Galaxy, detailing setup, gameplay phases (Explore, Develop, Settle, Consume, Produce), card powers, and game end conditions. Players build galactic empires by managing cards representing worlds and developments.</p>



## M410 Keypad lock (M410 TA03)

### Operating Instructions

Content	Page
General	1
Before installation - Read! Important! - The correct use of the device	1
Installation	2
Operation	3
Changing the code	4
Emergency operation - Unlocking the lock manually	5
Locking the lock manually	6
Resetting the lock	7
Locking the lock manually	8
Locking the lock manually	9
Locking the lock manually	10
Locking the lock manually	11
Locking the lock manually	12
Locking the lock manually	13
Locking the lock manually	14
Locking the lock manually	15
Locking the lock manually	16
Locking the lock manually	17
Locking the lock manually	18
Locking the lock manually	19
Locking the lock manually	20
Locking the lock manually	21
Locking the lock manually	22
Locking the lock manually	23
Locking the lock manually	24
Locking the lock manually	25
Locking the lock manually	26
Locking the lock manually	27
Locking the lock manually	28
Locking the lock manually	29
Locking the lock manually	30
Locking the lock manually	31
Locking the lock manually	32
Locking the lock manually	33
Locking the lock manually	34
Locking the lock manually	35
Locking the lock manually	36
Locking the lock manually	37
Locking the lock manually	38
Locking the lock manually	39
Locking the lock manually	40
Locking the lock manually	41
Locking the lock manually	42
Locking the lock manually	43
Locking the lock manually	44
Locking the lock manually	45
Locking the lock manually	46
Locking the lock manually	47
Locking the lock manually	48
Locking the lock manually	49
Locking the lock manually	50
Locking the lock manually	51
Locking the lock manually	52
Locking the lock manually	53
Locking the lock manually	54
Locking the lock manually	55
Locking the lock manually	56
Locking the lock manually	57
Locking the lock manually	58
Locking the lock manually	59
Locking the lock manually	60
Locking the lock manually	61
Locking the lock manually	62
Locking the lock manually	63
Locking the lock manually	64
Locking the lock manually	65
Locking the lock manually	66
Locking the lock manually	67
Locking the lock manually	68
Locking the lock manually	69
Locking the lock manually	70
Locking the lock manually	71
Locking the lock manually	72
Locking the lock manually	73
Locking the lock manually	74
Locking the lock manually	75
Locking the lock manually	76
Locking the lock manually	77
Locking the lock manually	78
Locking the lock manually	79
Locking the lock manually	80
Locking the lock manually	81
Locking the lock manually	82
Locking the lock manually	83
Locking the lock manually	84
Locking the lock manually	85
Locking the lock manually	86
Locking the lock manually	87
Locking the lock manually	88
Locking the lock manually	89
Locking the lock manually	90
Locking the lock manually	91
Locking the lock manually	92
Locking the lock manually	93
Locking the lock manually	94
Locking the lock manually	95
Locking the lock manually	96
Locking the lock manually	97
Locking the lock manually	98
Locking the lock manually	99
Locking the lock manually	100

## [Lehmann M410 Keypad Lock Operating Instructions](#)

Comprehensive operating instructions for the Lehmann M410 Keypad Lock (M410 TA03), covering installation, operation, maintenance, and troubleshooting.