

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [carori](#) /

> [Carori 14-in-1 Air Fryer User Manual](#)

carori KZD55-200E-A

Carori 14-in-1 Air Fryer User Manual

Model: KZD55-200E-A

1. SAFETY INSTRUCTIONS

Please read all instructions carefully before use and retain for future reference.

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local voltage before connecting.
- Supervise children closely when the appliance is in use.
- Do not operate the air fryer if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not block any ventilation openings.
- Do not place food directly on the heating elements. Always use the frying basket and rack.
- Exercise extreme caution when removing the hot frying basket or rack.
- The air fryer features an automatic shut-off and a memory function that pauses cooking when the basket is removed and resumes when reinserted.
- A protective net is installed to prevent accidental contact with heating elements.

2. PRODUCT OVERVIEW

The Carori 14-in-1 Air Fryer is designed for versatile and efficient cooking, offering a healthier alternative to traditional frying with its dual heating technology and large capacity.

Components

- Air Fryer Main Unit
- Frying Basket

- Rack
- Protective Net
- Recipe Book
- User Manual



Figure 2.1: Main components of the Carori Air Fryer.

Key Features

- **Dual Heating Technology:** Features 360° upper and bottom heating for even cooking without the need for flipping.
- **14 Preset Menus:** Includes pre-programmed settings for common foods like chicken wings, steak, fries, pizza, bread, cake, and more.
- **Transparent Viewing Window:** Allows monitoring of cooking progress without opening the basket.
- **1700W Quick and Even Cooking:** Powerful heating elements and an 11-blade fan ensure rapid air circulation for faster and more uniform results.
- **6 Qt Large Capacity:** Spacious square basket design accommodates family-sized meals.

- **95% Less Oil:** Utilizes hot air for cooking, significantly reducing oil usage compared to traditional frying.
- **48dB Ultra-Quiet Operation:** Designed for a peaceful cooking experience with minimal noise.
- **Dishwasher-Safe Basket and Rack:** Non-stick components are easy to clean.

1700W Fast and No-Flip Cooking

360° Dual heating design,
no flip needed saves 30% time for consistent taste



CARORI

CARORI

CARORI

CARORI

CARORI

Figure 2.2: Dual Heating Technology for even cooking.

14 Preset Functions



Air fry, bake, dehydrate, reheat, defrost, and more, cook a variety of dishes with one touch



Shrimp



Pizza



Steak



Fries



Bread



CARORI

CARORI

CARORI

CARORI

CARORI

Figure 2.3: The 14 preset cooking functions for one-touch operation.

6 Qt Square Basket

Cook more food at one time, perfect for family dinners, meal prep, or hosting friends



CARORI

CARORI

CARORI

CARORI

CARORI

Figure 2.4: Transparent viewing window for monitoring food.

95% Less Oil

Enjoy healthier, crispy foods with less oil than traditional frying



Figure 2.5: The spacious 6-quart square basket.

3. SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Initial Cleaning:** Before first use, wash the frying basket, rack, and protective net with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 6 inches (15 cm) of clear space around the back and sides of the unit for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The air fryer is now ready for use.

4. OPERATING INSTRUCTIONS

Control Panel Overview

The air fryer features a clear LED touch panel with intuitive icons for various functions and presets.



Figure 4.1: Clear LED Touch Panel.

Using Preset Functions

1. Place food into the frying basket and insert it into the main unit.
2. Press the 'Menu' button repeatedly to cycle through the 14 preset cooking functions. The corresponding icon will light up.
3. Once you select a preset, the air fryer will automatically display the recommended time and temperature.
4. Press the 'Start/Pause' button to begin cooking.

Customizing Time and Temperature (DIY Mode)

1. Place food into the frying basket and insert it into the main unit.
2. Press the 'DIY' button.
3. Use the '+' and '-' buttons to adjust the desired temperature.
4. Press the 'Time/Temp' button to switch to time adjustment.
5. Use the '+' and '-' buttons to adjust the desired cooking time.
6. Press the 'Start/Pause' button to begin cooking.

Monitoring Cooking with the Viewing Window

The transparent viewing window allows you to observe your food as it cooks without interrupting the process. This helps prevent overcooking or undercooking and ensures optimal crispiness.

5. COOKING GUIDE

The following table provides general guidelines for common foods. Cooking times and temperatures may vary based on food quantity, thickness, and desired crispiness. Always ensure food is cooked to a safe internal temperature.

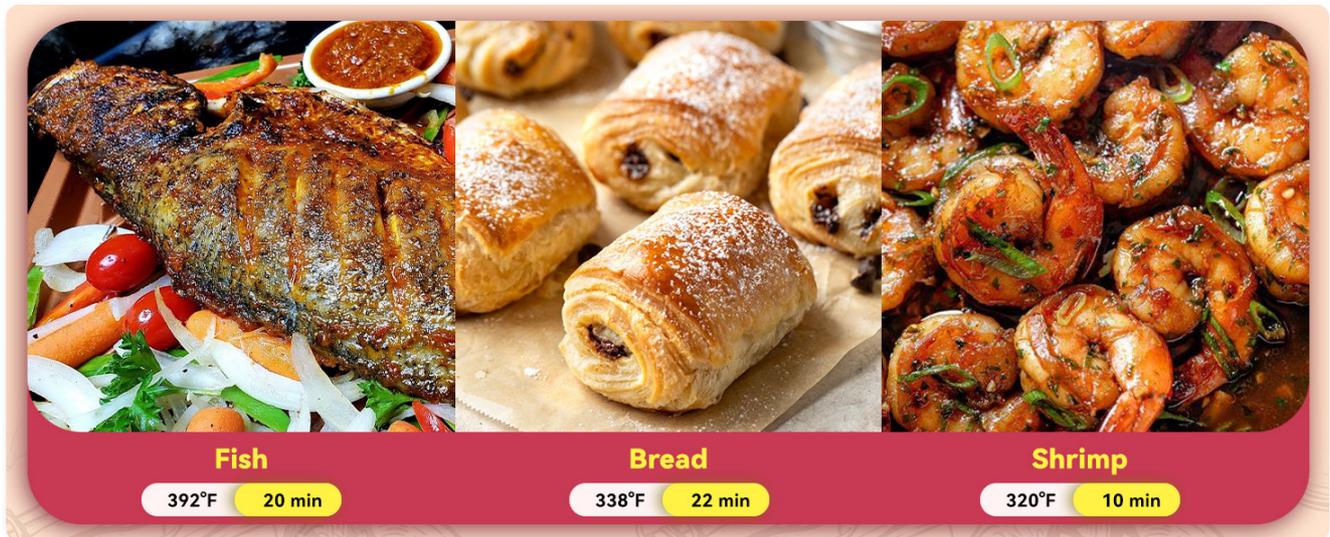


Figure 5.1: Example cooking presets for common foods.

Common Food Cooking Guidelines

Food Item	Temperature	Time	Notes
Chicken Wings	320°F (160°C)	17 min	Shake basket halfway
Steak	374°F (190°C)	10 min	Adjust for desired doneness
Fries (Frozen)	392°F (200°C)	15 min	Shake basket halfway
Pizza (Frozen)	302°F (150°C)	12 min	Check for melted cheese
Shrimp	320°F (160°C)	10 min	Cook until pink and opaque
Bread	338°F (170°C)	22 min	For rolls or small loaves

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your Carori Air Fryer.

Cleaning Instructions

- Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
- Dishwasher Safe Parts:** The non-stick frying basket and rack are dishwasher safe. For best results and to prolong the non-stick coating, hand washing with warm, soapy water is recommended.
- Cleaning the Interior:** Wipe the interior of the air fryer with a damp cloth. For stubborn residue, use a non-abrasive sponge with a small amount of mild detergent. Ensure no water enters the main unit.
- Cleaning the Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Protective Net:** The protective net can be removed for cleaning if necessary. Ensure it is securely reinstalled before next use.

Minimal Noise Cooking



Enjoy delicious meals without the disruptive noise of traditional fryers



CARORI

CARORI

CARORI

CARORI

CARORI

Figure 6.1: Dishwasher-safe basket and rack for easy cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following common problems and solutions:

Troubleshooting Guide

Problem	Possible Cause	Solution
Air fryer does not turn on	Not plugged in; Power outlet issue; Basket not fully inserted	Ensure plug is firmly in outlet; Check circuit breaker; Push basket fully into unit until it clicks

Problem	Possible Cause	Solution
Food not cooked evenly	Overcrowding; Incorrect temperature/time	Cook in smaller batches; Adjust temperature and time as needed; Shake or flip food halfway through cooking (though dual heating reduces this need)
Food not crispy	Too much moisture; Not enough oil (for certain foods); Incorrect temperature/time	Pat food dry before air frying; Lightly coat with oil if desired; Increase temperature or cooking time slightly
White smoke coming from unit	Grease residue; Fatty foods	Clean basket and interior thoroughly; For fatty foods, add a small amount of water to the bottom of the outer pan to prevent smoke
Appliance smells during first use	Manufacturing residue	This is normal and will dissipate after a few uses. Ensure good ventilation.

8. SPECIFICATIONS

Feature	Detail
Brand	carori
Model Name	KZD55-200E-A
Capacity	6 Quarts
Output Wattage	1700 Watts
Voltage	120 Volts
Product Dimensions	13.58"D x 13.58"W x 14.57"H
Item Weight	12.72 pounds
Color	Grayish-Black
Material	Stainless Steel (Internal), Plastic (External)
Control Method	Touch
Special Feature	Automatic Shut-Off, Stain Resistant
Air Frying Technology	Dual Heating
Nonstick Coating	Yes
Dishwasher Safe	Yes

9. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Carori website. You may also find additional support resources and FAQs there.