

## REACHER CR7WCA

# REACHER Digital Alarm Clock Radio with Sleep Sound Machine and Night Light

Model: CR7WCA

User Manual

### INTRODUCTION

Thank you for purchasing the REACHER Digital Alarm Clock Radio (Model CR7WCA). This device is designed to enhance your sleep and wake-up experience by combining an alarm clock, FM radio, sleep sound machine, and a multi-color night light. Please read this manual carefully to ensure proper use and optimal performance.

### SAFETY INFORMATION

- Do not expose the device to water or excessive moisture.
- Avoid placing the device near heat sources or in direct sunlight.
- Use only the provided power adapter.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Keep out of reach of children.

### PACKAGE CONTENTS

- REACHER Digital Alarm Clock Radio (CR7WCA)
- Power Adapter
- User Manual

### PRODUCT OVERVIEW

The REACHER CR7WCA combines multiple functions in a compact design, ideal for your bedside table.



**Image:** Front view of the REACHER Digital Alarm Clock Radio, displaying the time 12:05 PM with a warm glowing night light at the base.



Not solid wood, wood-look finish

**Image:** The alarm clock radio placed on a wooden table, illustrating its versatile functions as an alarm clock, FM radio, nightlight, and sound machine. Note: Not solid wood, wood-look finish.

### Control Buttons and Ports



**Image:** A diagram illustrating the control buttons on the top panel (e.g., Time Set, Alarm Set, Snooze) and the ports on the back (DC 5V power input, radio antenna, display dimmer, nightlight brightness control).

- **Top Panel Buttons:** Sleep Sound On/Off, Music Selection, Volume Up/Down, Time Set, Alarm Set/On/Off, Snooze/Nightlight Switch, FM Radio On/Off/Auto Scan.
- **Back Panel Ports/Controls:** DC 5V Power Input, Radio Antenna, Display Dimmer, Nightlight Brightness Control.

## SETUP

1. **Power Connection:** Connect the provided power adapter to the DC 5V input port on the back of the clock and plug it into a wall outlet. The display will light up.
2. **Battery Backup:** The device includes a CR2023 battery (pre-installed) to maintain time and alarm settings during a power outage. This battery does not power the display or functions.
3. **Initial Time Setting:**
  - Press and hold the 'Time Set' button. The hour digits will flash.
  - Use the 'Volume Up/Down' buttons to adjust the hour.

- Press 'Time Set' again to confirm the hour and move to minutes. Adjust minutes using 'Volume Up/Down'.
- Press 'Time Set' once more to save the time.

## OPERATING INSTRUCTIONS

---

### Setting the Alarm

1. **Set Alarm Time:**

- Press and hold the 'Alarm Set' button. The alarm hour digits will flash.
- Use the 'Volume Up/Down' buttons to adjust the alarm hour.
- Press 'Alarm Set' again to confirm the hour and move to minutes. Adjust minutes using 'Volume Up/Down'.
- Press 'Alarm Set' once more to save the alarm time.

2. **Select Alarm Sound:** After setting the time, the alarm sound icon will flash. Use the 'Music Selection' button to cycle through the 9 available alarm sounds (8 natural sounds + beep) or select FM radio.

3. **Adjust Alarm Volume:** Use the 'Volume Up/Down' buttons to set the desired alarm volume (20-105dB).

4. **Activate/Deactivate Alarm:** Briefly press the 'Alarm Set' button to toggle the alarm on or off. An alarm icon will appear on the display when active.



# 9 Alarm Sounds

Wake up feeling energized with 8 soothing sounds or your favorite radio



**Image:** An illustration of the nine available alarm sounds, including various natural sounds and classic alarm tones, designed for a gentle wake-up.

## FM Radio Operation

1. **Turn On/Off:** Press the 'FM Radio On/Off/Auto Scan' button to turn the FM radio on or off.
2. **Auto Scan and Save:** When the radio is on, press and hold the 'FM Radio On/Off/Auto Scan' button to automatically scan for available stations and save them as presets.
3. **Change Stations:** Use the 'Volume Up/Down' buttons to cycle through saved FM stations.
4. **Adjust Volume:** Use the 'Volume Up/Down' buttons to adjust the radio volume (0-30 levels).

# FM Radio



76-108  
MHz



0-30  
Volume Levels



0-180  
min Auto-off Timer



**Image:** Details of the FM Radio function, including frequency range (76-108 MHz), adjustable volume (0-30 levels), and an auto-off timer (0-180 minutes).

## Sleep Sound Machine

1. **Turn On/Off:** Press the 'Sleep Sound On/Off' button to activate or deactivate the sleep sounds.
2. **Select Sound:** Use the 'Music Selection' button to cycle through the 24 available soothing sounds (white noise, fan sounds, baby favorites, nature sounds).
3. **Adjust Volume:** Use the 'Volume Up/Down' buttons to set the desired volume for the sleep sounds.
4. **Sleep Timer:** The sleep timer allows the sound to play for a set duration before automatically turning off. Available settings typically include 30, 60, 90, 120, 150, or 180 minutes. Refer to the specific timer button or sequence on your device.

# 24 Soothing Sounds



**6** white  
noise sounds



**4** fan  
sounds



**2** baby  
favorites



**12**  
nature sounds

**Image:** An internal view of the clock radio, emphasizing its speaker and the variety of 24 soothing sounds available, categorized into white noise, fan sounds, baby favorites, and nature sounds.

## Night Light

1. **Turn On/Off:** Briefly press the 'Snooze/Nightlight Switch' button to turn the night light on or off.
2. **Change Color:** Press the 'Snooze/Nightlight Switch' button repeatedly to cycle through the 7 available colors.
3. **Adjust Brightness:** Use the 'Nightlight Brightness Control' on the back of the device to adjust the intensity of the night light.



# 7 – Color Bottom Light



Dimmable



On/Off option



**Image:** The clock radio featuring its 7-color dimmable bottom night light, which can be turned on or off to create a desired ambiance.

## Display Brightness

The LED display brightness can be adjusted from 0% to 100% to suit your preference and avoid disturbing sleep.

1. **Adjust Brightness:** Use the 'Display Dimmer' control on the back of the device to slide and set the desired display brightness.

# Dimmable Display

Easy to read during the day, no glare at night



**Image:** The clock's display at different brightness settings, from 0% to 100%, illustrating the dimmable LED feature for comfortable viewing day and night.

## Snooze Function

When the alarm sounds, briefly press the 'Snooze/Nightlight Switch' button to activate the 9-minute snooze function. The alarm will sound again after 9 minutes.

## MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** If storing for an extended period, disconnect from power and keep in a cool, dry place.
- **Battery Replacement:** The CR2023 backup battery should last for several years. If settings are lost during a power outage, replace the battery by opening the battery compartment on the bottom of the unit.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Power adapter not connected or faulty.	Ensure power adapter is securely connected to the device and a working power outlet.
Alarm does not sound.	Alarm is not activated or volume is too low.	Check if the alarm icon is displayed. Increase alarm volume.
FM radio reception is poor.	Antenna not extended or interference.	Fully extend the radio antenna. Try repositioning the device to reduce interference.
Time/settings are lost after power outage.	CR2023 backup battery is depleted.	Replace the CR2023 backup battery.

## SPECIFICATIONS






- **Brand:** REACHER
- **Model:** CR7WCA
- **Material:** Plastic
- **Color:** Oak Wood finish
- **Display Type:** LED
- **Display Brightness:** 0-100% Dimmable
- **Night Light:** 7 Colors, Dimmable
- **Alarm Sounds:** 9 options (8 natural sounds + beep/FM radio)
- **Sleep Sounds:** 24 options (White Noise, Fan, Baby Favorites, Nature Sounds)
- **FM Radio Frequency:** 76-108 MHz
- **Power Source:** Corded (DC 5V adapter)
- **Backup Battery:** CR2023 (for settings memory)
- **Approximate Dimensions (Package):** 13.9 x 9.4 x 8 cm
- **Approximate Weight (Package):** 0.49 kg

## WARRANTY AND SUPPORT

REACHER products come with a standard manufacturer's warranty. For specific warranty details, technical support, or any questions regarding your device, please refer to the contact information provided with your purchase or visit the official REACHER website.

For customer service inquiries, please retain your purchase receipt and product model number (CR7WCA).

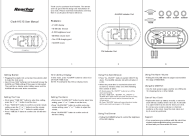

 <p>Reacher ACR-2P Radio Alarm Clock USER MANUAL</p>	<p><a href="#">Reacher ACR-2P Radio Alarm Clock User Manual</a></p> <p>Comprehensive user manual for the Reacher ACR-2P Radio Alarm Clock, covering features like FM radio, dual alarms, snooze, dimmer, USB charging, thermometer, sleep timer, and detailed instructions for setting time, alarms, and using radio functions.</p>
	<p><a href="#">Reacher ACR-W YM-186 Alarm Clock User Manual</a></p> <p>User manual for the Reacher ACR-W YM-186 alarm clock radio, detailing features like FM radio, wireless charging, USB charging, alarm settings, time setting, snooze, sleep timer, dimmer, and battery backup.</p>
	<p><a href="#">Reacher C50 LED Digital Alarm Clock User Manual</a></p> <p>User manual for the Reacher C50 LED Digital Alarm Clock. Provides instructions on setting time, alarms, using the night light, timer, snooze function, and safety guidelines.</p>
	<p><a href="#">Reacher K2 User Manual: Bedside Clock and Sound Machine Guide</a></p> <p>Comprehensive user manual for the Reacher K2 bedside clock and sound machine, detailing setup, features, and operation of its alarm, sound, and light functions.</p>
	<p><a href="#">Reacher Clock-A1C1S Digital Alarm Clock User Manual</a></p> <p>Comprehensive user manual for the Reacher Clock-A1C1S digital alarm clock, covering setup, time and alarm settings, snooze, volume, dimmer, USB charging, and care instructions.</p>
	<p><a href="#">Reacher ACR-WS Alarm Clock User Manual</a></p> <p>User manual for the Reacher ACR-WS alarm clock, detailing features such as FM radio, wireless charging, USB charging, alarm settings, snooze function, and dimmer. Includes instructions for setup, operation, and care.</p>