



Manuals.plus /

› Netzu /

› Netzu K028B Digital Alarm Clock with Night Light User Manual

Netzu K028B

Netzu K028B Digital Alarm Clock with Night Light User Manual

Model: K028B | Brand: Netzu

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Netzu K028B Digital Alarm Clock. Retain this manual for future reference.

- Do not expose the device to water or excessive moisture.
- Use only the provided power adapter and cable.
- Keep the device away from direct sunlight and heat sources.
- Do not attempt to disassemble or repair the device yourself. Contact customer support if service is required.
- Ensure the device is placed on a stable, flat surface.

PRODUCT OVERVIEW

The Netzu K028B is a digital alarm clock designed with a night light, adjustable display brightness, multiple alarm tones, a snooze function, and a nap timer. It features a power-off memory function to retain settings during power interruptions.

Package Contents

- Netzu K028B Digital Alarm Clock
- Power Adapter
- USB Power Cable
- User Manual



A pink digital alarm clock shaped like a toaster with a glowing toast-shaped night light. The digital display shows '12:38 AM'.


SETUP

Power Connection

Connect the provided USB power cable to the clock's power input port and then plug the power adapter into a standard electrical outlet. The clock requires continuous mains power for operation. A built-in CR2025 battery provides backup for settings during power outages, but does not power the clock itself.

KIDS ALARM CLOCK

Ideal gifts for your loved ones

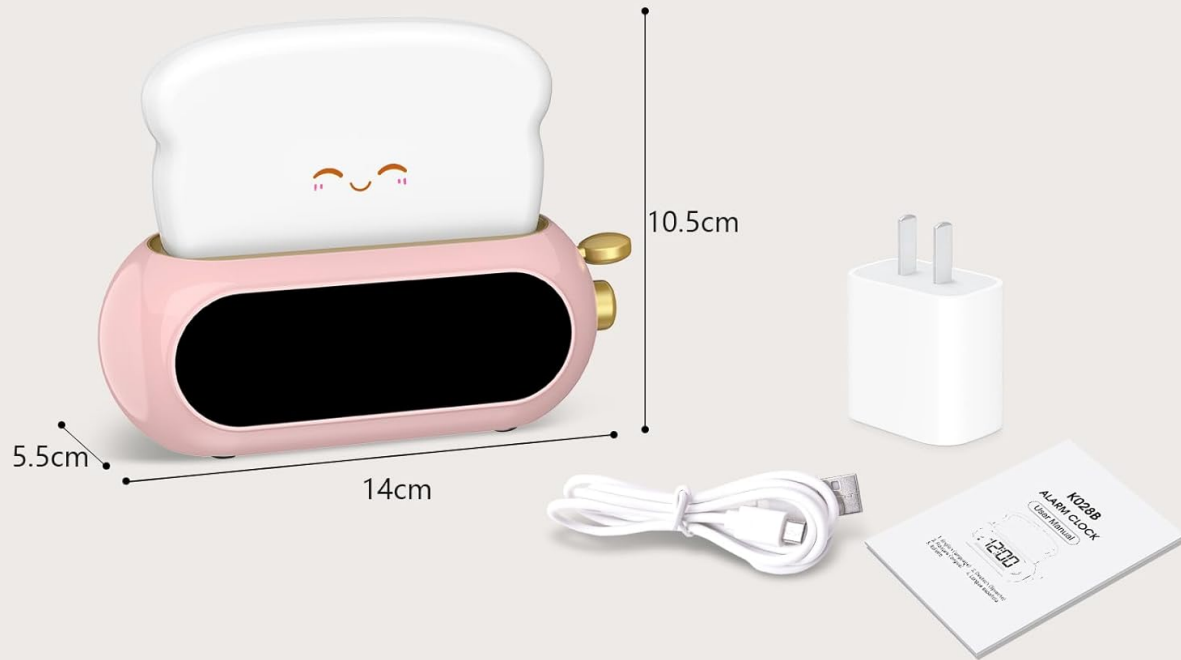

ALARM CLOCK



NIGHT LIGHT



NAP TIMER



CHILD LOCK

The alarm clock plugged into a wall outlet, emphasizing its corded electric power source and the included charger.

Initial Time Setting

Upon first power-up or after a prolonged power disconnection without battery backup, the time may need to be set. Refer to the 'Operating Instructions' section for detailed steps on setting the time.

OPERATING INSTRUCTIONS

Display Brightness Adjustment

The clock display offers 5 levels of brightness. Locate the brightness control button (often marked with a sun icon) and press it repeatedly to cycle through the brightness levels until your desired setting is reached.

Night Light Function

The night light, shaped like a piece of toast, also has 5 adjustable brightness levels. Press the dedicated night light button (often a light bulb icon or the 'toast' lever) to turn it on/off and cycle through its brightness settings.

DIMMABLE NIGHTLIGHT ALARM CLOCK

Find your most comfortable brightness



An image demonstrating the 5 levels of night light and clock display brightness, with a child sleeping peacefully in the background.

Setting Alarms

To set an alarm:

1. Press the 'Alarm Set' button (often an alarm clock icon). The alarm time will flash.
2. Use the '+' and '-' buttons to adjust the hour and minute.
3. Press 'Alarm Set' again to confirm the time.
4. You can then select from 10 available alarm tones and 10 volume settings using the respective buttons.
5. The alarm icon will appear on the display, indicating it is active.

10 SOOTHING ALARM TONES WITH 10 VOLUMES

Effectively wakes you up to a refreshed day

Volume adjustable from L1-L10



The alarm clock showing different alarm tone icons like piano, beep, ring, music, chime, and lullaby, indicating 10 available tones and 10 volume levels.

Snooze Function

When the alarm sounds, press the large snooze button (often the golden lever on the side) to temporarily silence the alarm for 9 minutes. The alarm will sound again after the snooze period. To turn off the alarm completely, press any other button.



LOVELY SNOOZE BUTTON

Snooze for an extra 9 minutes and wake up refreshed



A child sleeping in bed with the alarm clock on a bedside table. An inset shows a finger pressing the golden snooze button, indicating a 9-minute snooze function.

Nap Timer

The nap timer allows you to set a countdown for short periods. Press the 'Nap Timer' button (often a timer icon) and use the '+' and '-' buttons to select a duration (e.g., 15, 30, 60, 90, 120 minutes). The timer will begin counting down. An alarm will sound when the timer reaches zero.

NAP TIMER

Better manage fragmented schedules.



Three panels showing children engaged in activities like playing, drawing, and sleeping, illustrating the use of the nap timer with options for 15, 30, 60, 90, and 120 minutes.

Child Lock

To prevent accidental changes to settings, activate the child lock function. Locate the 'Child Lock' button (often a lock icon) and press and hold it for a few seconds until the lock icon appears on the display. This will disable all functions except the night light and screen brightness adjustment. To deactivate, press and hold the 'Child Lock' button again.

MAINS POWERED ALARM CLOCK

Reliable power supply and emergency battery memory function



Plug-in Use

- ◀ Comes with a plug and power cable



Battery Memory

- ◀ Included 1*CR2025 cell battery

An image displaying the dimensions of the alarm clock (14cm width, 10.5cm height, 5.5cm depth) and icons for its features: Alarm Clock, Night Light, Nap Timer, and Child Lock. The power adapter and USB cable are also shown.

MAINTENANCE

Cleaning

To clean the device, unplug it from the power source. Use a soft, dry cloth to wipe the exterior. Do not use abrasive cleaners, solvents, or immerse the device in water.

Battery Replacement (for backup battery)

The Netzu K028B uses a CR2025 button cell battery for power-off memory. If settings are no longer retained during power interruptions, the battery may need replacement. To replace, carefully open the battery compartment on the underside of the clock, remove the old battery, and insert a new CR2025 battery with the correct polarity. Dispose of old batteries responsibly.

TROUBLESHOOTING

- **Clock not turning on:** Ensure the power cable is securely connected to both the clock and a working electrical outlet. Verify the power adapter is functioning.

- **Display is dim or off:** Check the display brightness settings. If the clock is unplugged, the display will be off as the backup battery only saves settings, not powers the display.
- **Alarm not sounding:** Verify that the alarm is set and active (check for the alarm icon on the display). Ensure the alarm volume is not set to zero.
- **Settings not saving:** The CR2025 backup battery may be depleted. Replace the battery as described in the 'Maintenance' section.
- **Buttons unresponsive:** Check if the child lock function is activated. Deactivate it if necessary.

SPECIFICATIONS

Brand	Netzu
Model Number	K028B
Display Type	Digital
Power Source	Corded Electric
Backup Battery	1 x CR2025 (for memory only)
Material	Plastic
Product Dimensions	6.3"W x 3.15"H (approximately 14cm x 10.5cm x 5.5cm)
Item Weight	10.2 ounces (0.29 Kilograms)
Special Features	Adjustable Brightness, Night Light, 10 Alarm Tones, Snooze, Nap Timer, Child Lock

WARRANTY INFORMATION

This product is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your package or contact Netzu customer support for specific details regarding warranty coverage and terms.

SUPPORT

For further assistance, technical support, or inquiries regarding your Netzu K028B Digital Alarm Clock, please visit the official Netzu website or contact their customer service department. Contact details can typically be found on the product packaging or the brand's online presence.