

[manuals.plus](#) /

› [REACHER](#) /

› [Reacher R9BT-RA-DE Magnetic Wireless Charger, Digital Alarm Clock, FM Radio, and Bluetooth Speaker User Manual](#)

REACHER R9BT-RA-DE

Reacher R9BT-RA-DE Magnetic Wireless Charger, Digital Alarm Clock, FM Radio, and Bluetooth Speaker User Manual

Model: R9BT-RA-DE | Brand: REACHER

INTRODUCTION

This user manual provides detailed instructions for the Reacher R9BT-RA-DE, a versatile 4-in-1 device designed for convenience and functionality. It integrates a 15W magnetic wireless charger, a digital alarm clock with natural sound options, an FM radio with 40 presets, and a 10W Bluetooth 5.3 speaker. Please read this manual thoroughly to ensure proper setup, operation, and maintenance of your device.

4-in-1 Stilvolle Uhr

Laden, Aufwachen, Abspielen & Zuhören



Drahtloses
Ladegerät



Bluetooth
Lautsprecher



FM-
Radio



Wecker



Image: The Reacher R9BT-RA-DE highlighting its four core functionalities: wireless charging, Bluetooth speaker, FM radio, and alarm clock, presented as a stylish clock.

PRODUCT OVERVIEW

The Reacher R9BT-RA-DE is engineered to simplify your daily routine by combining multiple essential functions into one elegant unit. Its design features a grey textile body with a wood-look top panel, suitable for various interior styles.

Key Features:

- **15W Magnetic Wireless Charging:** Fast and secure charging for compatible smartphones, especially iPhone 12-16 series with magnetic alignment.
- **Digital Alarm Clock:** Features a dimmable LED display (0-100%), 12/24-hour format, 6 natural alarm sounds (bird, sea, beep, wind chimes, piano, radio), and a 9-minute snooze function.
- **FM Radio:** Stable reception (87.5-108 MHz) with an extendable antenna, supporting up to 40 preset stations and both manual and automatic tuning.
- **Bluetooth 5.3 Speaker:** 10W stereo speakers deliver 360° sound, offering stable connection up to 10 meters for

streaming music and podcasts. Automatic time synchronization upon phone connection.

- **User-Friendly Design:** Intuitive button layout on the top panel and rotary controls on the back for volume and display brightness.



Image: The Reacher R9BT-RA-DE in operation, showing a smartphone wirelessly charging on its magnetic pad and the digital clock display.

SETUP

1. Unpacking and Placement:

- Carefully remove the device from its packaging.
- Place the device on a stable, flat surface, such as a bedside table or office desk.
- Ensure adequate ventilation around the device.

2. Power Connection:

- Connect the provided power cable to the DC input port on the back of the device.
- Plug the other end of the power cable into a standard wall outlet.
- The display will illuminate, indicating the device is powered on.

3. Initial Time Setting:

- Upon initial power-on, the time may need to be set manually or will synchronize automatically when connected via

Bluetooth to a smartphone.

- Refer to the "Alarm Clock and Display" section for manual time adjustment instructions.

OPERATING INSTRUCTIONS

1. Wireless Charging:

- Place your Qi-compatible smartphone (e.g., iPhone 12-16 series) on the magnetic charging pad located on the top surface of the device.
- The strong magnet will automatically align your phone for optimal charging.
- Charging will begin automatically. The device supports up to 15W fast charging.
- Ensure your phone case is compatible with MagSafe and is not thicker than 8mm for efficient charging.



Image: Illustrates the magnetic alignment feature for wireless charging, showing a phone being placed on the charging pad.

Blitzschnell Aufladen

Erleben Sie 15W Schnellladen und tanken Sie Energie in kürzester Zeit



Image: Demonstrates the 15W fast wireless charging capability of the device.

2. FM Radio:

- Extend the antenna located at the back of the device for optimal reception.
- Press the **FM** button to switch to FM radio mode.
- **Automatic Tuning:** Press and hold the **Scan** button (or similar, refer to device buttons) to automatically scan and save available stations (up to 40 presets).
- **Manual Tuning:** Use the **Tune +/-** buttons (or rotary knob) to manually adjust the frequency (87.5-108 MHz).
- **Selecting Presets:** Use the **Preset +/-** buttons to cycle through saved stations.
- Adjust the volume using the rotary knob on the back of the device.

Mit nur einem Tipp zu Ihrem Lieblings-Radiosender

Schneller Scan, einfache Speicherung



Manuell Tuning



Auto Tuning



40 Speicher



Image: Visual guide to the FM radio features, showing options for manual and automatic tuning, and the capacity for 40 preset stations.

3. Bluetooth Speaker:

- Press the **Bluetooth** button to enter Bluetooth pairing mode. The Bluetooth icon on the display will flash.
- On your smartphone or other Bluetooth-enabled device, search for "R9BT-RA-DE" (or similar device name) in the Bluetooth settings.
- Select the device to pair. Once connected, the Bluetooth icon will stop flashing and remain solid.
- You can now stream audio from your connected device.
- The device features 10W stereo speakers for 360° sound and Bluetooth 5.3 for stable connection up to 10 meters.
- When connected, the device may automatically synchronize its time with your phone.
- Adjust the volume using the rotary knob on the back of the device (30 volume levels available).

360° Stereoklang

Erfüllen Sie Ihren Raum mit Musik



Stereo-Duo



Auto-Zeitabgleich



Bluetooth 5.3

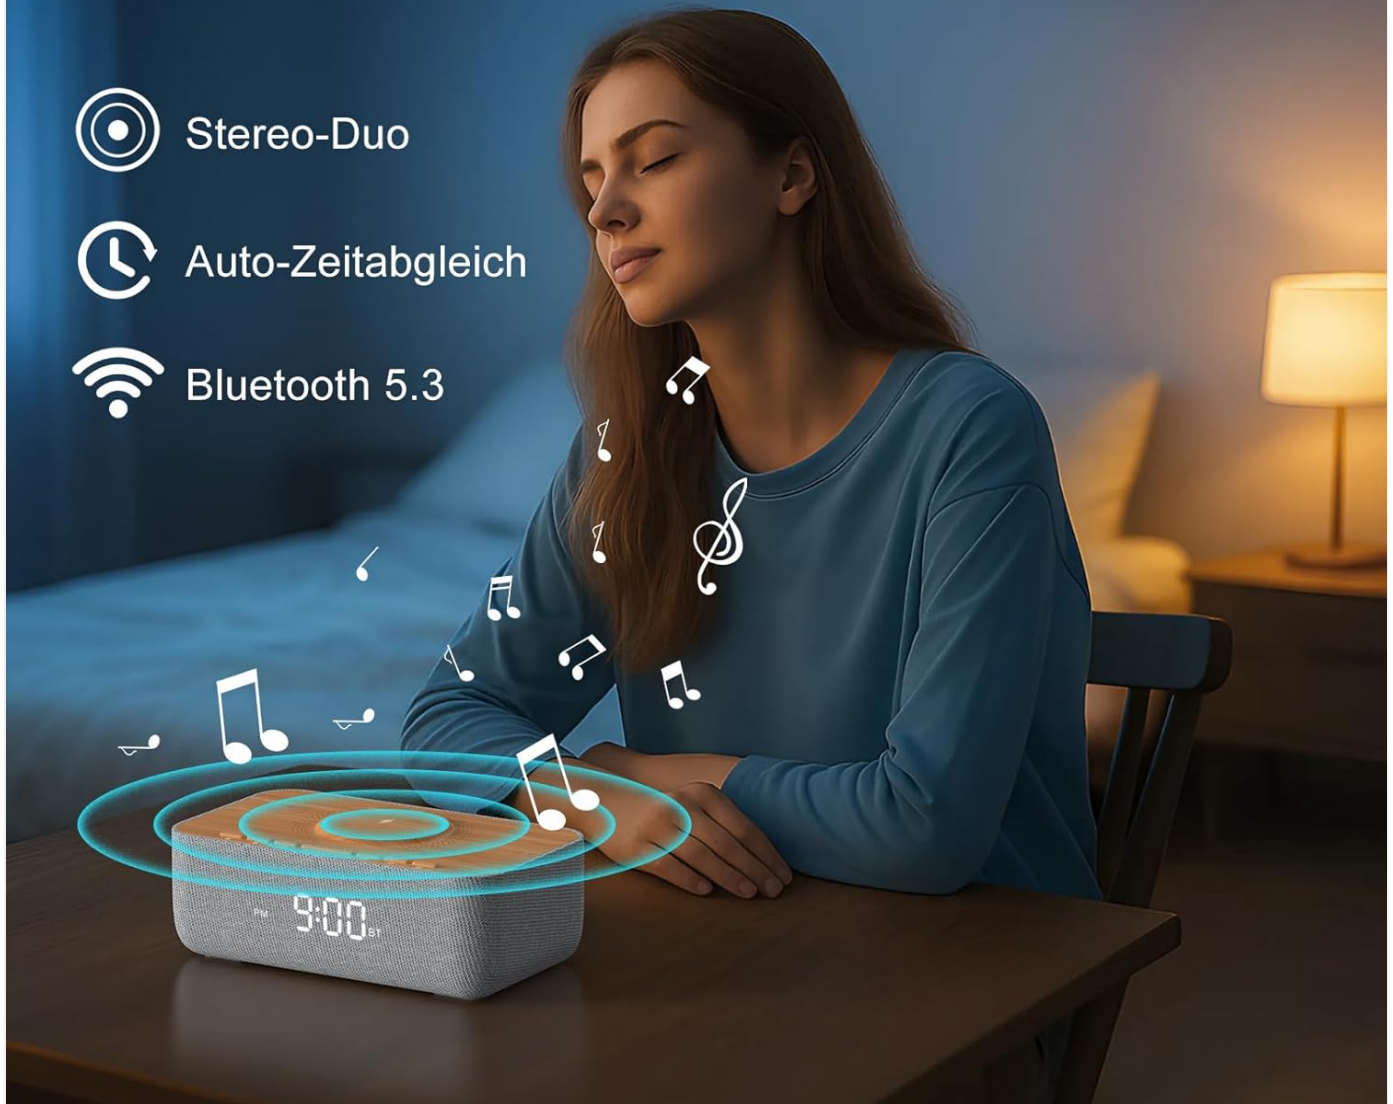


Image: Depicts the device's 360-degree stereo sound capability, Bluetooth 5.3 connectivity, and automatic time synchronization.

4. Alarm Clock and Display:

- **Setting Time:** Press the **Time Set** button. Use the **+/-** buttons to adjust hours and minutes. Press **Time Set** again to confirm.
- **12/24 Hour Format:** Press the **12/24H** button to switch between 12-hour (with AM/PM indicator) and 24-hour formats.
- **Setting Alarm:** Press the **Alarm Set** button. Use **+/-** to set the alarm time. Press **Alarm Set** again. Then, use **+/-** to select one of the 6 alarm tones (bird, sea, beep, wind chimes, piano, or FM radio). Press **Alarm Set** to confirm.
- **Activating/Deactivating Alarm:** Press the **Alarm On/Off** button to toggle the alarm. An alarm icon will appear on the display when active.
- **Snooze Function:** When the alarm sounds, press the **Snooze** button (usually a large button on top) to temporarily silence it for 9 minutes.
- **Stopping Alarm:** To turn off the alarm for the day, press any button other than Snooze.
- **Display Brightness:** Use the rotary knob on the back of the device to adjust the LED display brightness from 0%

(off) to 100%.

0-100% dimmbares Display

Passen Sie die Helligkeit nach Ihren Vorlieben an



Image: Illustrates the 0-100% dimmable LED display, showing how the brightness can be adjusted.

Ihr Morgen, Ihr Ton

5 Töne · 30 Lautstärken · Radiowecken



Image: Displays the variety of alarm tones, including natural sounds and FM radio, available on the device.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the device. Do not use liquid cleaners or abrasive materials.
- **Storage:** If storing the device for an extended period, unplug it from the power source and store it in a cool, dry place.
- **Avoid Water:** This device is for indoor use only and is not waterproof. Keep it away from water and high humidity.
- **Power Supply:** Only use the provided power adapter or a certified equivalent.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not power on.	Power cable not connected or power outlet not working.	Ensure the power cable is securely connected to both the device and a functional power outlet.
Wireless charging not working.	Phone not Qi-compatible, misaligned, or phone case too thick.	Ensure your phone supports Qi wireless charging. Realign the phone on the charging pad. Remove thick phone cases (over 8mm) or non-MagSafe cases.
Poor FM radio reception.	Antenna not extended or environmental interference.	Fully extend the FM antenna. Try repositioning the device or antenna for better signal.
Bluetooth not connecting.	Device not in pairing mode, out of range, or already connected to another device.	Ensure the device is in Bluetooth pairing mode (flashing icon). Move your phone closer. Disconnect from other Bluetooth devices.
Alarm volume too low/high.	Volume not adjusted correctly.	Adjust the volume using the rotary knob on the back of the device. Note that some alarm tones may have a gradual volume increase.
Display is too bright/dim.	Brightness setting needs adjustment.	Use the rotary knob on the back of the device to adjust the display brightness.

SPECIFICATIONS

Brand	REACHER
Model Number	R9BT-RA-DE
Color	Grey / Brown
Product Dimensions (L x W x H)	25 x 12.5 x 8.05 cm
Item Weight	700 grams
Wireless Charging Output	Up to 15W
Wireless Charging Compatibility	Qi-compatible smartphones, iPhone 12-16 series (magnetic alignment)
FM Radio Frequency Range	87.5 - 108 MHz
FM Radio Presets	Up to 40 stations
Bluetooth Version	5.3
Bluetooth Range	Up to 10 meters
Speaker Output	10W Stereo
Display Type	Digital LED

Display Brightness	0-100% Dimmable
Alarm Tones	6 (Bird, Sea, Beep, Wind Chimes, Piano, FM Radio)
Snooze Duration	9 minutes
Power Source	Electric Cable
Frame Material	Wood (top panel)
Batteries Included	No

WARRANTY AND SUPPORT


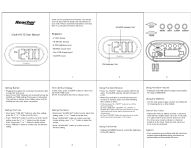
For warranty information and customer support, please refer to the documentation included with your purchase or visit the official REACHER website. If you encounter any issues not covered in this manual, please contact REACHER customer service for assistance.




Product is certified CE and RoHS compliant, with integrated overcurrent and short-circuit protection.



© 2025 REACHER. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - R9BT-RA-DE

<div>材质: 80g 书纸</div> <div>尺寸: 160mm*160mm</div> <div>装订方式: 骑马钉 (腰页)</div> <div>印刷: 单色印刷</div>	<div>Reacher R9BT-RA User Manual: Clock, FM Radio, and Wireless Speaker</div> <div>Comprehensive user manual for the Reacher R9BT-RA, detailing setup, operation, and features including time setting, alarm functions, FM radio, wireless speaker connectivity, phone charging, and safety instructions.</div>
<div></div>	<div>Reacher GX Alarm Clock User Manual: Setup, Features, and Safety Guide</div> <div>Comprehensive user guide for the Reacher GX portable alarm clock. Learn how to set time, alarms, wake-up modes, vibration, auto-dimming, and safety features. Includes troubleshooting and support information.</div>
<div></div>	<div>Reacher Clock-A1C1S Digital Alarm Clock User Manual</div> <div>Comprehensive user manual for the Reacher Clock-A1C1S digital alarm clock, covering setup, time and alarm settings, snooze, volume, dimmer, USB charging, and care instructions.</div>

 <p>Reacher ACR-2P Radio Alarm Clock USER MANUAL</p>	<p>Reacher ACR-2P Radio Alarm Clock User Manual</p> <p>Comprehensive user manual for the Reacher ACR-2P Radio Alarm Clock, covering features like FM radio, dual alarms, snooze, dimmer, USB charging, thermometer, sleep timer, and detailed instructions for setting time, alarms, and using radio functions.</p>
	<p>Reacher C50 LED Digital Alarm Clock User Manual</p> <p>User manual for the Reacher C50 LED Digital Alarm Clock. Provides instructions on setting time, alarms, using the night light, timer, snooze function, and safety guidelines.</p>
	<p>Reacher K2 User Manual: Bedside Clock and Sound Machine Guide</p> <p>Comprehensive user manual for the Reacher K2 bedside clock and sound machine, detailing setup, features, and operation of its alarm, sound, and light functions.</p>