

manuals.plus /

- › [Kitchen Couture](#) /
- › [Kitchen Couture 8-Litre Air Fryer User Manual](#)

Kitchen Couture 10005157

Kitchen Couture 8-Litre Air Fryer User Manual

Model: 10005157

1. INTRODUCTION

1.1 Product Overview

The Kitchen Couture 8-Litre Air Fryer is designed to provide a healthier way to cook your favorite meals, utilizing rapid air circulation technology for efficient and even cooking with significantly less oil. Its spacious 8-litre basket is ideal for larger families or meal preparation. The integrated Clearview stainless steel viewing window allows you to monitor your food's progress without opening the basket, preserving heat and cooking consistency. The digital display offers intuitive control over temperature settings and includes convenient pre-set programs for various dishes.



Image: The Kitchen Couture 8-Litre Air Fryer, showcasing its sleek black and stainless steel design with a clear viewing window, filled with crispy french fries.

1.2 Safety Information

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to ensure proper ventilation.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep children and pets away from the appliance during operation. The exterior surfaces can become very hot.

- Do not block any ventilation openings.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Only use accessories recommended by the manufacturer.
- Do not place food directly into the main pan without the crisper plate.

2. COMPONENTS

Familiarize yourself with the parts of your Kitchen Couture Air Fryer:

1. Main Unit (with digital control panel)
2. Air Inlet
3. Air Outlet
4. Power Cord
5. Removable Basket
6. Crisper Plate
7. Viewing Window
8. Handle



Image: The air fryer positioned on a kitchen counter, illustrating its compact design and the clear viewing window, ready for use.

3. SETUP

3.1 Before First Use

- Remove all packaging materials, stickers, and labels from the appliance.
- Clean the basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge.
- Wipe the inside and outside of the appliance with a damp cloth.
- Ensure all parts are completely dry before use.

3.2 Placement

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and above the appliance for adequate air circulation.
- Do not place the appliance near flammable materials or heat sources.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

1. Plug the power cord into a grounded wall outlet.
2. Carefully pull the basket out of the air fryer.
3. Place the crisper plate inside the basket.
4. Place the ingredients into the basket. Do not exceed the MAX fill line.
5. Slide the basket back into the air fryer. Ensure it clicks securely into place.
6. Press the Power button to turn on the appliance.
7. Use the temperature and time control buttons to set your desired cooking parameters. The digital display will show the current settings.
8. Press the Start/Pause button to begin cooking.
9. During cooking, you can use the viewing window to check on your food.
10. Some ingredients may require shaking or flipping halfway through the cooking time. Pull out the basket, shake/flip the food, and then slide the basket back in. The air fryer will automatically resume cooking.
11. When the cooking time is complete, the air fryer will beep. Carefully pull out the basket and empty the food onto a plate.



Image: The air fryer in operation, with sausages and fries cooking, highlighting the visible heating element through the clear viewing window.

4.2 Pre-set Programs

The Kitchen Couture Air Fryer comes with several pre-set programs for common dishes. To use a pre-set program:

1. After turning on the appliance, press the Menu button (or corresponding icon) to cycle through the available pre-set programs.
2. Once you select a program, the air fryer will automatically set the optimal temperature and time.
3. Press the Start/Pause button to begin cooking.



Image: A close-up view of the air fryer's clear window, demonstrating the ability to monitor food as it cooks without interrupting the process.

4.3 Rapid Air Circulation Technology

This air fryer uses rapid hot air circulation to cook food from all angles, ensuring a crispy exterior and tender interior with minimal oil. This technology significantly reduces cooking time compared to conventional ovens.

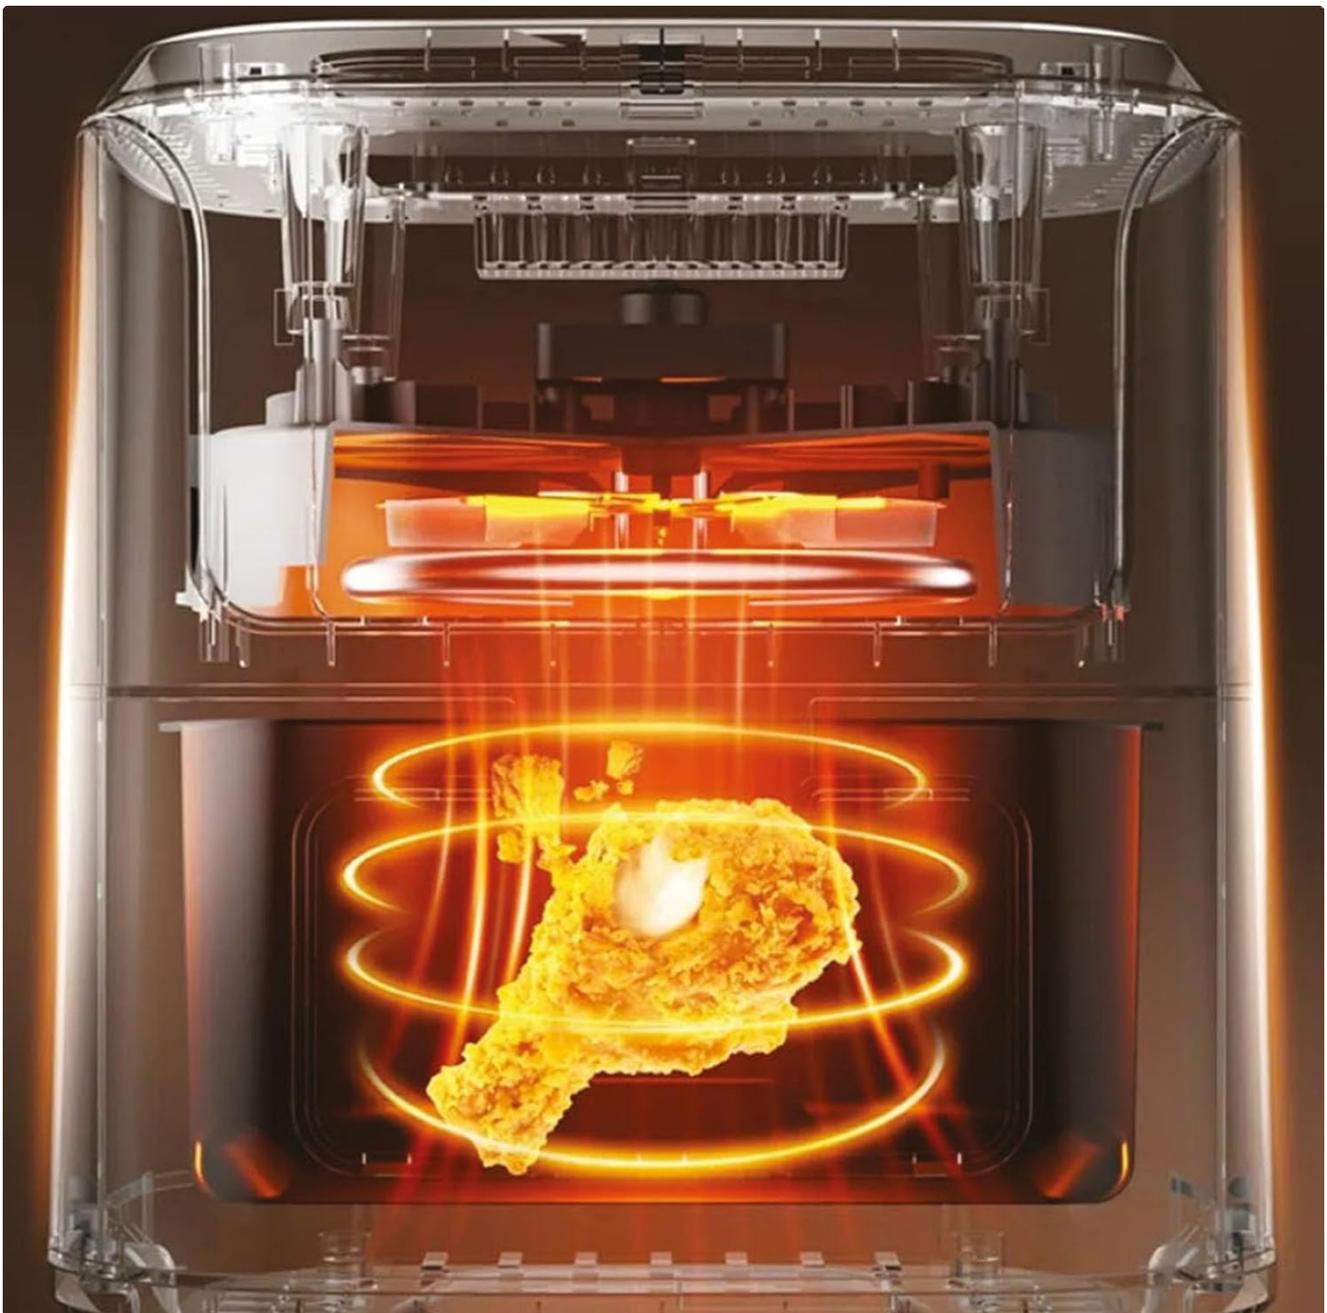


Image: An illustrative diagram demonstrating the rapid hot air circulation technology within the air fryer, showing how heat envelops food for even cooking.

5. MAINTENANCE AND CLEANING

Clean the air fryer after every use to prevent food residue buildup and maintain optimal performance.

- **Before Cleaning:** Always unplug the air fryer and allow it to cool down completely before cleaning.
- **Basket and Crisper Plate:** These parts are non-stick coated and can be cleaned in the dishwasher or by hand. For hand cleaning, use hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak the basket and crisper plate in hot water with dish soap for about 10 minutes.
- **Interior:** Wipe the interior of the appliance with a damp cloth. If necessary, use a mild detergent. Avoid abrasive cleaners or metal scouring pads.
- **Exterior:** Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive materials.
- **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker.
Food is not cooked evenly.	Too much food in the basket. Temperature or time settings are incorrect.	Cook food in smaller batches. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Greasy residue from previous use. Excess oil from fatty foods.	Clean the basket and crisper plate thoroughly after each use. Remove excess oil from food before air frying.
Food is not crispy.	Not enough oil (if applicable). Basket overloaded. Temperature too low.	Lightly coat food with oil. Do not overload the basket. Increase temperature or cooking time.

7. SPECIFICATIONS

- **Brand:** Kitchen Couture
- **Model Number:** 10005157
- **Capacity:** 8 Litre
- **Colour:** Black
- **Material:** Stainless Steel
- **Item Weight:** 7.2 kg
- **Package Dimensions:** 42 x 40 x 37 cm

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact Kitchen Couture customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the official Kitchen Couture store online: [Kitchen Couture Store](#).