

## TOPUTURE TP4

# TOPUTURE 4-in-1 Foldable Walking Pad with Incline User Manual

Model: TP4

[Introduction](#)   [Safety Information](#)   [Product Overview](#)   [Setup](#)   [Operating](#)  
[Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

---

Thank you for choosing the TOPUTURE 4-in-1 Foldable Walking Pad with Incline. This versatile fitness equipment is designed for both home and office use, offering walking, running, climbing, and working modes. It features a 9% manual incline, a powerful yet quiet 2.5HP motor, and smart app connectivity to enhance your workout experience. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Image: The TOPUTURE 4-in-1 Foldable Walking Pad with Incline, shown in both walking and running configurations, highlighting its versatility for different exercise needs.

## 2. SAFETY INFORMATION

---

Please read all instructions carefully before using this product. Failure to follow these instructions may result in injury or damage to the product.

- **Placement:** Place the walking pad on a flat, stable surface. Ensure there is adequate clear space around the device (at least 2 meters behind and 0.6 meters on each side).
- **Power Supply:** Use a grounded electrical outlet. Do not use extension cords or adapters.

- **User Weight:** Do not exceed the maximum user weight capacity of 300 lbs (136 kg).
- **Children and Pets:** Keep children and pets away from the walking pad during operation.
- **Emergency Stop:** Always attach the safety key to your clothing before starting a workout. In case of an emergency, the safety key will detach, stopping the machine.
- **Footwear:** Always wear appropriate athletic footwear when using the walking pad.
- **Medical Conditions:** Consult a physician before starting any exercise program, especially if you have pre-existing medical conditions.
- **Maintenance:** Unplug the walking pad before cleaning or performing any maintenance.
- **Incline Adjustment:** Adjust the manual incline only when the walking pad is stationary and unplugged.

### 3. PRODUCT OVERVIEW

---

The TOPUTURE 4-in-1 Foldable Walking Pad is designed for versatile fitness routines, adapting to various exercise needs and space constraints.

#### Key Features:

- **4-in-1 Functionality:** Supports Walking, Running, Climbing, and Working modes.
- **Manual Incline:** Features a 9% manual incline adjustment to simulate uphill training and increase calorie burn.
- **Powerful & Quiet Motor:** Equipped with a 2.5HP motor for smooth operation with less than 45dB noise level.
- **Dual LED Display:** Provides real-time data including time, speed, distance, and calories.
- **Remote Control:** Silent button design for convenient speed and mode adjustments.
- **Smart App Connectivity:** Syncs exercise data, offers personalized training plans, and allows for running challenges.
- **Space-Saving Design:** Foldable design with transport wheels for easy storage under beds or sofas.
- **Shock Absorption:** Multi-layer damping system to protect knees and floors.

# 4 IN 1 Walking Pad with Incline



Walking mode: 0.6-5MPH



Running mode: 5-7.6MPH



Image: Illustration of the walking pad in two configurations: a walking mode (0.6-5MPH) with a user working at a standing desk, and a running mode (5-7.6MPH) with the handle raised.

# Adjustable 0%-9% Incline Treadmill

## Boost fat burning

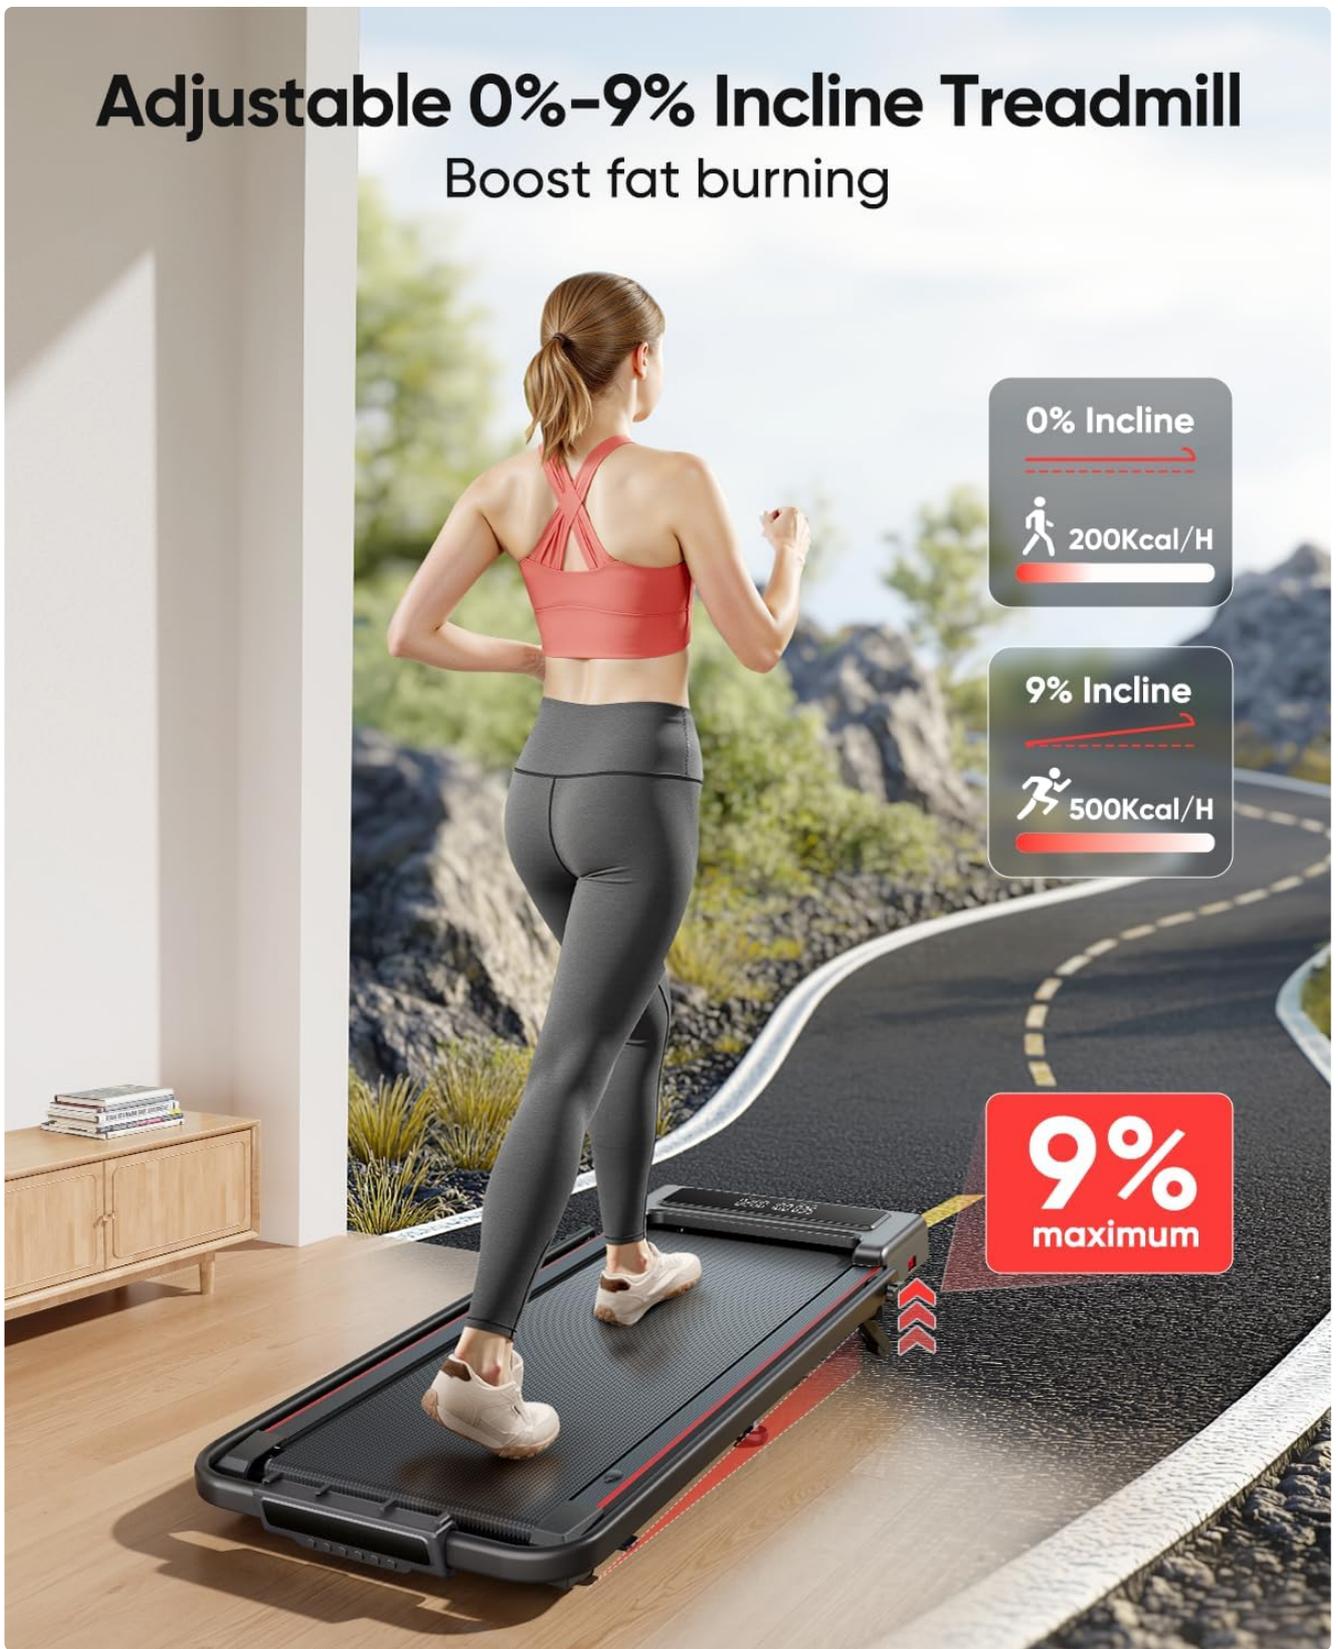


Image: A user running on the walking pad, highlighting the 9% maximum manual incline feature and its effect on calorie burning (500Kcal/H at 9% vs 200Kcal/H at 0%).

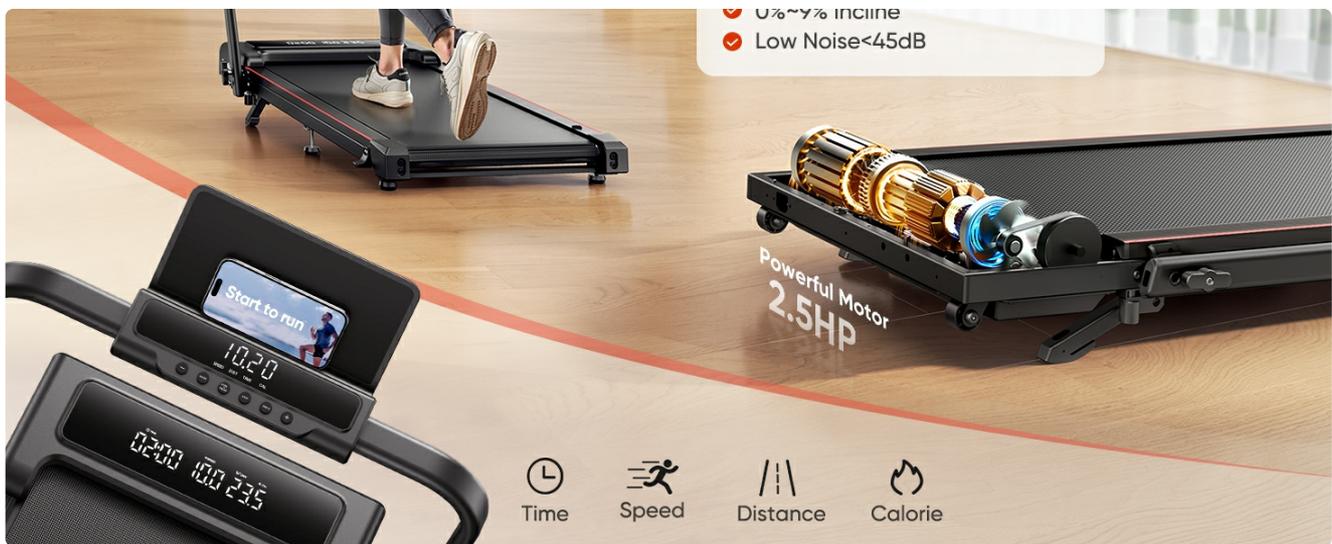


Image: A detailed view showcasing the powerful 2.5HP motor, low noise operation (<45dB), 0-9% incline, and the LED display showing time, speed, distance, and calories.

## 4. SETUP

The TOPUTURE Walking Pad is designed for installation-free setup, meaning it is ready to use almost immediately out of the box.

### 4.1 Unfolding the Walking Pad

1. Carefully remove the walking pad from its packaging.
2. Place the unit on a flat, stable surface.
3. If using the handle, lift the handle bar into the upright position until it locks securely.
4. Ensure all components are stable and properly aligned before plugging in.



Image: Visual representation of the walking pad unfolding from its compact storage position to its upright, ready-to-use state, demonstrating its space-saving design and transport wheels.

### 4.2 Adjusting the Manual Incline

The walking pad offers a 9% manual incline for varied workout intensity. Adjust the incline before starting your workout.

1. **Unfold the Footpad:** Locate the adjustable footpads at the rear of the walking pad.

2. **Insert the Pin:** Use the provided pin to secure the footpad at the desired incline level. Ensure the pin is fully inserted and locked.
3. **Adjust the Middle Footpad:** For stability, adjust the middle footpad to ensure the walking pad is level and stable at the chosen incline.



Image: A three-step visual guide demonstrating how to unfold the footpad, insert the incline pin, and adjust the middle footpad to set the manual incline.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Power On/Off

- **Power On:** Plug the power cord into a grounded outlet and then into the walking pad. Flip the main power switch (usually located at the front base) to the 'ON' position. The LED display will illuminate.
- **Power Off:** Press the 'STOP' button on the remote control or console. Once the belt has stopped, flip the main power switch to 'OFF' and unplug the unit.

### 5.2 Using the Remote Control

The walking pad is controlled via a silent remote control, allowing for easy adjustments during your workout.

- **Start/Stop:** Press the 'START' button to begin and 'STOP' to end your workout.
- **Speed Adjustment:** Use the '+' and '-' buttons to increase or decrease the speed.
- **Mode Selection:** Press the 'MODE' button to cycle through different display modes (Time, Distance, Calories) or preset programs.
- **Mute Function:** The remote control includes a mute button for quiet operation, ideal for office or late-night use.

# Dual LED Screen Display

Clear display of data



Image: Close-up of the walking pad's dual LED screen display, showing real-time data, and the remote control used for adjusting settings.



Image: A user operating the walking pad under a desk, with an emphasis on the one-click mute button on the remote control for silent operation.

### 5.3 Exercise Modes

The walking pad supports various modes to suit your fitness goals:

- **Walking Mode:** Ideal for light exercise or warm-ups (e.g., 0.6-3 MPH).
- **Running Mode:** For more intense cardiovascular workouts (e.g., 3-7.6 MPH).
- **Climbing Mode:** Utilize the 9% incline for an uphill simulation, targeting different muscle groups.
- **Working Mode:** Use the walking pad at lower speeds (e.g., 0.6-1.5 MPH) while working at a standing desk.



Image: A graphic illustrating the four distinct modes of the walking pad: Running (3-7.6MPH), Climbing (0.6-3MPH with incline), Walking (1.5-3MPH), and Working (0.6-1.5MPH).

### 5.4 Smart App Connectivity

Connect your walking pad to the dedicated smart app for enhanced features:

- **Data Sync:** Real-time synchronization of exercise data (time, distance, calories, speed).
- **Training Plans:** Access personalized training plans and programs.
- **Challenges:** Participate in running challenges and share achievements with friends.
- **Control:** Control the walking pad directly from your smartphone.

# Powerful & Quiet Motor One-button Mute



**< 45dB**  
Low Noise



**2.5HP**  
Motor Power



**300LBS**  
Weight Capacity



Image: A user exercising on the walking pad while viewing the connected smartphone app, which displays workout statistics and training options.

## 6. MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your walking pad. Always unplug the device before performing any maintenance.

### 6.1 Lubrication

The running belt requires periodic lubrication to reduce friction and extend its lifespan. Lubricate every 3-6 months, or after every 100 hours of use, depending on usage frequency.

1. Unplug the walking pad.
2. Lift the edge of the running belt.
3. Apply a small amount of silicone lubricant (provided or recommended by TOPUTURE) evenly under the center of the belt.
4. Plug in the walking pad and run it at a low speed (e.g., 1-2 MPH) for 5 minutes to distribute the lubricant.

## 6.2 Belt Adjustment

If the running belt shifts to one side or feels loose, it may need adjustment.

1. Unplug the walking pad.
2. Locate the adjustment bolts at the rear of the walking pad.
3. To move the belt to the right, turn the right bolt clockwise a quarter turn. To move it to the left, turn the left bolt clockwise a quarter turn.
4. To tighten the belt, turn both bolts clockwise equally by a quarter turn. To loosen, turn both counter-clockwise.
5. Plug in and run at a low speed to check alignment. Repeat small adjustments as needed.

## 6.3 Cleaning

Wipe down the walking pad regularly with a damp cloth to remove dust and sweat. Avoid using abrasive cleaners or solvents.



Image: A graphic illustrating the lubrication port for adding oil and the adjustment bolts for tightening or centering the running belt, ensuring a comfortable running area.

## 7. TROUBLESHOOTING

If you encounter issues with your TOPUTURE Walking Pad, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Walking pad does not power on.	Power cord not properly connected; Main power switch off; Circuit breaker tripped.	Ensure power cord is securely plugged in. Turn main power switch to 'ON'. Check household circuit breaker.
Running belt stops suddenly.	Safety key detached; Overload protection activated.	Reattach the safety key. Reduce load if exceeding weight capacity.
Belt slips or hesitates.	Belt too loose; Insufficient lubrication.	Adjust belt tension (refer to Section 6.2). Lubricate the running belt (refer to Section 6.1).
Excessive noise during operation.	Loose components; Belt rubbing; Motor issue.	Check and tighten any loose bolts. Adjust belt alignment. If noise persists, contact customer support.
Remote control not responding.	Battery depleted; Remote out of range; Interference.	Replace remote control battery (Model: AS06_M). Ensure remote is within operating range. Remove any obstructions.

If the problem persists after attempting these solutions, please contact TOPUTURE customer support for further assistance.

## 8. SPECIFICATIONS

Feature	Detail
Product Dimensions (Unfolded)	127.4 x 58.4 x 107.3 cm (50 x 23 x 42 inches)
Folding Size	50 x 23 x 4.5 inches
Item Weight	21.1 kg (46.5 lbs)
Maximum User Weight	300 lbs (136 kg)
Motor Horsepower	2.5 HP
Speed Range	0.6 - 7.6 MPH
Incline	9% Manual Incline
Display Type	Dual LED Display
Metrics Displayed	Time, Speed, Distance, Calories Burned
Material	Alloy Steel
Special Features	Compact Design, Foldable, Manual Incline, Portable, Wheeled, App Connectivity, Silent Remote Control

Feature	Detail
Included Components	Power Cord, Remote Control, Safety Key, Tool Kit, User Manual
Model Number	Treadmill: TP4 / Button Battery: AS06_M

## 9. WARRANTY AND SUPPORT

### 9.1 Warranty Information

TOPUTURE is committed to providing high-quality products. This product comes with a **TWO-YEARS Warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

### 9.2 Customer Support

For any questions, concerns, or warranty claims, please contact TOPUTURE customer support. When contacting support, please have your order ID and product model number (TP4) ready.

#### How to Contact Support:

1. Log in to your Amazon account.
2. Go to "Your Orders".
3. Find the order ID for your TOPUTURE Walking Pad.
4. Click on "Contact Seller".

Our support team is dedicated to assisting you and ensuring your satisfaction with TOPUTURE products.

© 2024 TOPUTURE. All rights reserved.

## Related Documents

 <p>Toputure</p> <p><b>USER MANUAL (Model TP3)</b> INCLINE WALKING PAD</p>	<p><a href="#">Toputure TP3 Incline Walking Pad User Manual</a></p> <p>User manual for the Toputure TP3 Incline Walking Pad, covering installation, usage, maintenance, and troubleshooting.</p>
 <p>Toputure</p> <p><b>USER MANUAL (Model TP1)</b> FOLDING TREADMILL</p>	<p><a href="#">Toputure TP1 Folding Treadmill User Manual</a></p> <p>Comprehensive user manual for the Toputure TP1 Folding Treadmill, covering installation, operation, safety, maintenance, and troubleshooting.</p>

TABLE OF CONTENTS  
1. INTRODUCTION  
2. SAFETY  
3. INSTALLATION  
4. OPERATION  
5. MAINTENANCE  
6. TROUBLESHOOTING  
7. CONTACT INFORMATION

[Toputure TP2 Home Treadmill User Manual](#)

User manual for the Toputure TP2 Home Treadmill, covering installation, operation, maintenance, and safety guidelines.



[Toputure TP1 Folding Treadmill User Manual](#)

Comprehensive user manual for the Toputure TP1 Folding Treadmill, covering installation, operation, maintenance, and troubleshooting.