

- Manuals.plus /
- › Dekala /
 - › Dekala Sunrise Alarm Clock (Model ACA-002-B) User Manual

Dekala ACA-002-B

Dekala Sunrise Alarm Clock (Model ACA-002-B) User Manual

Basic Standard Version

1. INTRODUCTION

The Dekala Sunrise Alarm Clock (Model ACA-002-B) is designed to provide a natural and gentle wake-up experience. This device integrates a gradual sunrise simulation light, dual alarm functions, FM radio, and a selection of natural sleep aid sounds. It also serves as a versatile night light with customizable colors and brightness levels, aiming to support both waking and sleeping routines.



Image 1.1: Front view of the Dekala Sunrise Alarm Clock showing the time and light display.

2. PACKAGE CONTENTS

Before setup, please verify that all items are present in the package:

- Sunrise Alarm Clock x 1
- Charging Cable x 1
- Power Adapter x 1
- User Manual x 1

Package List

Wake Up Light*1
Charging Cable*1
Adapter*1
User Manual*1



Image 2.1: Overview of the items included in the product package.

3. SETUP

3.1 Device Overview and Connections

Familiarize yourself with the control buttons and connection ports on the device.

Product Appearance Details

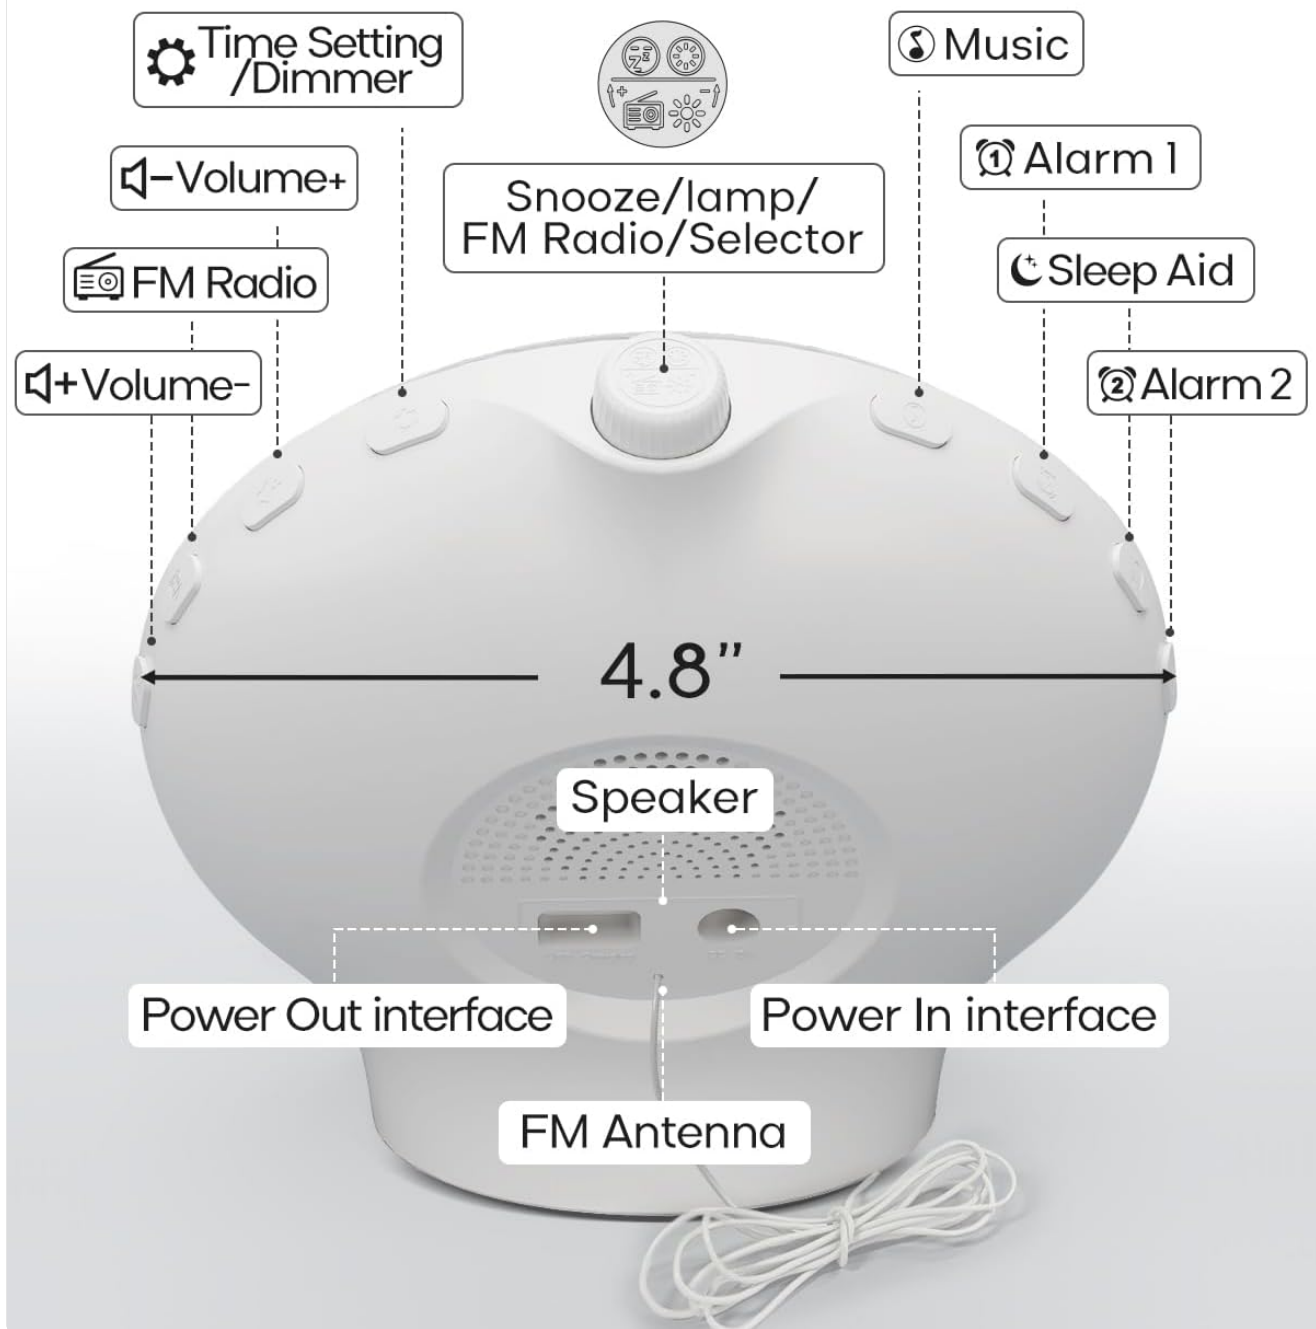


Image 3.1: Detailed view of the product's appearance and control labels.

3.2 Power Connection

1. Connect the charging cable to the 'Power In' interface on the back of the alarm clock.
2. Plug the power adapter into a standard electrical outlet.
3. The clock display will illuminate, indicating power is connected.

3.3 FM Antenna Connection

For optimal FM radio reception, connect the provided FM antenna to the designated port on the back of the device. Extend the antenna fully and position it for best signal.

4. OPERATING INSTRUCTIONS

4.1 Setting Time

1. Press and hold the 'Time Setting/Dimmer' button (refer to Image 3.1). The hour display will begin to flash.
2. Use the 'Volume+' or 'Volume-' buttons to adjust the hour.
3. Press the 'Time Setting/Dimmer' button again to switch to minute adjustment.
4. Use the 'Volume+' or 'Volume-' buttons to adjust the minutes.
5. Press the 'Time Setting/Dimmer' button once more to confirm and exit time setting.

4.2 Setting Alarms (Dual Alarms)

The device supports two independent alarms (Alarm 1 and Alarm 2).

Snooze Function

One click snooze function take a nap every 9 minutes up to 5 times



Tap to Snooze

Sunlight and
sound stop



Snooze Time

9 Mins each time
Up to 5 times



**Alarm 1 for
weekdays**



**Alarm 2 for
weekends**



Image 4.1: Illustration of the dual alarm and snooze features.

1. Press and hold the 'Alarm 1' or 'Alarm 2' button. The alarm hour display will flash.
2. Use the 'Volume+' or 'Volume-' buttons to set the desired alarm hour.
3. Press the respective alarm button again to switch to minute adjustment.
4. Use the 'Volume+' or 'Volume-' buttons to set the desired alarm minutes.
5. Continue pressing the alarm button to cycle through alarm sound selection (7 options available) and light brightness levels (20 options available).
6. Press the alarm button one last time to confirm settings and activate the alarm. An alarm icon will appear on

the display.

4.3 Sunrise Simulation Wake-Up Light

The sunrise simulation feature gradually increases light brightness from 10% to 100% over a set period before your alarm time, mimicking a natural sunrise.

- This feature is integrated with the alarm settings. When an alarm is active, the light will begin to brighten gradually before the set alarm time.
- The duration of the sunrise simulation can typically be adjusted within the alarm settings.

4.4 Snooze Function

When an alarm sounds, press the 'Snooze/Lamp/FM Radio/Selector' button at the top of the device to activate the snooze function. This will pause the alarm for 9 minutes. You can use the snooze function up to 5 times.

4.5 FM Radio

The alarm clock includes an FM radio with a frequency range of 76-108 MHz.

1. Press the 'FM Radio' button to turn the radio on or off.
2. Press and hold the 'FM Radio' button to automatically scan and save available stations.
3. Use the 'Volume+' or 'Volume-' buttons to manually tune to a specific frequency or cycle through saved stations.

4.6 Sleep Sounds and Sleep Aid

The device offers 8 soothing sounds to assist with falling asleep. The sleep aid function can be set to automatically turn off after a specified duration.

Wake up to the sounds of nature

7 Wake Up Alarm Sounds are optional



Steam



Fm Radio



Beep



Wind Bell



Piano



Rain



Bird



Ocean

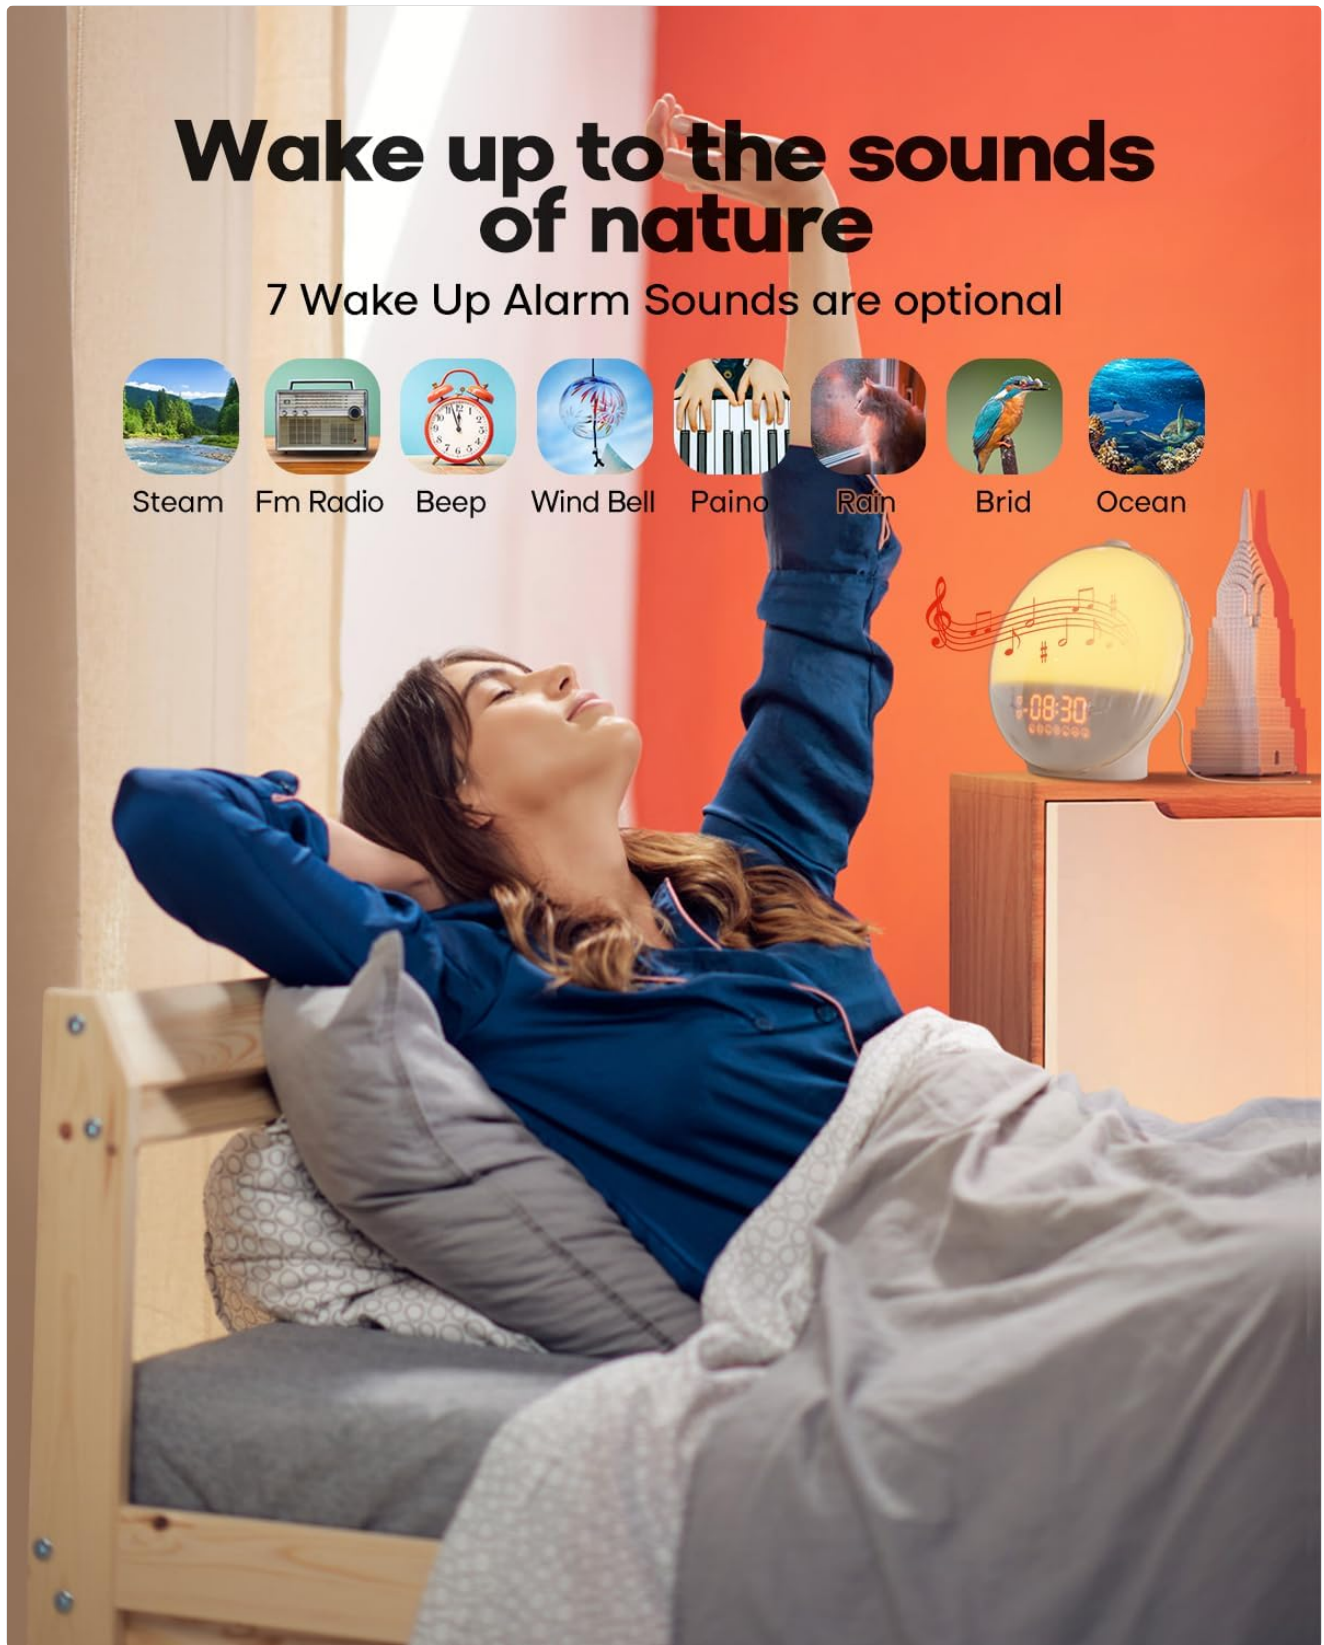


Image 4.2: Available wake-up alarm sounds, also usable as sleep sounds.

1. Press the 'Sleep Aid' button to activate the sleep sound mode.
2. Use the 'Volume+' or 'Volume-' buttons to cycle through the 8 available sounds.
3. Press the 'Sleep Aid' button repeatedly to set the auto-off timer (options typically range from 5 to 120 minutes).
4. To turn off the sleep aid function, press the 'Sleep Aid' button until the timer is deactivated, or press and hold the button.

4.7 Ambient Light and Night Light

The alarm clock features multiple color options and 20 brightness levels for ambient lighting.



Image 4.3: Examples of atmosphere color light options and dimming capability.

1. Press the 'Snooze/Lamp/FM Radio/Selector' button to turn the lamp on or off.
2. When the lamp is on, press the 'Music' button to cycle through different light colors.
3. Use the 'Time Setting/Dimmer' button to adjust the brightness level (20 levels available).
4. The device also features a breathing light mode for a soothing effect.

4.8 USB Charging Port

A USB port is available on the back of the device for charging mobile phones or other small electronic devices.

USB Port to Charge Your Mobile Phone

Charge your phones while you sleep at night



Image 4.4: USB port for charging external devices.

5. MAINTENANCE

5.1 Cleaning

- Ensure the device is unplugged from the power source before cleaning.
- Use a soft, dry cloth to wipe the surface of the alarm clock.

- Avoid using abrasive cleaners, solvents, or liquid sprays, as these may damage the device.

5.2 Storage

When not in use for extended periods, store the alarm clock in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Device not turning on:** Ensure the power adapter is securely connected to both the alarm clock and a working electrical outlet.
- **Alarm not sounding:** Verify that the alarm is activated (alarm icon visible on display) and the alarm volume is not set to zero. Check that the correct alarm time is set.
- **Sunrise light not working:** Confirm that the alarm is set and active. Check the light brightness settings within the alarm configuration.
- **FM radio static or poor reception:** Ensure the FM antenna is fully extended and positioned for optimal signal. Try repositioning the antenna or the alarm clock.
- **Buttons unresponsive:** Unplug the device from power for a few minutes, then plug it back in to perform a soft reset.

7. SPECIFICATIONS

Feature	Specification
Product Dimensions	16 x 1.5 x 16 inches
Item Weight	1.06 pounds
Model Number	ACA-002-B
Brand	Dekala
Display Type	Digital
Style	Basic Standard Version
Special Feature	Noise Machine
Indoor/Outdoor Usage	Indoor
Batteries Included	No

8. WARRANTY AND SUPPORT

8.1 Product Warranty

This Dekala Sunrise Alarm Clock (Model ACA-002-B) comes with a 2-year warranty, covering manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For further assistance, technical support, or warranty inquiries, please visit the official Dekala store or contact their customer service department.

Official Dekala Store: <https://www.amazon.com/stores/Dekala/page/9825D8C4-321E-45C5-8BC7-FC33BEF604F6>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DZHPN9S2>

More documents and user manuals: <https://manuals.plus/>