

Jwthee Jwtheezgpx82baw-11

Jwthee 2-in-1 Multifunction Electric Egg Cooker and Frying Pan Instruction Manual

Model: Jwtheezgpx82baw-11

INTRODUCTION

Thank you for purchasing the Jwthee 2-in-1 Multifunction Electric Egg Cooker and Frying Pan. This versatile appliance is designed to simplify your cooking experience, allowing you to prepare a variety of egg dishes, including hard-boiled, soft-boiled, poached, and fried eggs, as well as steam other foods. Please read this manual thoroughly before first use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance features an automatic shut-off function when the temperature exceeds 150°C (302°F) to prevent overheating.

PRODUCT COMPONENTS

The Jwthee 2-in-1 Multifunction Electric Egg Cooker and Frying Pan includes the following parts:

- Main Unit (Heating Base with Frying Pan)
- Egg Steaming Rack
- Transparent Lid
- Measuring Cup (for water)
- Power Cord with Plug



Image Description: An overhead view of the Jwthee 2-in-1 Egg Cooker showing its main unit (yellow base with handle and power cord), a transparent dome lid, an egg steaming rack, a small wooden spatula, a white egg separator, a small measuring cup, and a small stainless steel bowl. This image illustrates the various accessories included with the product.

SETUP

1. Unpack all components and remove any packaging materials.
2. Wipe down the non-stick frying pan and the transparent lid with a damp cloth. Wash the egg steaming rack and measuring cup with warm, soapy water, then rinse and dry thoroughly.
3. Place the main unit on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the appliance.
4. Ensure the power cord is securely plugged into the appliance and then into a suitable electrical outlet.

OPERATING INSTRUCTIONS

A. Boiling Eggs

1. Using the provided measuring cup, add the appropriate amount of water to the heating plate of the main unit. The amount of water determines the doneness of the eggs (e.g., less water for soft-boiled, more for hard-boiled).
2. Place the egg steaming rack onto the heating plate.
3. Carefully place eggs onto the egg steaming rack. The cooker can accommodate up to 19 eggs.
4. Cover the unit with the transparent lid.
5. Plug in the appliance. The cooking process will begin automatically.
6. Once the water has evaporated and the eggs are cooked, the appliance will automatically shut off.
7. Unplug the appliance and carefully remove the lid (steam will be hot). Use caution when handling hot eggs.



Image Description: A hand is gently placing an egg with a drawn face onto the yellow egg steaming rack of the Jwthree Egg Cooker. Several other eggs are already in place, some also with drawn faces, indicating the cooker's capacity for multiple eggs. The cooker is on a white countertop with other food items in the background.



Image Description: Three small heart-shaped bowls each contain a halved boiled egg, showcasing different levels of doneness: soft-boiled with a runny yolk, medium-boiled with a creamy yolk, and hard-boiled with a firm, fully cooked yolk. This illustrates the versatility of the egg cooker.

B. Frying

1. Ensure the egg steaming rack is removed from the main unit.
2. Add a small amount of cooking oil or butter to the non-stick frying pan.
3. Plug in the appliance. The frying pan will begin to heat up.
4. Once heated, add your desired food item (e.g., an egg, small patty, vegetables) to the frying pan.
5. Cook until desired doneness, turning as needed. The transparent lid can be used to cover the pan for faster cooking or to prevent splattering.
6. Once cooking is complete, unplug the appliance. Use the lengthened handle for safe handling and a spatula to remove food.



Image Description: A person is seasoning a cooked patty with a pepper grinder while it rests in the non-stick frying pan of the Jwthee Egg Cooker. The yellow cooker is on a light-colored cloth on a countertop, with other food items like boiled eggs and lemon slices in the background, demonstrating its use for frying.



Image Description: A perfectly fried egg with a bright yellow yolk and crispy white is shown cooking in the non-stick frying pan of the Jwthee Egg Cooker. The yellow handle of the cooker is visible, and the image highlights the pan's non-stick surface.



Image Description: A person is carefully lifting a fried egg from the non-stick frying pan of the Jwthee Egg Cooker using a wooden spatula. The egg appears fully cooked, and the pan's non-stick properties are evident as the egg easily detaches. Other food items are visible in the background.

C. Steaming Other Foods

The egg cooker can also be used to steam small portions of other foods, such as vegetables or dumplings. Follow the same steps as boiling eggs, but place your desired food item on the steaming rack instead of eggs. Ensure the food is cut into small pieces for even cooking.

CLEANING AND MAINTENANCE

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. **Frying Pan:** The non-stick frying pan can be wiped clean with a soft, damp cloth or sponge. For stubborn residue, use a small amount of mild dish soap. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
3. **Egg Steaming Rack and Lid:** These parts can be washed with warm, soapy water and rinsed thoroughly.
4. **Main Unit (Heating Base):** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit, power cord, or plug in water or any other liquid.
5. Ensure all parts are completely dry before storing or next use.
6. Store the appliance in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly; power outage.	Ensure the power cord is securely plugged into both the appliance and a working electrical outlet. Check your household circuit breaker.
Eggs are not cooked to desired doneness.	Incorrect water amount used for boiling.	Refer to the measuring cup guidelines for water levels corresponding to soft, medium, or hard-boiled eggs. Adjust water amount for future use.
Food sticks to the frying pan.	Insufficient oil/butter; pan not preheated; damaged non-stick coating.	Ensure a small amount of oil or butter is used. Allow the pan to heat up for a minute before adding food. Avoid using metal utensils that can scratch the coating.
Appliance shuts off prematurely.	Automatic safety shut-off activated due to overheating or water evaporation.	This is a normal safety feature. If it happens during frying, ensure you are not operating it empty for too long. If during boiling, it indicates the water has evaporated and eggs are cooked.

SPECIFICATIONS

- **Model:** Jwtheezgpx82baw-11
- **Brand:** Jwthee
- **Material:** Stainless steel, PP plastic
- **Color:** Yellow
- **Product Dimensions:** 12.2"L x 8.26"W x 3.54"H (31cm L x 21cm W x 9cm H approx.)
- **Item Weight:** 1.08 pounds (approx. 490g)
- **Capacity:** Up to 19 eggs (steaming)
- **Power:** Electric
- **Safety Feature:** Automatic shut-off at 150°C (302°F)



Image Description: A diagram showing the dimensions of the Jwthee 2-in-1 Egg Cooker. The total length from handle to opposite side is indicated as 29cm, the height of the main unit is 14cm, and the height including the lid is also 14cm. This provides a clear visual reference for the product's size.

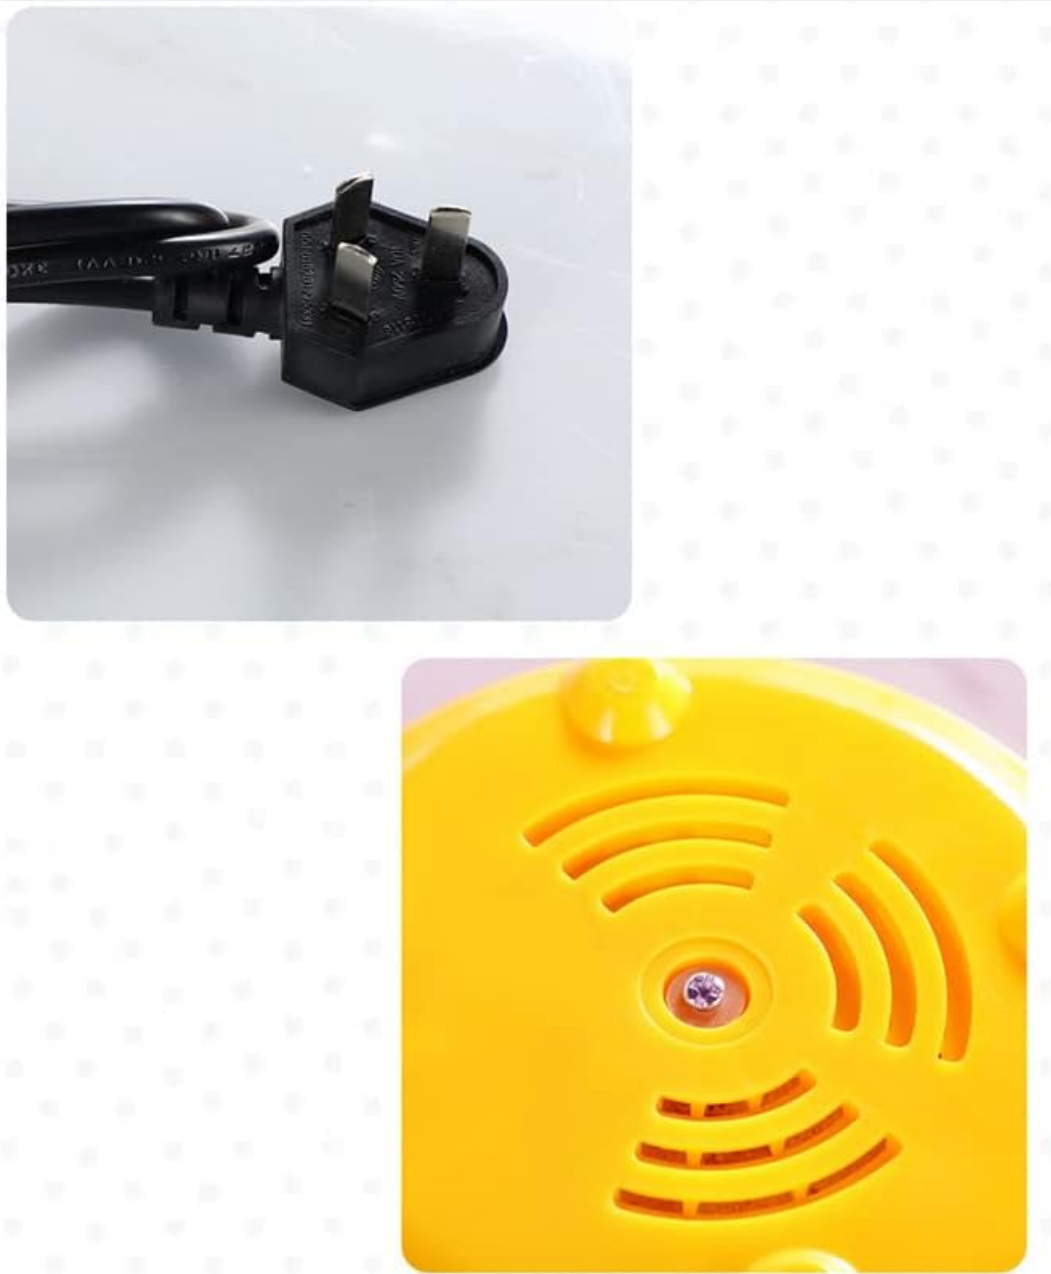


Image Description: A split image showing two details of the Jwthree Egg Cooker. The top part shows a close-up of the three-prong power plug and a section of the power cord. The bottom part shows the underside of the yellow cooker, highlighting the fan-shaped heat dissipation base with annular heat dissipation holes, designed for rapid heat release and extended product life.

WARRANTY AND SUPPORT

For warranty information or product support, please contact the retailer where you purchased this product or the manufacturer directly. Please retain your proof of purchase for any warranty claims.