

[Manuals.plus](#) /

› [DeerRun](#) /

› DeerRun Walking Pad 2 in 1 Under Desk Treadmill User Manual

DeerRun BA04

DeerRun Walking Pad 2 in 1 Under Desk Treadmill User Manual

Model: BA04

Brand: DeerRun

1. SAFETY INFORMATION

Please read all instructions carefully before using the DeerRun Walking Pad. Keep this manual for future reference.

- Ensure the treadmill is placed on a flat, stable surface.
- Keep children and pets away from the treadmill during operation.
- The maximum weight capacity for this treadmill is 265 pounds. Do not exceed this limit.
- Always wear appropriate athletic footwear when using the treadmill.
- Do not operate the treadmill if it is damaged or malfunctioning.
- Unplug the treadmill from the power outlet when not in use or before cleaning/maintenance.
- Keep hands and feet clear of the moving belt at all times.

2. PRODUCT OVERVIEW

The DeerRun Walking Pad is a versatile 2-in-1 under desk treadmill designed for both walking and light jogging, perfect for home and office environments. Its compact and lightweight design allows for easy storage and portability.

Key Features:

- **2.5HP Low Noise Motor:** Provides smooth and quiet operation, ideal for use in shared spaces.
- **5-Layer Anti-Slip Running Belt:** Offers enhanced grip, durability, and joint protection.
- **Compact & Portable Design:** Weighs only 41.8 pounds with built-in wheels for easy movement and storage under desks, beds, or sofas.
- **Remote Control:** Conveniently adjust speed and monitor workout data.
- **LED Display:** Tracks real-time fitness data including speed, calories burned, time, and distance.

Product Components:



Figure 2.1: The DeerRun Walking Pad in operation, demonstrating its use both as a standalone walking pad and integrated with a standing desk.

Work From Home

A Good Partner for Home Fitness



Figure 2.2: Benefits of using the walking pad for work-from-home setups, including improved concentration, reduced low back pain, and calorie burning.

Compatible with PitPat APP

Multiple Courses ! Set and Go!



Stretch, Training or Relax Meet multiple needs




Figure 2.3: The walking pad's compatibility with the PitPat APP, offering multiple courses and tracking capabilities.

Easy Storage & Space Saving

Build-in Wheels: Easy To Move



Figure 2.4: Demonstrating the easy storage and space-saving features, highlighting the built-in wheels for effortless movement.

LED DISPLAY

Track Your Real-Time Fitness Data



Figure 2.5: The integrated LED display provides real-time fitness data, including distance, time, speed, calories burned, and connectivity status.

Compatible with PitPat APP

Multiple Courses ! Set and Go!

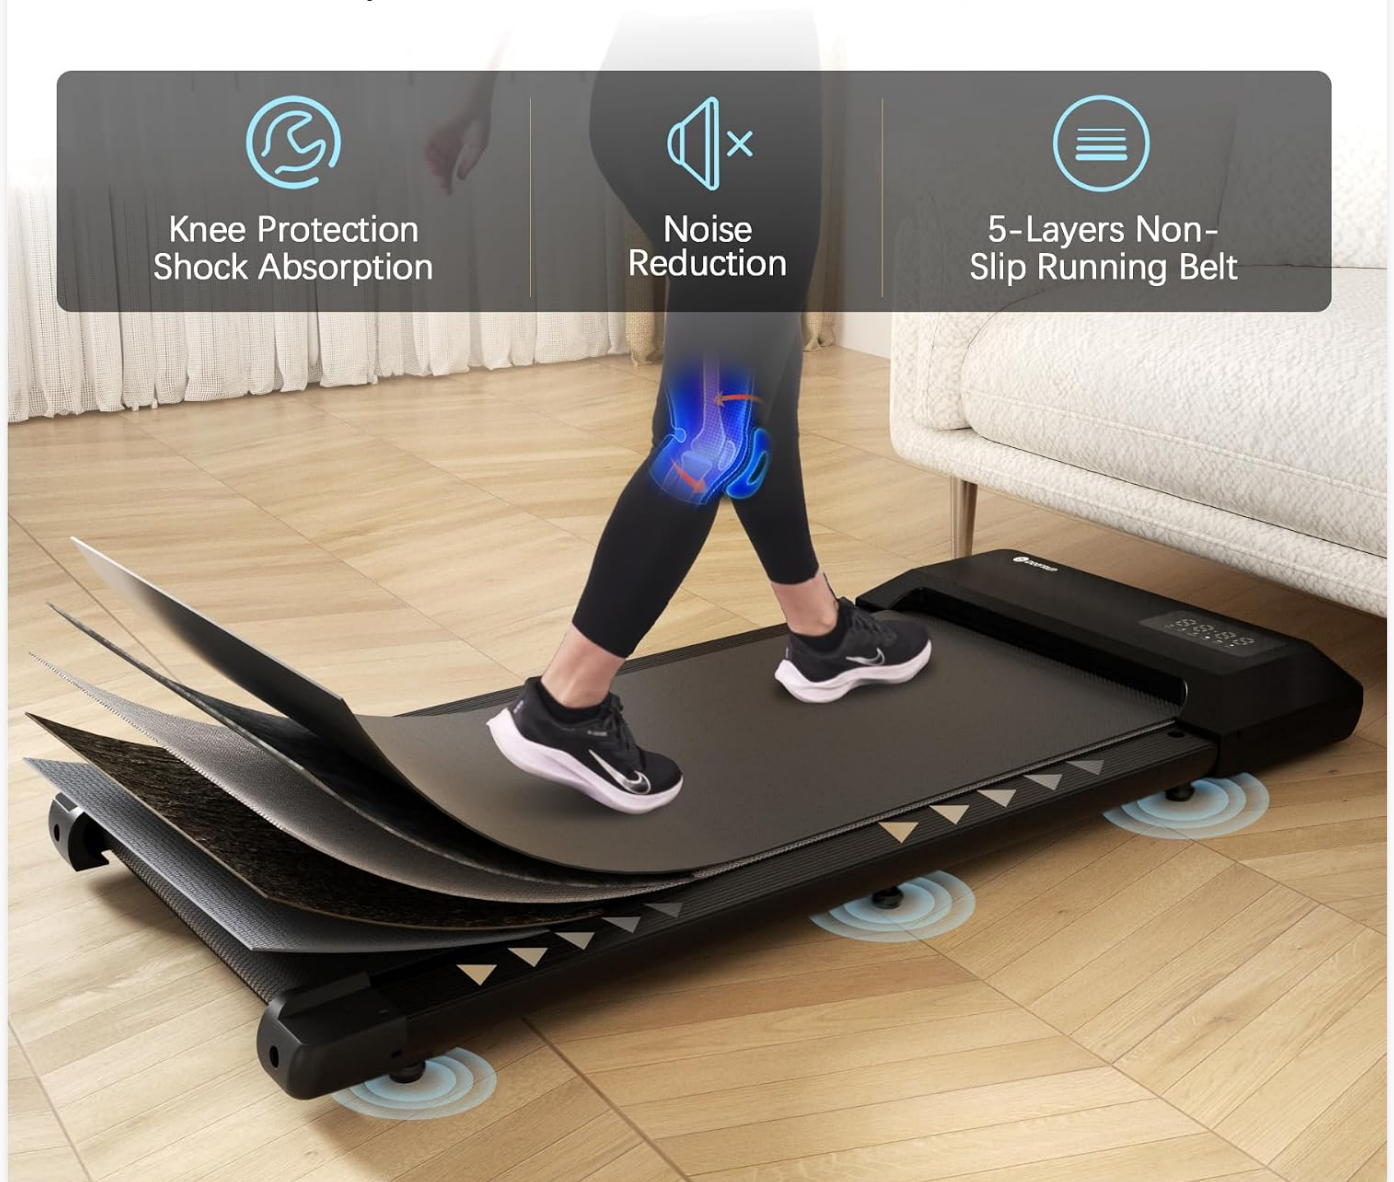


Figure 2.6: Detailed view of the 5-layer running belt, emphasizing its anti-slip surface, noise reduction, and shock absorption for knee protection.

3. SETUP

The DeerRun Walking Pad comes fully assembled and is ready to use right out of the box. No complex installation is required.

Placement:

- Choose a flat, stable surface with adequate clearance around the treadmill.
- For under-desk use, ensure your standing desk has sufficient height clearance for comfortable walking.
- The compact design allows it to be easily stored under a bed, sofa, or desk when not in use. Utilize the built-in wheels for effortless relocation.

4. OPERATING INSTRUCTIONS

The DeerRun Walking Pad is controlled via a remote control, offering a seamless user experience.

Getting Started:

1. Plug the power cord into a grounded electrical outlet.
2. Locate the main power switch on the treadmill's console and turn it to the 'ON' position. The LED display will illuminate.
3. Ensure the remote control has a working battery.

Using the Remote Control:

- **Start/Stop Button:** Press the play/pause button on the remote to start or stop the treadmill.
- **Speed Adjustment:** Use the '+' and '-' buttons to increase or decrease the walking speed. The speed range is 0.6 to 3.8 MPH.
- **Mode Selection:** The LED display cycles through Time, Distance, Speed, and Calories Burned automatically.

Your browser does not support the video tag.

Video 4.1: Official demonstration of the DeerRun Under Desk Treadmill, showcasing its features and ease of use in a home environment. This video illustrates the setup, operation, and various modes of the walking pad.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your DeerRun Walking Pad.

Lubrication:

- The treadmill features an oil drip hole in the upper right corner for easy lubrication.
- Apply lubricating oil once a month to ensure the running belt remains smooth and to extend motor life.
- Refer to the included lubricating oil instructions for proper application.

Belt Adjustment:

- If the running belt shifts or feels uneven, use the provided hex screw to adjust its alignment.
- Adjust the belt slightly until it is centered and runs smoothly.

Cleaning:

- Wipe down the treadmill surface with a damp cloth after each use.
- Avoid using abrasive cleaners or solvents.

6. TROUBLESHOOTING

If you encounter any issues with your DeerRun Walking Pad, refer to the common troubleshooting tips below.

Remote Control Not Responding:

- Check the battery in the remote control and replace it if necessary.
- Ensure there are no obstructions between the remote and the treadmill's console.
- If the remote is unresponsive after initial setup, it may be due to poor contact between the positive terminal and the battery. Gently open the back cover of the remote and adjust the metal contacts.
- If the problem persists, try re-pairing the remote control. Turn on the machine and press the '+' button on the remote for 5 seconds after the device displays '0:00'. You should hear a beep indicating successful pairing.

Your browser does not support the video tag.

Video 6.1: Official troubleshooting guide for the DeerRun Treadmill remote control. This video provides step-by-step instructions for resolving common remote control issues, including pairing and battery contact problems.

Treadmill Not Starting:

- Verify that the power cord is securely plugged into both the treadmill and the wall outlet.
- Check if the main power switch is in the 'ON' position.
- Ensure the safety key (if applicable) is correctly inserted.

7. SPECIFICATIONS

Feature	Specification
Brand	DeerRun
Model Name	BA04
Product Dimensions	46"D x 20"W x 4"H
Folded Size	44" x 20" x 4.5"
Material	Alloy Steel
Maximum Speed	3.8 Miles per Hour (Walking Mode)
Minimum Speed	0.6 Miles per Hour
Maximum Horsepower	2.5 Horsepower
Maximum Weight Recommendation	265 Pounds
Deck Length	35.5 Inches
Deck Width	16 Inches
Power Source	Corded Electric (800 Watts)
Display Type	LED
Metrics Measured	Speed, Calories Burned, Time, Distance
Assembly Required	No

8. WARRANTY AND SUPPORT

DeerRun is committed to providing high-quality products and excellent customer service.

Warranty:

The DeerRun Walking Pad comes with a 12-month warranty from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

Customer Service:

If you encounter any problems with your product, whether before or after sales, please do not hesitate to contact our professional customer support team. We offer support via email and phone service to assist you with any inquiries or concerns.

For support, please refer to the contact information provided on the product packaging or the official DeerRun website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0F1D9LH4H>

More documents and user manuals: <https://manuals.plus/>