

[Manuals.plus](#) /

› [George Foreman](#) /

› George Foreman Family-Size Grill & Panini Press Instruction Manual

George Foreman GR015F-1BGX

George Foreman Family-Size Grill & Panini Press Instruction Manual

Model: GR015F-1BGX

INTRODUCTION

Welcome to the George Foreman Family-Size Grill & Panini Press. This versatile appliance is designed to bring the convenience of indoor grilling to your home, allowing you to prepare delicious burgers, paninis, and more with ease. Its compact design and advanced features ensure a superior cooking experience and simple cleanup.



Figure 1: The George Foreman Family-Size Grill & Panini Press in its closed position, showcasing its sleek black design.

Key features include an advanced George Tough Nonstick Ceramic Coating for 8x greater durability and a completely PFAS-FREE cooking surface. The enhanced grill plate design offers up to 50% better searing, locking in flavor without the need for added oil. An adjustable fat-removing slope and a 1-inch floating hinge accommodate various food thicknesses, ensuring even cooking and healthier meals. The removable drip tray simplifies cleanup, and the space-saving design allows for vertical storage.



Figure 2: Close-up view of the PFAS-Free Nonstick Ceramic Coating on the grill plates.



Figure 3: The grill opened, revealing the 75 sq. in. family-size cooking surface, suitable for approximately 5 servings.

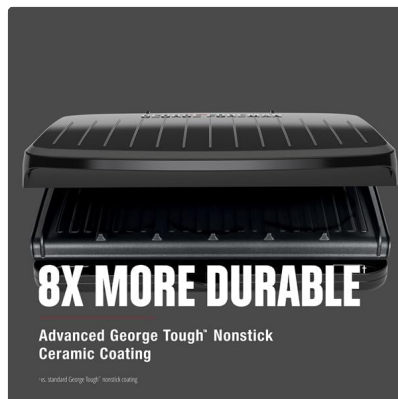


Figure 4: Detail of the grill plates highlighting the 8x more durable Advanced George Tough Nonstick Ceramic Coating.

SETUP

Before first use, ensure all packaging materials are removed. Place the grill on a stable, heat-resistant surface near an electrical outlet. The grill is designed for space-saving storage and can be stood vertically when not in use.



Figure 5: The grill demonstrating its space-saving vertical storage capability.

Locate the removable drip tray, which slides into the front of the grill. This tray collects excess fat and juices during cooking, contributing to healthier meals and easier cleanup. Ensure it is properly inserted before operating the grill.



Figure 6: Side view of the grill illustrating the fat-removing slope and the position of the removable drip tray.

OPERATING INSTRUCTIONS

1. **Preheating:** Plug the grill into a standard 120V electrical outlet. The indicator light will illuminate, signaling that the grill is preheating. Wait for the light to turn green, indicating that the grill has reached its optimal cooking temperature.
2. **Placing Food:** Carefully open the grill using an oven mitt or heat-resistant gloves, as the surfaces will be hot. Place your food (e.g., burgers, chicken, paninis) directly onto the bottom grill plate. The floating hinge allows for even cooking of thicker items.
3. **Cooking:** Close the top grill plate. The grill will cook both sides of your food simultaneously. The indicator light may cycle on and off during cooking to maintain the set temperature. Cooking times will vary based on the type and thickness of the food.
4. **Checking Doneness:** Periodically lift the top plate to check the doneness of your food. Use tongs to carefully remove

cooked items.



Figure 7: A steak being seared on the grill, demonstrating the effective searing capability.

CARE AND MAINTENANCE

Always unplug the grill and allow it to cool completely before cleaning. The nonstick ceramic coating makes cleanup simple.

- **Grill Plates:** Wipe the grill plates with a damp cloth or sponge. For stubborn residue, use a plastic scouring pad. Do not use abrasive cleaners or metal scouring pads, as they can damage the nonstick coating.
- **Drip Tray:** The removable drip tray is dishwasher-safe for convenient cleaning. Alternatively, wash it by hand with warm, soapy water.
- **Exterior:** Wipe the exterior of the grill with a clean, damp cloth.

TROUBLESHOOTING

If you encounter any issues with your George Foreman Grill, please refer to the following general advice:

- **Grill Not Heating:** Ensure the grill is properly plugged into a functioning electrical outlet. Check if the indicator light is on.
- **Food Not Cooking Evenly:** Ensure food is placed centrally on the grill plates. For very thick items, cooking time may need to be adjusted.
- **Excessive Smoke:** This can occur with very fatty foods. Ensure the drip tray is in place and empty it as needed. Cook in a well-ventilated area.

For further assistance, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	George Foreman
Model Number	GR015F-1BGX
Size	5-Serving
Wattage	1500 watts
Voltage	120 Volts
Material	Ceramic, Plastic
Coating	Advanced George Tough Nonstick Ceramic (PFAS Free)
Special Features	Grease Management System, Non Stick Coating, Removable Surface, Scratch Resistant
Product Dimensions	14.33"D x 4.09"W x 12.32"H
Item Weight	5.52 Pounds
Country of Origin	China

WARRANTY AND SUPPORT

The George Foreman Family-Size Grill & Panini Press is backed by a **3-year limited warranty**, providing peace of mind for your purchase. For any questions, troubleshooting, or warranty claims, please visit the official George Foreman Store or contact their customer support.

Official George Foreman Store: [George Foreman Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question