

manuals.plus /

- › [Mesqool](#) /
- › [Mesqool 7" Digital Dementia Alarm Clock User Manual](#)

Mesqool CR1029

Mesqool 7" Digital Dementia Alarm Clock User Manual

Model: CR1029



PRODUCT OVERVIEW

The Mesqool 7-inch Digital Dementia Alarm Clock is designed to provide clear, easy-to-read time, date, and reminders, especially beneficial for seniors and individuals with memory loss. It features a high-resolution display, customizable alarms, and a digital photo frame function.



The Mesqool 7-inch Digital Dementia Alarm Clock features a large, clear display showing the day, time, date, and year, designed for easy readability.

- **Clear and Easy-to-Read Display:** High-resolution 1024x600 IPS screen with large numbers for optimal visibility from a distance.
- **Built-in Schedules:** Includes 23 pre-set reminders for daily activities such as medication, showers, and visits.
- **Customizable Alarms & Schedules:** Supports keyboard input for creating personalized reminders and greetings.
- **Built-In Digital Picture Frame:** Play photos directly from a USB flash drive or SD card (up to 64GB, not included).
- **Multifunctionality:** Displays time, day of week, and temperature. Supports 12/24 hour format, DST, and snooze function.
- **Memory Function:** Two AAA backup batteries (not included) save settings during power outages, though corded power is required for full operation.

## SETUP

1. **Unpacking:** Carefully remove the clock and all accessories from the packaging.

2. **Power Connection:** Connect the provided power adapter to the DC IN port on the back of the clock, then plug it into a standard electrical outlet. The clock requires continuous corded power for operation.
3. **Backup Batteries (Optional):** For memory function during power outages, insert two AAA batteries (not included) into the battery compartment on the back. These batteries only save settings and do not power the display.
4. **Initial Power On:** The clock will automatically power on once connected to power.
5. **Initial Settings:** Upon first use, you may be prompted to set the language, time format (12/24 hour), date, and time. Use the navigation buttons (typically on the side or back) to adjust these settings. Refer to the "Operating Instructions" section for detailed navigation.

## OPERATING INSTRUCTIONS

---

### Navigation and Basic Settings

The clock is typically controlled using buttons located on the side or back. These buttons allow you to navigate through menus and adjust settings.

- **Menu Button:** Accesses the main settings menu.
- **Up/Down Buttons:** Navigate through menu options or adjust values.
- **Enter/OK Button:** Confirm selections or enter sub-menus.
- **Back/Exit Button:** Return to the previous screen or exit a menu.

### Setting Time and Date

1. Press the Menu button to enter settings.
2. Navigate to "Time Settings" or "Date Settings" and press Enter.
3. Use Up/Down buttons to adjust hours, minutes, year, month, and day. Press Enter to move to the next field.
4. Select your preferred time format (12-hour or 24-hour) and enable/disable Daylight Saving Time (DST) if applicable.
5. Save changes and exit the menu.

### Managing Alarms and Reminders

The clock supports 23 pre-set reminders and allows for fully customizable alarms.

# No More Missed Medications

Elderly-Friendly Calendar with 23 Preset Alerts



Take you bedtime medication



Your family is visiting



Time for a shower



Time for the news on TV



The clock can display important reminders such as "Take your morning medication" to assist with daily routines.

1. From the main menu, select "Alarm Settings" or "Reminder Settings".
2. You can choose from pre-set reminders (e.g., "Time for a shower", "Your family is visiting") or create a new custom reminder.
3. For custom reminders, use the on-screen keyboard (as shown in the "Unlimited Flexibility" image) to type your personalized message.
4. Set the time, frequency (daily, weekly, specific days), and desired ringtone for each alarm. The clock offers 18 gentle ringtones.

5. Save your alarm settings.

# No More Harsh Alarms

Experience the Joy of Gentle Reminders with 18 Lovely Ringtones



Choose from 18 gentle ringtones like "Birds" or "Breeze" for a pleasant alarm experience.



# Unlimited Flexibility

Add, Edit, and Personalize Your Daily Reminders & Alarms



The on-screen keyboard allows for full customization of alarm messages, such as "Mom, I love you!".

## Adjusting Display Brightness and Themes

The clock features adjustable brightness and multiple display themes.

- Access "Display Settings" from the main menu.
- Adjust the brightness level to your preference.
- Select from 12 available themes and 9 color options to personalize the clock's appearance.

# 12 Themes, 9 Colors

Your Calendar, Your Way!



Explore 12 themes and 9 colors to customize your clock's display to your liking.

## Using the Digital Picture Frame

The clock can display photos from a USB flash drive or SD card.

1. Insert a USB flash drive or SD card (up to 64GB, formatted as FAT32) containing your photos into the corresponding slot on the back of the clock.
2. Navigate to the "Photo Frame" or "Media Playback" option in the menu.
3. Select the desired folder or start a slideshow.



# High Resolution Display

No WiFi, Read USB & SD Cards with Ease

The maximum supported capacity of SD card and USB flash drive is 64G.  
(SD card and USB flash drive not included)



Transform your clock into a digital photo frame by displaying cherished memories from a USB or SD card.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe the display and the clock's body. Do not use liquid cleaners or abrasive materials, as they may damage the screen or finish.



- **Battery Replacement:** If the clock loses settings during a power outage, the backup AAA batteries may need to be replaced. Ensure the clock is powered off or unplugged before opening the battery compartment.
- **Storage:** If storing the clock for an extended period, unplug it from power and remove the backup batteries to prevent leakage. Store in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is blank.	Not connected to power, power outage, or faulty adapter.	Ensure the power adapter is securely plugged into the clock and a working electrical outlet. Check the power outlet with another device.
Settings are lost after power outage.	Backup batteries are dead or not installed.	Install two fresh AAA batteries in the backup battery compartment. Note that batteries only save settings, not power the display.
Alarm does not sound.	Alarm is disabled, volume is too low, or incorrect time set.	Check alarm settings to ensure it is enabled and the volume is audible. Verify the alarm time is correctly set.
Photos not displaying from USB/SD card.	Incorrect file format, unsupported card type, or card not inserted correctly.	Ensure photos are in a compatible format (e.g., JPEG). Verify the USB drive/SD card is formatted as FAT32 and is inserted fully. Maximum supported capacity is 64GB.

## SPECIFICATIONS


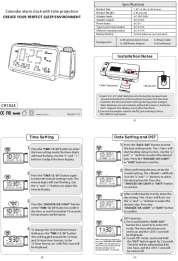
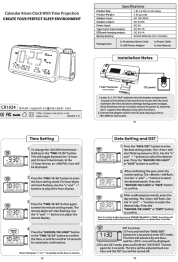
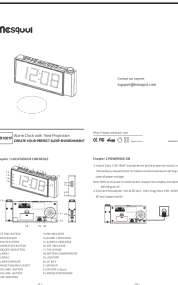
Feature	Detail
Brand	Mesqool
Model Number	CR1029
Colour	White
Product Dimensions	12.7 x 3.81 x 12.7 cm
Item Weight	327 g
Material	Plastic
Display Type	LCD
Special Features	Adjustable Brightness, Digital Picture Frame, 23 Pre-set Alarms, 18 Ringtones, Custom Reminders, Memory Function

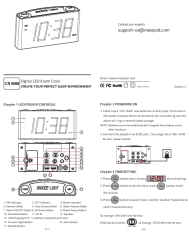
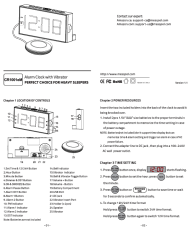
Feature	Detail
Power Source	Corded Electric (2 AAA backup batteries for memory, not included)
Supported Media (Photo Frame)	SD, SDHC, SDXC, USB2.0 (Max 64GB)

## WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not available in the provided product data. Please refer to the product packaging or the manufacturer's official website for details on warranty coverage and how to contact customer support for assistance.

## Related Documents - CR1029

	<a href="#">CR1029 Calendar Clock User Manual</a> User manual for the CR1029 Calendar Clock, detailing setup, alarm functions, schedule settings, themes, brightness, and language options.
	<a href="#">CR1024 Projection Alarm Clock User Manual</a> User manual for the CR1024 Projection Alarm Clock, detailing setup, time and date settings, alarm functions, projection features, brightness control, temperature/humidity display, and device charging capabilities.
	<a href="#">Mesqool CR1024 Projection Alarm Clock User Manual</a> User guide for the Mesqool CR1024 Projection Alarm Clock, detailing time setting, date setting, DST function, alarm settings, brightness control, temperature/humidity display, night light, projection mode, and device charging.
	<a href="#">Mesqool CR1001F Projection Alarm Clock User Manual</a> User manual for the Mesqool CR1001F Projection Alarm Clock, detailing its features, controls, time setting, alarm setting, projection mode, dimmer, DST, and USB charging.

	<p><a href="#">Mesqool CR1008 Digital LED Alarm Clock User Manual</a></p> <p>Comprehensive user manual for the Mesqool CR1008 Digital LED Alarm Clock, covering setup, features, operation, and warranty information.</p>
	<p><a href="#">Mesqool CR1001eM Alarm Clock with Vibrator User Manual</a></p> <p>User manual for the Mesqool CR1001eM Alarm Clock with Vibrator, detailing its features, controls, alarm settings, dimmer, DST, USB charging, and vibrator functions. Perfect for heavy sleepers.</p>