

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TOPUTURE](#) /

› [TOPUTURE 4-in-1 Foldable Walking Pad Treadmill User Manual](#)

TOPUTURE TP4

TOPUTURE 4-in-1 Foldable Walking Pad Treadmill User Manual

Model: TP4

INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your TOPUTURE 4-in-1 Foldable Walking Pad Treadmill. Please read this manual thoroughly before initial use and retain it for future reference.

The TOPUTURE 4-in-1 Foldable Walking Pad Treadmill with Incline and Handle Bar is designed for home use, offering a versatile exercise solution. It features a 2.5HP motor, dual LED displays, and a mute remote control. Its foldable design allows for easy storage in small spaces.

IMPORTANT SAFETY INFORMATION

To reduce the risk of serious injury, read all instructions before using this treadmill. It is the responsibility of the owner to ensure all users of this product are adequately informed of all warnings and precautions.

- Always place the treadmill on a level surface.
- Keep children and pets away from the treadmill during operation.
- Ensure the safety key is properly attached to your clothing before starting the treadmill. The treadmill will stop if the safety key is disengaged.
- Do not operate the treadmill if it has a damaged cord or plug, or if it is not working properly.
- Wear appropriate athletic footwear during use.
- Do not exceed the maximum weight recommendation of 130 kg (300 lbs).
- Consult a physician before starting any exercise program.

PACKAGE CONTENTS

Verify that all components are present and in good condition upon unpacking:

- User Manual
- Safety Key
- Power Cord
- Remote Control

- Tool Kit
- TOPUTURE 4-in-1 Foldable Walking Pad Treadmill Unit

SETUP

The TOPUTURE 4-in-1 Foldable Walking Pad Treadmill features an installation-free design, meaning it is ready to use right out of the box with minimal setup.

Unfolding and Folding

The treadmill can be used in two primary configurations: with the handle bar up for running/walking, or folded down for under-desk walking.

Powerful & Quiet Motor One-button Mute



< 45dB
Low Noise



2.5HP
Motor Power



300LBS
Weight Capacity



This image illustrates the treadmill's versatility, showing it in both its upright position with the handle bar for traditional use and folded down for under-desk walking.

- **To unfold:** Gently lift the handle bar until it locks into the upright position. Ensure it is securely locked before use.
- **To fold:** Release the locking mechanism (refer to specific instructions in the included manual for exact location) and carefully lower the handle bar until it rests flat against the base. This transforms it into a compact walking pad suitable for under-desk use or storage.

Space Saving & Easy Moving



This diagram demonstrates the space-saving folding mechanism, highlighting the compact dimensions (50x23x4.5 inches) and the transport wheels for easy movement and storage under furniture.

Incline Adjustment

The treadmill features a manual 9% incline to simulate climbing and enhance calorie burning. Adjust the incline as follows:



This image provides a visual guide for adjusting the manual incline in three steps: 1. Unfold the footpad, 2. Insert the pin, 3. Adjust the middle footpad to achieve the desired incline.

1. Unfold the footpad at the rear of the treadmill.
2. Insert the provided pin into the designated hole to secure the footpad at the incline position.
3. Adjust the middle footpad for stability.

OPERATING INSTRUCTIONS

Power On/Off

- Connect the power cord to a grounded outlet and to the treadmill's power port.
- Flip the main power switch to the 'ON' position.
- Attach the safety key to the designated area on the console and to your clothing. The treadmill will not operate without the safety key in place.
- To turn off, remove the safety key and flip the main power switch to 'OFF'.

Using the Display and Remote Control

The treadmill features dual LED displays, one on the main console and another on the handlebar, providing real-time data.



This image highlights the dual LED screen display, which clearly shows your workout data including speed, distance, time, and calories burned.


- **Start/Stop:** Press the 'Start' button on the console or remote to begin. Press 'Stop' to pause or end your workout.
- **Speed Adjustment:** Use the '+' and '-' buttons on the console or remote to adjust the speed. The speed ranges from 0.6 to

7.6 mph.

- **Mute Function:** The remote control includes a mute button to silence operational beeps, ensuring a quiet workout environment.

App Connectivity (Bluetooth)

Connect your treadmill to compatible sports apps like Fitshow via Bluetooth to track your exercise data and enhance your workout experience.

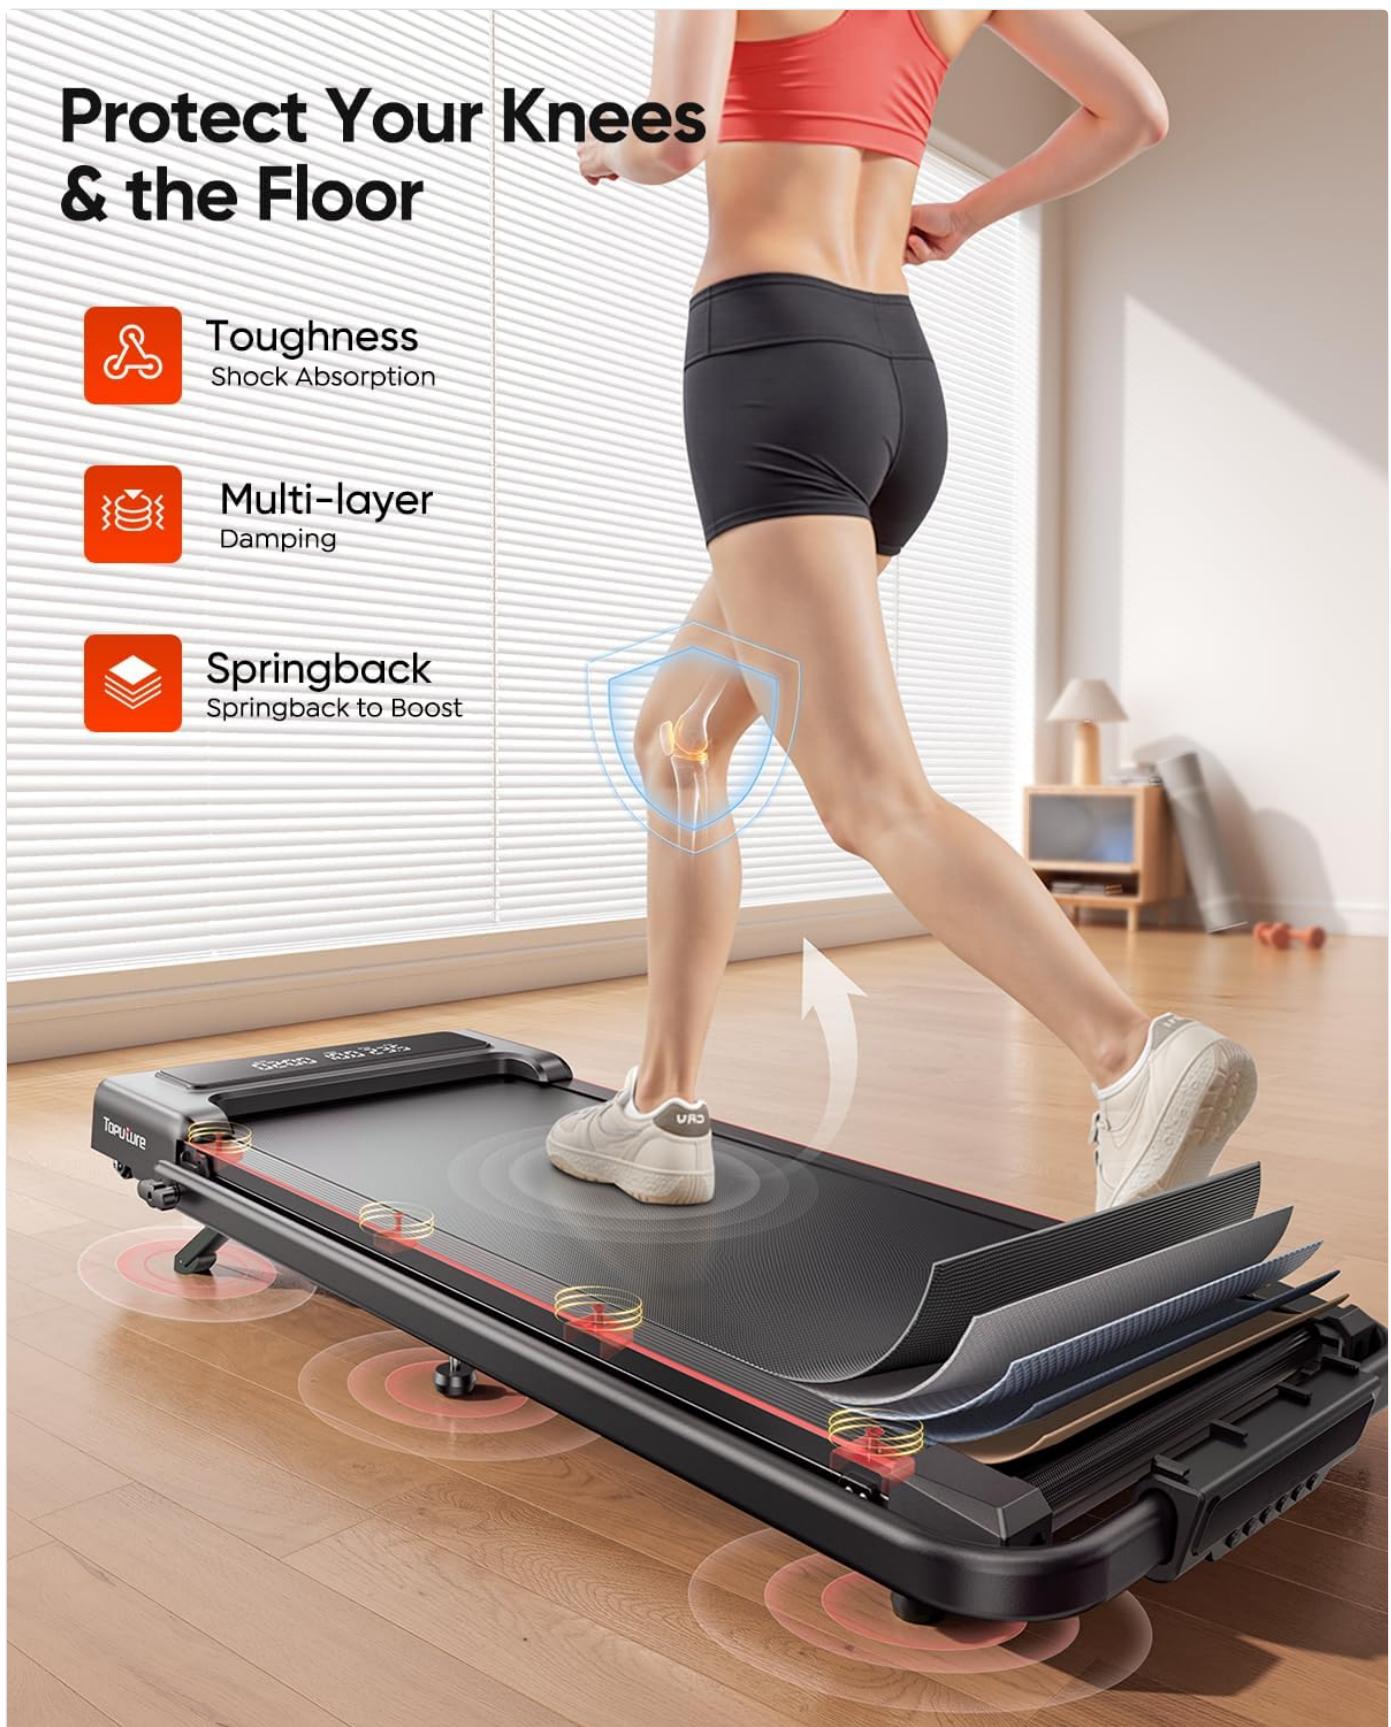

This image demonstrates the treadmill's app connectivity, allowing users to sync with fitness applications like Fitshow via Bluetooth to record and monitor their workout activities.

1. Download the recommended sports app (e.g., Fitshow) from your device's app store.
2. Ensure Bluetooth is enabled on your mobile device.
3. Open the app and follow the on-screen instructions to pair with your TOPUTURE treadmill.
4. Once connected, the app will display real-time workout data and allow for tracking and sharing.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your treadmill.

Lubrication

The treadmill features a convenient drip tube design for easy lubrication, avoiding spills and simplifying maintenance.



This image illustrates the lubrication port and the belt adjustment bolt, crucial for maintaining the treadmill's smooth operation and extending its lifespan.

- Apply silicone lubricant to the running deck every 3-6 months, depending on usage.
- Refer to the detailed instructions in the full user manual for the exact lubrication procedure.

Belt Adjustment

If the running belt deviates or feels loose, it may need adjustment.

- Use the provided tool kit to adjust the tension bolts at the rear of the treadmill.
- Adjust gradually, turning the bolts a quarter turn at a time, and test the belt after each adjustment.
- Ensure the belt is centered and moves smoothly without slipping.

Cleaning

- Wipe down the treadmill with a damp cloth after each use to remove sweat and dust.
- Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

This section addresses common issues you might encounter. For more complex problems, please contact customer support.

Problem	Possible Cause	Solution
Treadmill does not power on.	Power cord not connected, main switch off, safety key not in place.	Check power connections, ensure main switch is ON, insert safety key.
Running belt slips or hesitates.	Belt too loose, insufficient lubrication.	Adjust belt tension (see Maintenance), apply silicone lubricant.
Unusual noise during operation.	Loose components, motor issue, belt friction.	Check for loose screws, lubricate belt. If noise persists, contact support.
Remote control not responding.	Low battery, interference, not paired.	Replace remote battery, ensure no obstructions, re-pair if necessary (refer to manual).

SPECIFICATIONS

Feature	Detail
Brand	TOPUTURE
Model Name	TP4
Product Dimensions	50"D x 23"W x 4.5"H (Folded)
Item Weight	24 Kilograms
Material	Alloy Steel
Maximum Speed	7.6 Miles per Hour
Minimum Speed	0.6 Miles per Hour
Maximum Horsepower	2.5 Horsepower
Maximum Incline Percentage	9% (Manual)
Maximum Weight Recommendation	130 Kilograms (300 lbs)
Display Type	LED (Dual Display)
Connectivity Technology	Bluetooth
Special Features	Shock Absorbent, Manual Incline, Foldable, Compact Design, Wheeled, Mute Remote Control
Assembly Required	No

WARRANTY AND SUPPORT

Your TOPUTURE 4-in-1 Foldable Walking Pad Treadmill comes with a **1 Year Manufacturer Warranty**. For warranty claims or technical support, please refer to the contact information provided in your product packaging or visit the official TOPUTURE website.

Additionally, the product is eligible for **30-day easy returns** and dedicated customer support as per Amazon's policies.

For further assistance, you may contact TOPUTURE customer service directly. Contact details are typically found in the included user manual or on the manufacturer's official support page.

Related Documents - TP4

 	<p><u>Toputure TP3 Incline Walking Pad User Manual</u></p> <p>Comprehensive user manual for the Toputure TP3 Incline Walking Pad, covering installation, safety precautions, features, operation, maintenance, and troubleshooting. Includes technical specifications, error codes, and FCC compliance information.</p>
 	<p><u>Toputure TP3 Incline Walking Pad User Manual</u></p> <p>User manual for the Toputure TP3 Incline Walking Pad, covering installation, usage, maintenance, and troubleshooting.</p>
 	<p><u>Toputure TP1 Folding Treadmill User Manual</u></p> <p>Comprehensive user manual for the Toputure TP1 Folding Treadmill, covering installation, operation, safety, maintenance, and troubleshooting.</p>
 	<p><u>Toputure TP1 Folding Treadmill User Manual</u></p> <p>Comprehensive user manual for the Toputure TP1 Folding Treadmill, covering installation, operation, maintenance, and troubleshooting.</p>
 	<p><u>Toputure TP2 Home Treadmill User Manual</u></p> <p>Comprehensive user manual for the Toputure TP2 Home Treadmill, covering installation, operation, maintenance, safety, and troubleshooting. Includes detailed instructions, parameters, and fault diagnostics.</p>



[Toputre TP2 Home Treadmill User Manual](#)

User manual for the Toputre TP2 Home Treadmill, covering installation, operation, maintenance, and safety guidelines.