

KAITOL KAITOL Heißluftfritteuse 5L

KAITOL 5L Glass Hot Air Fryer User Manual

Model: KAITOL Heißluftfritteuse 5L

1. INTRODUCTION

Thank you for choosing the KAITOL 5L Glass Hot Air Fryer. This appliance is designed to provide a healthier and more efficient way to cook your favorite meals, utilizing rapid hot air circulation for crispy results with less oil. Please read this manual thoroughly before first use to ensure safe operation and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow adequate ventilation.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Keep children and pets away from the appliance during operation. The exterior surfaces can become hot.
- Do not block any ventilation openings.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way. Contact customer support for assistance.
- Use only accessories recommended by the manufacturer.
- Exercise extreme caution when removing the hot glass basket or disposing of hot grease.
- This appliance is for household use only. Do not use outdoors.

3. PRODUCT OVERVIEW

3.1 Components

- Main Unit with Digital LED Touch Screen

- Removable Glass Cooking Basket (5L capacity)
- Cooking Rack/Crisper Plate
- Basket Handles (attachable)



Figure 3.1: The KAITOL 5L Glass Hot Air Fryer in operation, showing a fish and asparagus cooking in the transparent glass basket.

3.2 Control Panel

The air fryer features an intuitive digital LED touch screen for easy operation. It includes preset cooking functions, manual temperature and time adjustments, and start/cancel controls.

HEIßLUFTFRITTIEREN WIE EIN PROFI MIT 8 VOREINSTELLUNGEN WIRD JEDER ZUM KOCH



Figure 3.2: Digital LED touch screen displaying various preset cooking icons for different food types.

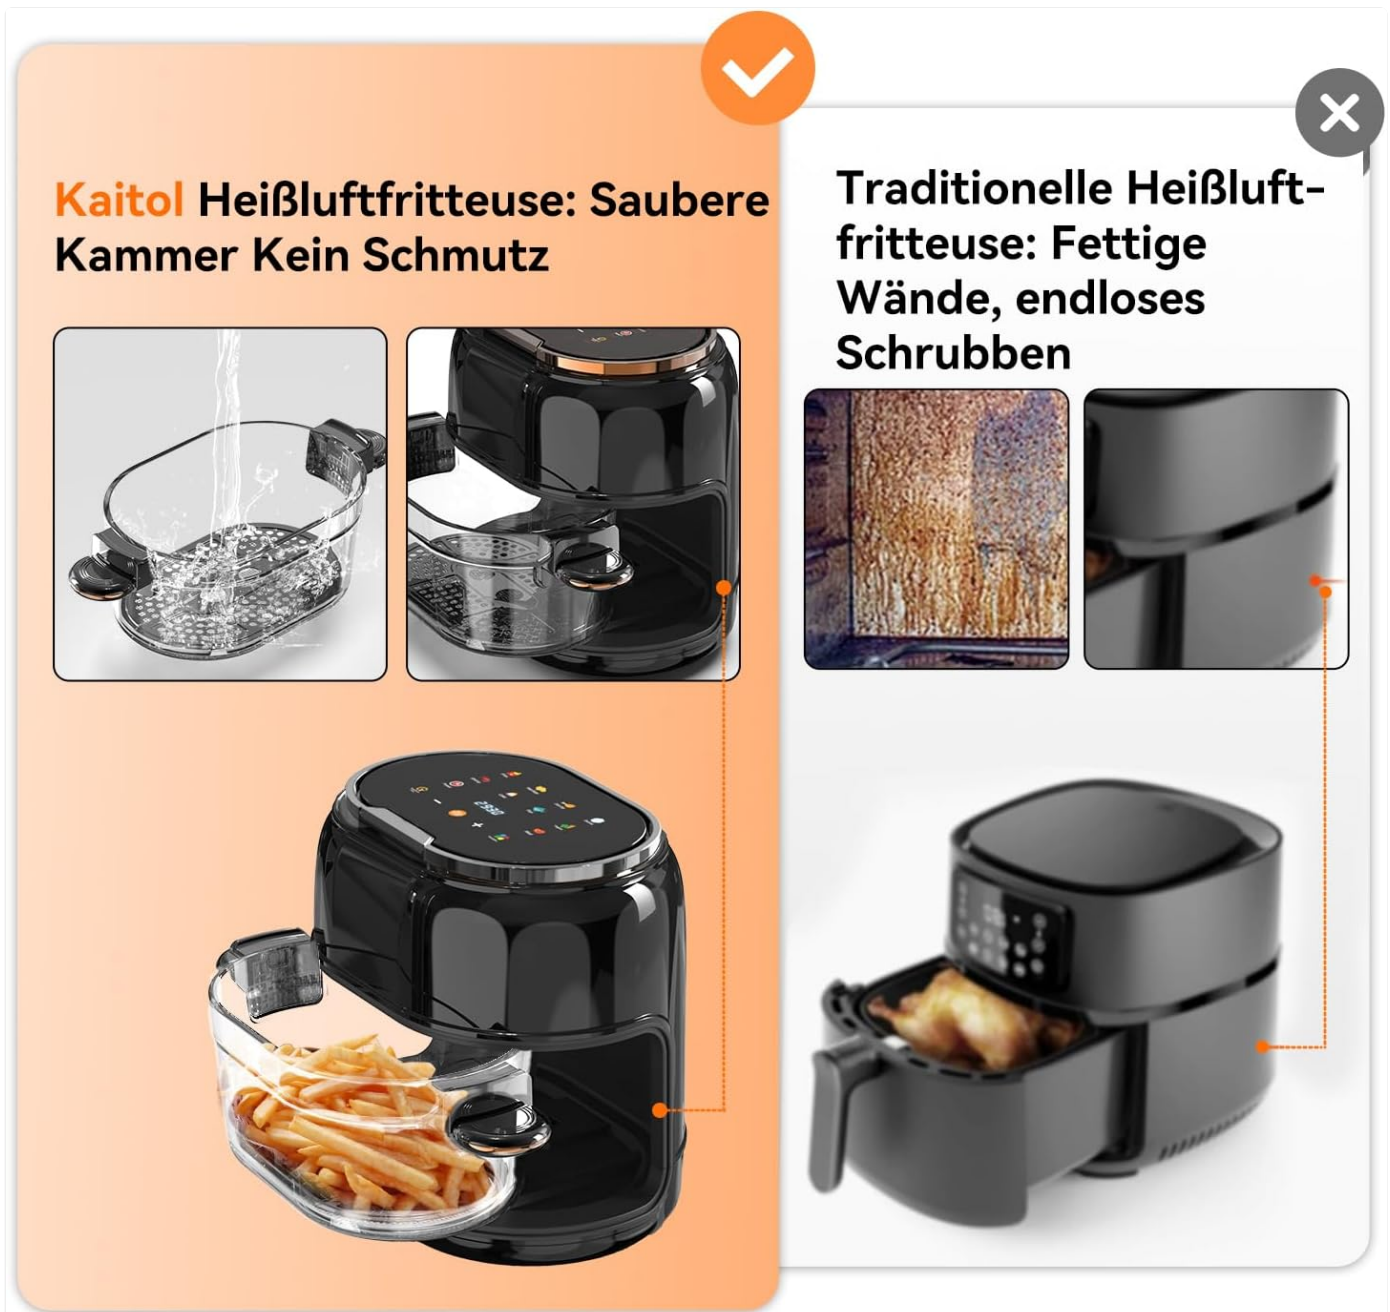


Figure 3.3: User interface for setting time and temperature, or selecting preset functions.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer. Ensure all components are present.
2. **Initial Cleaning:** Before first use, wash the glass cooking basket and cooking rack with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Assembly:** Attach the basket handles to the glass cooking basket as instructed in the packaging. Place the cooking rack inside the glass basket.
4. **Placement:** Position the air fryer on a flat, stable, heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance for proper air circulation.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The display will illuminate briefly.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. Place ingredients into the glass cooking basket. Ensure not to overfill.
2. Slide the glass basket securely into the main unit.
3. Press the power button to turn on the display.
4. Use the temperature and time control buttons (usually '+' and '-' symbols) to set your desired cooking temperature (60-190 °C) and time (1-60 minutes).
5. Press the 'Start/Cancel' button to begin cooking.
6. To pause or stop cooking, press the 'Start/Cancel' button again.

5.2 Using Preset Menus

The KAITOL Air Fryer comes with 9 preset menus for common dishes. To use a preset:

1. After placing food in the basket and turning on the display, tap the 'Menu' button or the specific food icon corresponding to your desired dish.
2. The air fryer will automatically set the optimal temperature and time for that preset.
3. Press 'Start/Cancel' to begin cooking.

5.3 Max Crisp Function

For exceptionally crispy results, utilize the 'Max Crisp' function. This setting is designed to achieve maximum crispness with up to 85% less fat compared to traditional frying methods. Refer to the recipe guide for specific foods that benefit most from this function.



Figure 5.1: The air fryer basket filled with french fries, demonstrating its cooking capability.

5.4 Monitoring Cooking Progress

The transparent glass cooking basket and large viewing window allow you to monitor your food's progress without opening the basket, thus maintaining consistent cooking temperature.



29cm



Hinweis: Die Griffe auf beiden Seiten erfordern eine einfache Montage

Figure 5.2: The air fryer cooking a whole chicken, highlighting the even heat distribution for thorough cooking.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Glass Basket and Rack:** The glass cooking basket and cooking rack are dishwasher safe. Alternatively, wash them with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers. Never immerse the main unit in water.
4. **Interior:** If necessary, gently wipe the interior of the heating chamber with a damp cloth. Ensure no food particles are left behind.
5. **Storage:** Once clean and dry, store the air fryer in a cool, dry place.

360° -WÄRMEZIRKULATION

Gleichmäßige Hitze, jeder Bissen – einfach perfektes Kochen, jedes Mal



Figure 6.1: Illustration of the ease of cleaning the glass basket, which can be washed under running water or in a dishwasher.

Unser 5L



Ihre 5L



EXTRALANGES KORBDESIGN

Mehr kochen, mehr servieren, mehr genießen

Figure 6.2: Overview of the air fryer's detachable parts and approximate dimensions for reference.

7. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a working electrical outlet. Check your household's circuit breaker.
- **Food is not cooked evenly:** Ensure the basket is not overfilled. Shake or flip ingredients halfway through cooking for best results. Adjust temperature or cooking time as needed.
- **White smoke coming from the appliance:** This may indicate that fatty ingredients are cooking. Ensure the glass basket and cooking rack are clean. If smoke is excessive or black, unplug immediately and contact customer support.
- **Food is not crispy:** Ensure the 'Max Crisp' function is used for appropriate foods. Do not overfill the basket. A light coating of oil can help achieve crispier results.

For issues not covered here, please contact KAITOL customer support.

8. SPECIFICATIONS

Brand	KAITOL
Model Name	KAITOL Heißluftfritteuse 5L
Capacity	5 Liters
Output Wattage	220 Watts
Temperature Range	60-190 °C
Timer Range	1-60 Minutes
Material	Aluminium, Glass, Plastic, Stainless Steel
Product Dimensions	35D x 27W x 33H cm
Special Features	Max Crisp, Digital LED Touch Screen, Visible Window, Dishwasher Safe Glass Basket

9. WARRANTY AND SUPPORT

Your KAITOL 5L Glass Hot Air Fryer is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, service, or questions regarding your product, please contact KAITOL customer service through the retailer where the product was purchased or visit the official KAITOL website for contact information.

