

Princess 182257

Princess SlimFry Air Fryer 8L (Model 182257) Instruction Manual

Your guide to safe and efficient operation

Introduction

Safety Instructions

Product Overview

Setup

Operation

Maintenance

Troubleshooting

Specifications

Warranty & Support

1. INTRODUCTION

Thank you for purchasing the Princess SlimFry Air Fryer 8L (Model 182257). This appliance is designed to prepare a variety of meals using hot air circulation, offering a healthier alternative to traditional frying methods. Please read this manual thoroughly before first use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then

remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.
- The appliance features an automatic shut-off function for safety.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the different parts of your Princess SlimFry Air Fryer.



Figure 3.1: Front view of the Princess SlimFry Air Fryer with the cooking basket partially open, displaying cooked fries. The digital touchscreen control panel is visible on top.

1. **Main Unit:** Houses the heating element and fan.
2. **Digital Touchscreen Control Panel:** For setting temperature, time, and selecting programs.
3. **Cooking Basket:** Removable basket for holding food.
4. **Viewing Window:** Allows monitoring of food during cooking without opening the basket.
5. **Handle:** For safely pulling out and inserting the cooking basket.
6. **Air Outlet Vent:** Located at the rear of the appliance.
7. **Power Cord:** For connecting to an electrical outlet.

4. INITIAL SETUP

1. **Unpack:** Carefully remove all packaging materials and any promotional labels from the air fryer.
2. **Clean:** Wash the cooking basket and any removable accessories in warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface, ensuring there is at least 10 cm of clear space around the back and sides for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **First Use (Burn-in):** Before cooking food, it is recommended to run the air fryer for approximately 10-15 minutes at 180°C (350°F) without any food inside. This helps to burn off any manufacturing residues and eliminate initial odors. A slight smell or smoke may occur during this process; this is normal. Ensure the area is well-ventilated.



Figure 4.1: Image illustrating the dimensions of the Princess SlimFry Air Fryer: 46.5 cm length, 26.7 cm width, and 29.4 cm height. This helps in planning countertop space.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. **Plug In:** Connect the power cord to a grounded electrical outlet. The display will illuminate briefly.
2. **Prepare Food:** Place your ingredients into the cooking basket. Do not overfill the basket to ensure even cooking.
3. **Insert Basket:** Slide the cooking basket firmly back into the main unit.
4. **Power On:** Press the power icon on the digital touchscreen.
5. **Set Temperature and Time:**
 - Use the temperature control icons (+ / -) to adjust the desired cooking temperature (up to 200°C).
 - Use the timer control icons (+ / -) to set the cooking time (up to 60 minutes).
6. **Start Cooking:** Press the start/pause icon to begin the cooking process. The fan and heating element will activate.
7. **Monitor Food:** Use the viewing window to check on your food. For even cooking, you may pull out the basket and shake or flip the food halfway through the cooking time. The air fryer will pause automatically when the basket is removed and resume when reinserted.
8. **Finish Cooking:** The air fryer will beep when the set time has elapsed and automatically shut off. Carefully pull out the basket and transfer the cooked food to a plate.
9. **Power Off:** Press and hold the power icon to turn off the appliance if not using the automatic shut-off. Unplug the appliance after use.

5.2 Using Pre-programmed Settings

The Princess SlimFry Air Fryer features 8 pre-programmed settings for common dishes. These settings automatically adjust the temperature and time for optimal results.

1. Follow steps 1-3 from Basic Operation.
2. Press the power icon.
3. Select one of the 8 pre-programmed icons (e.g., fries, chicken, fish, cake). The display will show the default temperature and time for that program.
4. You can adjust the default temperature and time using the + / - icons if desired.
5. Press the start/pause icon to begin cooking.



Figure 5.1: An image showcasing various food items cooked in the Princess SlimFry Air Fryer, including fries, salmon, chicken, and potatoes, with suggested cooking times and temperatures.

5.3 Cooking Tips

- For crispy results, lightly toss food with a small amount of oil (1-2 tablespoons) before air frying.
- Smaller food items generally require shorter cooking times than larger ones.
- Shake the basket halfway through cooking for most foods to ensure even browning.
- You can use the air fryer to reheat food. Set the temperature to 150°C (300°F) for 5-10 minutes.
- The 8L capacity is suitable for preparing meals for up to 6 people.



Figure 5.2: This image demonstrates the capacity of the Princess SlimFry Air Fryer basket, showing it can hold 19 chicken wings, 2.5 kg of fries, 1 loaf of bread, or 450g of shrimp.

6. MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Clean Basket:** The cooking basket is dishwasher safe. Alternatively, wash it with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak the basket in hot water for about 10 minutes before cleaning.
3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth and mild detergent. Do not use abrasive cleaners or metal scouring pads.
4. **Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth.
5. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.
6. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.



Figure 6.1: The cooking basket of the Princess SlimFry Air Fryer placed inside a dishwasher, demonstrating its dishwasher-safe feature for easy cleaning.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a grounded outlet. Test the outlet with another appliance.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Basket is overfilled. Food was not shaken/flipped.	Do not overfill the basket; cook in smaller batches if necessary. Shake or flip food halfway through cooking.
White smoke comes from the appliance.	Grease residue from previous use. Cooking fatty food.	Clean the basket and interior thoroughly after each use. For very fatty foods, place a heat-resistant dish at the bottom of the basket to catch excess oil.
Food is not crispy.	Too much moisture in food. Not enough oil. Temperature too low.	Pat food dry before cooking. Lightly toss food with a small amount of oil. Increase cooking temperature slightly.

8. SPECIFICATIONS

- Model:** Princess SlimFry Air Fryer 182257
- Capacity:** 8 Liters
- Power:** 2000 Watts
- Voltage:** 230 Volts (AC)
- Temperature Range:** Up to 200°C
- Timer:** Up to 60 minutes
- Special Features:** Digital Touchscreen, 8 Pre-programmed Settings, Viewing Window, Automatic Shut-Off, Dishwasher Safe Basket (PFAS free)
- Dimensions (L x W x H):** 46.5 x 26.7 x 29.4 cm
- Weight:** 7 kg

9. WARRANTY AND SUPPORT







This Princess appliance is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or replacement parts, please contact your local Princess customer service or the retailer from whom you purchased the product. Keep your proof of purchase for warranty claims.


Manufacturer: Princess

Model Number: 01.182257.01.001



	<p>Princess Digital Family Aerofryer Instruction Manual</p> <p>User manual for the Princess Digital Family Aerofryer (Model 01.182050.01.001). Contains safety instructions, operating guidelines, program details, and maintenance tips for this household air fryer.</p>
	<p>Princess Mini Fryer 01.182612.01.001 Instruction Manual</p> <p>Comprehensive instruction manual for the Princess Mini Fryer (Model 01.182612.01.001). Learn about safe operation, cleaning, maintenance, and cooking tips for your household deep fryer.</p>
	<p>Princess Deep Fryer 01.185000.01.001 User Manual Safety, Operation, and Maintenance Guide</p> <p>Comprehensive user manual for the Princess Deep Fryer, model 01.185000.01.001. This guide provides essential safety instructions, detailed operating procedures, frying tips, cleaning and maintenance advice, and environmental information for safe and effective use.</p>
	<p>Princess Double Basket Aerofryer Instruction Manual</p> <p>Comprehensive user manual for the Princess Double Basket Aerofryer (Model 01.182068.01.001). Includes safety guidelines, operating instructions, cleaning procedures, and maintenance tips for this dual-basket air fryer.</p>
	<p>Princess Double Basket Aerofryer 01.182074.01.001 Instruction Manual</p> <p>Comprehensive user guide for the Princess Double Basket Aerofryer (Model 01.182074.01.001), detailing safe operation, cooking functions, cleaning, and maintenance for efficient air frying.</p>
	<p>Princess Superior Fryer Instruction Manual - Safe Use and Operation Guide</p> <p>Detailed instruction manual for the Princess Superior Fryer (models 01.183001.01.050, 01.183002.01.050). Learn about safety precautions, operation, cleaning, and maintenance for optimal frying results.</p>

Documents - Princess – 182257

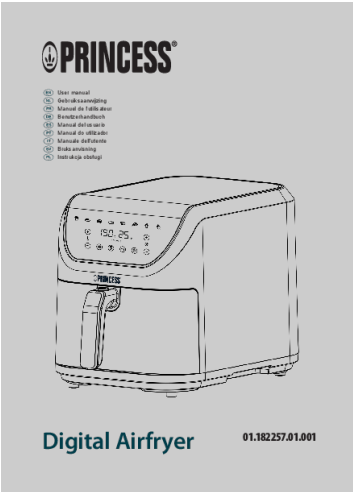

[pdf] User Manual Instructions Declaration of Conformity

Digital Airfryer OTTOFrituur uw ingrediënten in de heteluchtfriteuse binnen een paar minuten © Princess
Swaardvenstraat 65 5048 AV Tilburg The Netherlands www 9b9914a7 581c 4828 8850 f4a46b3faec1d
otto files 9b9914a7 f4a46b3faec1 OTTO01 182257 01 001 IMFrituur www Princess Aerofryer SlimFry 8L
Princess9b9914a7 f4a46b3faec101 4677f922 bbb8 41eb bd20 feac9efc3bdb IMd
f4a46b3faec1princesshome eu it product attachment productId attachmentName IM ||| ||| a User manual
d Gebruiksaanwijzing b Manuel de l'utilisateur c Benutzerhandbuch h Manual del usuario i Manual do
utilizador j Manuale dell'utente e Bruksanvisning n Instrukcja obsługi Digital Airfryer 01.182257.01.001 a
User manual d Gebrui
a User manual d Gebruiksaanwijzing b Manuel de l'utilisateur c Benutzerhandbuch h
Manual del usuario i Manual do utilizador j Manuale dell'utente e Bruksanvisning n
Instrukcja obsługi Digital Airfryer 01.182257.01.001 a User manual d
Gebruiksaanwijzing b Manuel de l'utilisateur c Benutzerhandbuc...
lang:en score:23 filesize: 3.78 M page_count: 103 document date: 2024-12-06

EU DECLARATION OF CONFORMITY

(in accordance with EN ISO/IEC 17050-1)

Declaration number:

DOCIP 2673739

Name and address of manufacturer / EU-AR:

Smartwares Europe
Swaardvenstraat 65
5048 AV Tilburg
Netherlands

THIS DECLARATION OF CONFORMITY IS ISSUED UNDER THE SOLE RESPONSIBILITY OF:

Smartwares Europe
Swaardvenstraat 65
5048 AV Tilburg
Netherlands

Product identification:

Princess 8L SlimFry Airfryer
01.182257.01.001

THE PRODUCTS MENTIONED IN THIS DECLARATION ARE IN CONFORMITY WITH:

EU Community Legislation:

Electromagnetic Compatibility (EMC) Directive 2014/53/EU (OJEU L261/24-35, 20.03.2016)
Ecodesign energy-related products Directive 2009/125/EC (OJEU L283/10-35, 31.10.2009)
Low Voltage Directive (LVD) 2014/35/EU (OJEU L261/24-35, 20.03.2016)
Restriction of Hazardous Substances (RoHS) Directive 2011/65/EU (OJEU L174/10-15, 05.07.2011)

Harmonised standards:

Safety of electrical equipment
EN 60335-1:2012 + A1:2014 + A2:2017 + A3:2019 + A4:2019 + A5:2021
EN 60335-2-9:2013 + A1:2004 + A2:2006 + A3:2007 + A3:2010
Exposure of humans to electromagnetic fields (EMF)
EN 62233:2008
Electromagnetic Compatibility (EMC)
EN IEC 55014-1:2021
EN IEC 55014-2:2021
EN IEC 61000-3-2:2019 + A1:2021
EN 61000-3-3:2013 + A1:2019 + A2:2021
Restricted substances in electrical products
EN IEC 63000:2018
Ecodesign, Energy performance
Regulation (EU) 202/2026 - Ecodesign for household and office equipment

ISSUED FOR AND ON BEHALF OF:

Place and date of issue:

Tilburg, 18 March 2025

Signature:

Job Heuricks

Quality Officer

Smartwares Europe

Ricardo Klepper

Quality Manager

Smartwares Europe

This declaration of conformity was generated using the ProductID compliance platform.

1 / 1

[pdf] Decleration of Conformity

01 182257 001 DOC EN 18 03 25Princess Aerofryer Princess SlimFry 8L Princess01 0a33f4b3 06b6 4e0e 9e7a 0987689c313a 25princesshome eu it product attachment productId attachmentName 25 EU DECLARATION OF CONFORMITY01 Airfryer THE PRODUCTS MENTIONED IN THIS ARE CONFORMITY WITH Community Legislation Electromagnetic Princess Princess9104 InnDRL01 25m media amazon images | 9104 InnDRL ref dp quick viewprincesshome ||| ||| EU DECLARATION OF CONFORMITY In accordance with EN ISO/IEC 17050-1 Declaration number: DOCIP 2673739 Name and address of manufacturer / EU-AR: Smartwares Europe Swaardvenstraat 65 5048 AV Tilburg Netherlands THIS DECLARATION OF CONFORMITY I EU DECLARATION OF CONFORMITY In accordance with EN ISO/IEC 17050-1 Declaration number: DOCIP 267 ... dvenstraat 65 5048 AV Tilburg Netherlands Product identification: Princess 8L SlimFry Airfryer 01.182257.01.001 THE PRODUCTS MENTIONED IN THIS DECLARATION ARE IN CONFORMITY WITH: EU Community Legi... lang:en score:12 filesize: 525.8 K page_count: 2 document date: 2025-03-19