

[Manuals.plus](#) /

› [Dekala](#) /

› Dekala Sunrise Alarm Clock User Manual

Dekala SRWW

Dekala Sunrise Alarm Clock User Manual

Model: SRWW

INTRODUCTION

The Dekala Sunrise Alarm Clock is a versatile 3-in-1 device designed to enhance your daily routine. It combines a sunrise simulation alarm clock, a white noise sound machine, and a wireless charging station for multiple devices. This manual provides detailed instructions for setting up, operating, and maintaining your device to ensure optimal performance and a seamless user experience.



The Dekala Sunrise Alarm Clock, featuring its integrated wireless charging pad for smartphones and a dedicated stand for smartwatches, alongside the main light display showing the time and alarm icons.

PRODUCT FEATURES

- **3-in-1 Wireless Charging Station:** Supports simultaneous wireless charging for compatible smartphones (up to 15W), smartwatches (3W), and wireless earphones (5W). Compatible with iPhone 8/X/12/13/14/15/16 series, Samsung Galaxy S10/S20/S21/S22 series, Google Pixel 6/7 Pro, Apple Watch 2-8/SE, and AirPods 2/3/Pro.
- **Sunrise Simulation Alarm Clock:** Gradually brightens over 5 to 120 minutes before your set alarm time, mimicking a natural sunrise. Features 7 natural alarm sounds and 10 volume levels.
- **White Noise Sound Machine:** Offers 15 relaxing sounds to aid sleep, including rain, bonfire, night whispers, yoga, zen, white noise, pink noise, and brown noise. Sleep aid duration adjustable from 5 to 120 minutes, or continuous play.

- **Dual Alarms & Snooze Function:** Set two independent alarms for weekdays, weekends, or everyday. Snooze function provides an additional 9 minutes of sleep, up to 5 times.
- **Ambient Lighting & Night Lamp:** Features 11 color options and 20 brightness levels. Can be used as a night light, reading light, or sunset lamp. Time display brightness is adjustable (day, night, auto, off).

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Ensure the alarm clock, power adapter, and USB cable are present.
2. **Power Connection:** Connect the provided USB cable to the alarm clock's power input port and plug the other end into the included AC power adapter. Plug the adapter into a standard wall outlet. The display will illuminate.
3. **Initial Placement:** Place the alarm clock on a stable, flat surface, such as a bedside table, ensuring adequate space for wireless charging of your devices.

OPERATING INSTRUCTIONS

1. Setting Time and Display Brightness


- **Time Setting:** Press and hold the "Time Set" button (refer to device diagram for exact button location, typically indicated by a clock icon). Use the "+" and "-" buttons to adjust hours and minutes. Press "Time Set" again to confirm.
- **Time Display Brightness:** Short press the "Display Brightness" button (often indicated by a sun icon or light bulb). Cycle through Day, Night, Auto, and Off modes to adjust the LED display's brightness.

2. Sunrise Alarm Function

Gradual Sunrise Natural Sounds with no more jarring alarms



Automatically shut
off in 15 minutes if
no action is taken

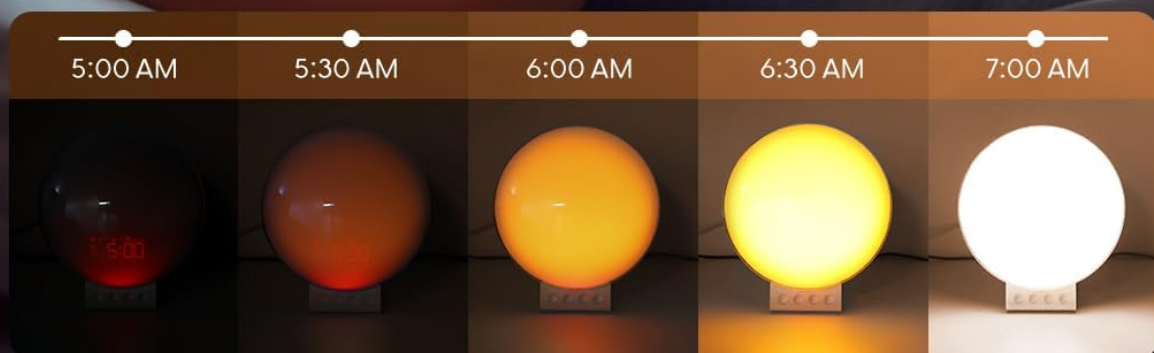

The alarm clock simulates a natural sunrise, gradually increasing light intensity to gently wake you up.

- **Setting an Alarm:** Press the "Alarm 1" or "Alarm 2" button. Use "+" and "-" to set the desired wake-up time. Press the alarm button again to confirm.
- **Alarm Sounds:** After setting the time, use the "Sound" button to cycle through 7 natural sounds. Use "+" and "-" to adjust the alarm volume (10 levels).
- **Sunrise Duration:** Press the "Sunrise" button to select the duration for the light to gradually brighten (5-120 minutes).

- **Repeat Time:** Use the "Repeat" button to select alarm days: Weekends, Weekdays, or Everyday.
- **Snooze Function:** When the alarm sounds, tap the top of the clock or press the "Snooze" button. The alarm will pause for 9 minutes and sound again. This can be repeated up to 5 times.

3. White Noise Sound Machine



Personalize Your Sleep Routine

A library combination of sounds and lights for yoga, meditation or party






Auto-dim Warm Soft or Rhythmic Lighting

White Noise or Soothing Sounds Machine

0-90mins Countdown Timer or Play All Night



Rain

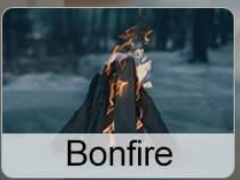

Bonfire



Night Whispers



Yoga



Zen



White Noise



Pink Noise



Brown Noise

The device offers a variety of soothing sounds to help personalize your sleep routine and promote relaxation.

- **Activating Sounds:** Press the "Sound Machine" button (often indicated by a musical note icon). Cycle through 15

available sounds.

- **Volume Adjustment:** Use "+" and "-" buttons to adjust the volume of the sound machine.
- **Sleep Aid Duration:** Press the "Timer" button to set a duration for the sound to play (5-120 minutes) or select "All Night" for continuous play.

4. Wireless Charging

Revitalize Your Body Recharge Your Devices

Effortless power, snap and charge with
MagSafe Magnetic Wireless Charger

Up to 15W for Mobile Phones



iPhone 15/15 Plus/15 Pro/15 Pro Max
iPhone 14/14 Plus/14 Pro/14 Pro Max
iPhone 13 mini/13/13 Pro/13 Pro Max
iPhone 12 mini/12/12 Pro/12 Pro Max
iPhone 11/11 Pro/11 Pro Max
iPhone X/XS/XS Max/XR/8/8 Plus

Samsung Galaxy S22/S22 Ultra/S21/
S21 Ultra/S20/S20 Plus/S20 Ultra/
S10/S10 Plus/S10e/Fold/Fold 5G/Z flip3
Google Pixel 7 Pro / 6 Pro
Other Qi-enabled wireless charging cellphone

3W for Smart Watch



Apple Watch 9/8/7
6/SE/5/4/3/2

*Not for Samsung Watches.

5W for Earphone



Airpods 2 wireless /
AirPods Pro/ AirPods 3

Note: For optimal charging, ensure your
phone case thickness is within 5mm (0.2 in)



For MagSafe


The alarm clock features multiple wireless charging points for your smartphone, smartwatch, and wireless earbuds, reducing cable clutter.

- **Smartphone Charging:** Place your compatible smartphone on the designated wireless charging pad at the base of the clock. Ensure it is centered for optimal charging.
- **Smartwatch Charging:** Place your Apple Watch on the dedicated magnetic charging stand.
- **Earphone Charging:** Place your compatible wireless earphone case on the smaller charging area, typically located near the smartphone pad.
- **Charging Indicator:** A charging indicator light on the device will typically illuminate or change color to confirm that charging has begun.
- *Note: For optimal charging, ensure your phone case thickness is within 5mm (0.2 inches).*

5. Ambient Lighting and Mood Light

Color Therapy Library Mood Light

Every moment is made glorious
by the light of love

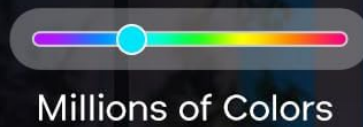

Touch to
switch



The device can display millions of colors and offers 0-100% brightness adjustment, creating various mood lighting effects.

- **Changing Colors:** Press the "Light" button (often indicated by a light bulb icon) to cycle through 11 ambient lighting effects. Some models may support touch control on the light surface to switch colors.
- **Adjusting Brightness:** Use the "+" and "-" buttons to adjust the light brightness (20 levels).
- **Sunset Lamp Function:** Activate the sunset mode (refer to specific button or touch sequence in your quick start guide) to simulate a gradual dimming of light, aiding in relaxation before sleep.

MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry, or slightly damp cloth to wipe the surface of the alarm clock. Do not use abrasive cleaners, solvents, or harsh chemicals.
- **Storage:** If storing the device for an extended period, disconnect it from power and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Water:** This device is not waterproof. Keep it away from water, high humidity, and liquids to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Power cable not connected properly; power outlet issue.	Ensure power cable is securely plugged into the device and a working wall outlet. Try a different outlet.
Wireless charging not working.	Device not properly aligned; phone case too thick; incompatible device.	Reposition your device on the charging pad. Remove thick phone cases. Verify device compatibility with Qi wireless charging.
Alarm does not sound or light up.	Alarm not set or activated; volume too low; sunrise duration set to 0.	Check alarm settings and ensure it is enabled. Increase alarm volume. Verify sunrise duration is set correctly.
Buttons are unresponsive.	Temporary software glitch.	Disconnect the power cable for 10 seconds, then reconnect it to perform a soft reset.

SPECIFICATIONS

Feature	Detail
Brand	Dekala
Model Number	SRWW
Color	White
Display Type	LCD
Product Dimensions	2"W x 2"H (Note: This dimension seems to be a placeholder or incorrect based on product images. Refer to packaging for accurate dimensions.)
Item Weight	1.82 pounds
Power Source	Corded Electric
Wireless Charging Output	Up to 15W (Smartphone), 3W (Smartwatch), 5W (Earphones)
Alarm Sounds	7 Natural Sounds

Feature	Detail
White Noise Sounds	15 Soothing Sounds
Ambient Light Colors	11 Color Options
Light Brightness Levels	20 Levels
Sunrise Simulation Duration	0-120 minutes
Snooze Time	9 minutes, up to 5 times

WARRANTY AND SUPPORT

Dekala products are manufactured with high-quality standards. For warranty information, technical support, or customer service inquiries, please refer to the contact information provided on the product packaging or visit the official Dekala website. Please retain your proof of purchase for any warranty claims.

For further assistance, you may also contact the seller directly through the platform where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

