

[Manuals.plus](#) /

› [Beelicious Pro](#) /

› Beelicious Pro 4QT 8-in-1 Smart Digital Air Fryer User Manual

Beelicious Pro 1

Beelicious Pro 4QT 8-in-1 Smart Digital Air Fryer User Manual

Model: 1

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Beelicious Pro 4QT 8-in-1 Smart Digital Air Fryer. Please read all instructions carefully before first use and retain this manual for future reference.

The Beelicious Pro Air Fryer features 8 pre-programmed functions, a wide temperature range up to 450°F, Flavor-Lock Tech for even cooking, and a tempered glass display for easy control. Its compact 4-quart capacity is suitable for 1-3 people.

8+ Functions All-in-One

Wide Customizable Temp Range : 100-450°F



Air Fry



Roast



Bake



Broil



Fries



Steak



Reheat



Dehydrate



Image: The Beelicious Pro 4QT 8-in-1 Smart Digital Air Fryer in Bright White.

IMPORTANT SAFETY INSTRUCTIONS

- **Read all instructions:** Before operating the appliance.
- **Hot surfaces:** Do not touch hot surfaces. Use handles or knobs.
- **Electrical shock:** To protect against electrical shock, do not immerse cord, plugs, or the appliance housing in water or other liquid.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Unplug when not in use:** Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- **Damaged cord/plug:** Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

- **Accessory attachments:** The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
 - **Outdoor use:** Do not use outdoors.
 - **Cord safety:** Do not let cord hang over edge of table or counter, or touch hot surfaces.
 - **Placement:** Do not place on or near a hot gas or electric burner, or in a heated oven.
 - **Moving appliance:** Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
 - **Disconnect:** To disconnect, turn any control to "off", then remove plug from wall outlet.
 - **Intended use:** Do not use appliance for other than intended household use.
 - **Proper ventilation:** Ensure adequate air circulation around the appliance during operation.
-

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Beelicious Pro Air Fryer:


- **Main Unit:** The primary housing of the air fryer.
- **Control Panel:** Tempered glass display with touch controls for settings and functions.
- **Air Fryer Basket:** Removable basket for holding food during cooking.
- **Crisper Plate:** Inserted into the basket to allow air circulation around food.
- **Handle:** Cool-touch handle for safely removing the basket.

MAX Tender by FlavorLock-Tech

Patented Technology for Better Taste and Flavor



±5°Precise Temp-Ctrl

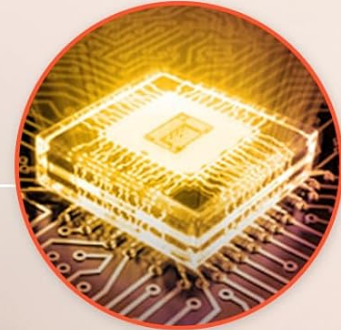

Patented 360°Airflow Design

Max Tender & Juicy Results

Image: The Beelicious Pro Air Fryer with its removable basket and crisper plate.

SETUP AND FIRST USE

1. **Unpack:** Remove all packaging materials, stickers, and labels from the air fryer.
2. **Clean:** Wash the air fryer basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely. Wipe the interior and exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 5 inches (13 cm) of clear space around the back and sides of the appliance for proper ventilation. Do not place it directly under cabinets.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

OPERATING INSTRUCTIONS

Control Panel Overview

The Beelicious Pro Air Fryer features an intuitive tempered glass touch display. The display shows temperature and time, along with various function icons.



Image: Close-up of the Beelicious Pro Air Fryer's tempered glass touch control panel, showing various cooking functions and settings.

Basic Operation

1. **Prepare Food:** Place your ingredients into the air fryer basket, ensuring not to overfill. For best results, do not exceed the MAX fill line.
2. **Insert Basket:** Slide the air fryer basket firmly into the main unit.
3. **Power On:** Plug in the air fryer. The display will illuminate.
4. **Select Function:** Press the "MENU" button to cycle through the 8 pre-programmed functions: Air Fry, Roast, Bake, Broil, Fries, Steak, Reheat, Dehydrate. Alternatively, you can manually set time and temperature.
5. **Adjust Time/Temperature:** Use the "TIME" and "TEMP" buttons, along with the '+' and '-' icons, to adjust the

cooking time (1-60 minutes) and temperature (100°F-450°F) as needed for your recipe.

6. **Shake Reminder:** For even cooking, especially with smaller items like fries or chicken wings, activate the "SHAKE" reminder. The air fryer will beep halfway through the cooking cycle, prompting you to shake or flip the food.
7. **Start Cooking:** Press the Start/Pause button to begin the cooking process.
8. **Monitor Progress:** The display will show the remaining cooking time.
9. **Remove Food:** Once cooking is complete, the air fryer will beep. Carefully pull out the basket using the cool-touch handle. Use tongs to remove food from the basket.

Cooking Versatility

The 8-in-1 functionality allows for a wide range of cooking methods. Experiment with different settings to achieve desired results for various foods.

Dishwasher-Safe & Easy to Clean



Image: Visual representation of the 8 cooking functions available on the Beelicious Pro Air Fryer.

Flavor-Lock Technology

The patented IQTemp and MaxCrisp-Tech, combined with 360° rapid airflow, ensures precise temperature control and even heat distribution, resulting in tender and crispy food with up to 85-90% less oil.

Large Capacity for 2-4 Servings



1.5-lb
French Fries



8-10
Chicken Wings



3-lb
Chicken



2
Pieces Steaks



Image: Diagram explaining the Flavor-Lock Technology with 360° airflow and precise temperature control for optimal cooking results.

Official Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the features and usage of the Beelicious Pro 4QT Smart Digital Air Fryer, including its touch display, cooking functions, and results.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

- 1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- 2. **Basket and Crisper Plate:** The air fryer basket and crisper plate are dishwasher-safe. For manual cleaning, wash them with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely. Ensure all food residue is removed.
- 3. **Interior:** Wipe the interior of the air fryer with a damp cloth or non-abrasive sponge. For stubborn residue, a small amount of mild dish soap can be used. Ensure the interior is dry before next use.
- 4. **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- 5. **Storage:** Store the clean and dry air fryer in a cool, dry place.

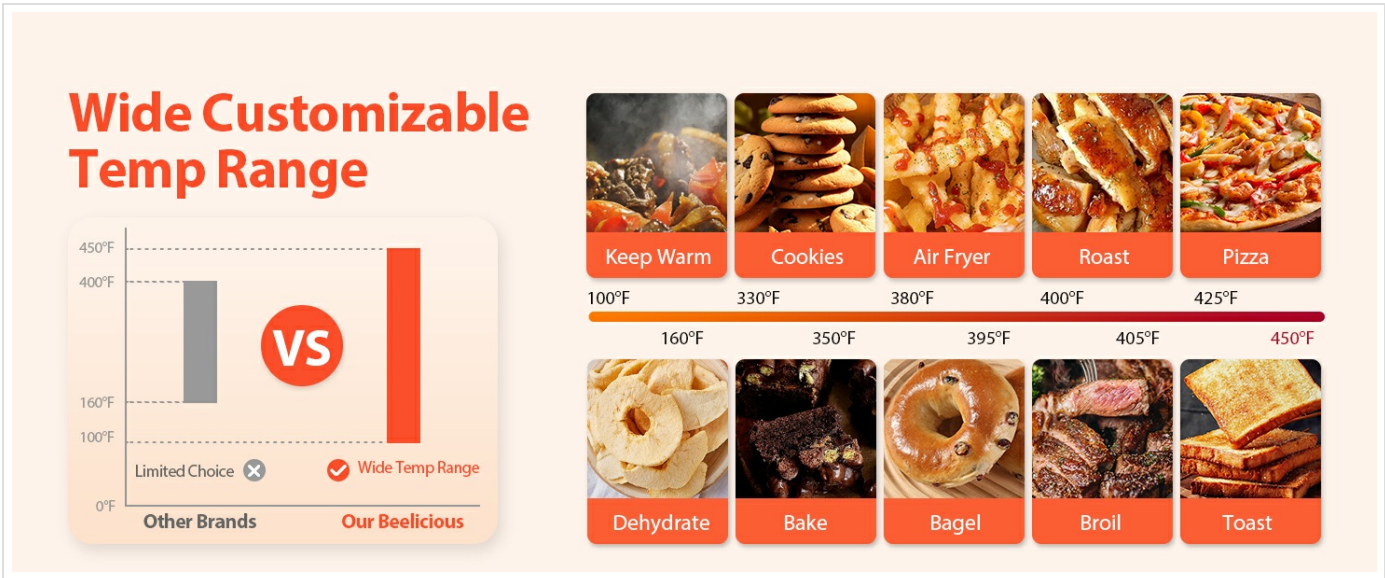


Image: Demonstrates the dishwasher-safe and easy-to-clean features of the air fryer basket.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Basket overloaded; food not shaken/flipped; incorrect temperature/time.	Do not overload the basket. Use the Shake Reminder function or manually shake/flip food halfway through cooking. Adjust temperature and time as per recipe recommendations.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the basket and crisper plate thoroughly after each use. For high-fat foods, drain excess oil from the basket during cooking.
Food is not crispy.	Too much moisture; not enough oil (for certain foods); basket overloaded.	Pat food dry before air frying. Lightly brush or spray some foods with oil. Avoid overcrowding the basket to allow proper air circulation.

SPECIFICATIONS

Feature	Detail
Model Name	1
Capacity	4 Quarts
Product Dimensions	11.61"D x 8.86"W x 12.4"H
Item Weight	8.58 pounds
Material	Plastic (with metal chamber)
Color	Bright White
Output Wattage	1550 Watts
Voltage	120 Volts (AC)
Min Temperature Setting	100 Degrees Fahrenheit
Max Temperature Setting	450 Degrees Fahrenheit
Control Method	Touch
Nonstick Coating	Yes
Dishwasher Safe Parts	Yes (Basket, Crisper Plate)
Special Features	Glass Display, Metal Chamber, Nonstick Basket, Programmable, Quiet Operation, Shake Reminder, Flavor-Lock Tech

WARRANTY AND SUPPORT

Warranty: Beelicious Pro offers a 1-year warranty for this product.

Technical Consultation: Technical consultation is available to assist with any product-related inquiries or issues.

Customer Support: If you encounter any problems, please contact Beelicious Pro customer support via Amazon or the consumer hotline. Problems will typically be addressed within 2 working days.

Certification: This product is ETL Certified, ensuring it meets recognized safety standards.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question