

[Manuals.plus](#) /

› [WALKINGPAD](#) /

› WALKINGPAD C2 Foldable Walking Pad Treadmill User Manual

WALKINGPAD WALKINGPAD C2

WALKINGPAD C2 Foldable Walking Pad Treadmill User Manual

Model: WALKINGPAD C2 | Brand: WALKINGPAD

1. INTRODUCTION

The WalkingPad C2 Walking Pad offers a convenient way to integrate physical activity into your daily routine, whether at home or in the office. Designed for ease of use and compact storage, this treadmill allows for relaxing and quiet walking exercise at any time. It is part of the Xiaomi Mijia Ecosystem.

2. PRODUCT FEATURES

- **Truly Folding Design:** The WalkingPad C2 features an exclusive folding design that allows for easy 180° folding of the treadmill platform. When folded, the height is only 5.4 inches, making it easy to store under a bed, sofa, or in tight spaces where a traditional treadmill would be difficult to store.
- **Powerful Silent Motor:** This under-desk treadmill boasts a 2.0HP motor capable of supporting up to 220 lbs. Operating quietly, it is perfect for home and office settings, allowing users to exercise without worrying about noise disruptions.
- **Portable:** No assembly is required. Simply unfold the treadmill, plug it in, and it's ready to use. The entire treadmill weighs only 55 lbs and has two wheels at the bottom, making it easy to move around your office or living room.
- **LED Display & Remote Control:** The speed of the Walking Pad C2 can be set from 0.5 mph to 3.7 mph using either the remote control or a dedicated app. The easy-to-read LED display informs you about your steps, training time, speed, calories burned, and distance covered in real-time.
- **Color Your Movement:** The WalkingPad C2 comes in five soft, lasting shades designed to fit various interior styles, adding a cheerful touch to any space.

3. INCLUDED COMPONENTS

Upon unboxing your WalkingPad C2, please ensure all the following components are present:

- Power Cord
- Remote Control
- Tool Kit
- User Manual (this document)

4. SETUP GUIDE

The WalkingPad C2 is designed for minimal setup. Follow these steps to get started:

1. **Unpack the Treadmill:** Carefully remove the WalkingPad C2 from its packaging. It is recommended to have two people for lifting due to its weight (55 lbs).
2. **Unfold the Treadmill:** Place the folded treadmill on a flat, stable surface. Gently unfold the platform until it lies completely flat. Ensure the locking mechanism engages securely.
3. **Positioning:** Place the treadmill on a hard, level surface. Avoid placing it on thick carpets, which may obstruct ventilation or affect performance. Ensure there is adequate clear space around the treadmill for safe operation.
4. **Connect Power:** Plug the power cord into the treadmill's power input port, then plug the other end into a grounded electrical outlet.
5. **Initial Power On:** Press the power button on the treadmill or the remote control to turn it on. The LED display should illuminate.

Sleek Folding Design That Fits Right In

Folded Dimensions: 32.5" x 20.4" x 5.4" (L x W x H)



Figure 4.1: The WalkingPad C2 features a dual-folding design for compact storage, easily fitting under furniture when not in use.

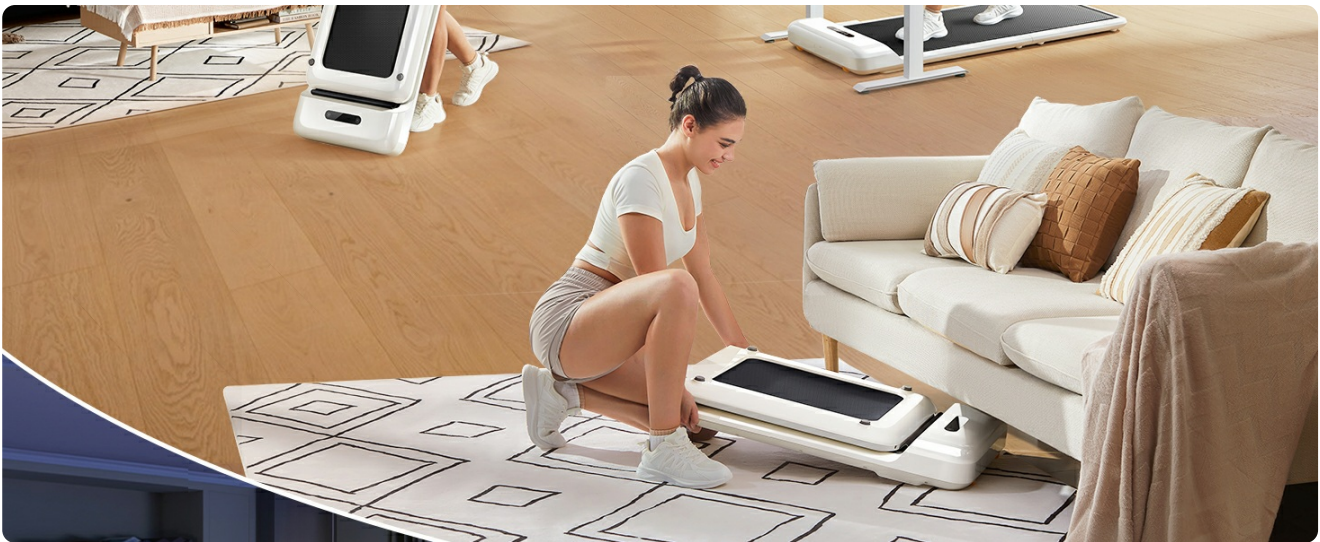


Figure 4.2: The space-saving foldable design allows the treadmill to be easily stored away, making it ideal for home and office environments.

5. OPERATING INSTRUCTIONS

The WalkingPad C2 offers both manual and automatic operating modes.

5.1 Manual Mode (Remote Control)

Use the included remote control to manually adjust the speed.

1. **Start:** Press the power button on the remote control to turn on the treadmill.
2. **Adjust Speed:** Use the '+' and '-' buttons on the remote to increase or decrease the speed. The speed range is from 0.5 mph to 3.7 mph.
3. **Stop:** Press the power button on the remote control to stop the treadmill.

5.2 Automatic Mode (Foot-Controlled Speed)

In automatic mode, the treadmill adjusts speed based on your foot position on the belt.

- **Acceleration Zone:** Step towards the front of the belt to increase speed.
- **Constant Speed Zone:** Maintain your position in the middle of the belt for a consistent speed.
- **Deceleration Zone:** Step towards the rear of the belt to decrease speed.

5.3 App Control

Download the official WalkingPad app to control the treadmill and track your workout data.

- **Download App:** Search for 'WalkingPad' in your device's app store.
- **Pairing:** Follow the in-app instructions to pair your device with the treadmill via Bluetooth.
- **Control & Tracking:** Use the app to start/stop, adjust speed, and view real-time workout metrics such as steps, time, speed, distance, and calories burned.

LED Display

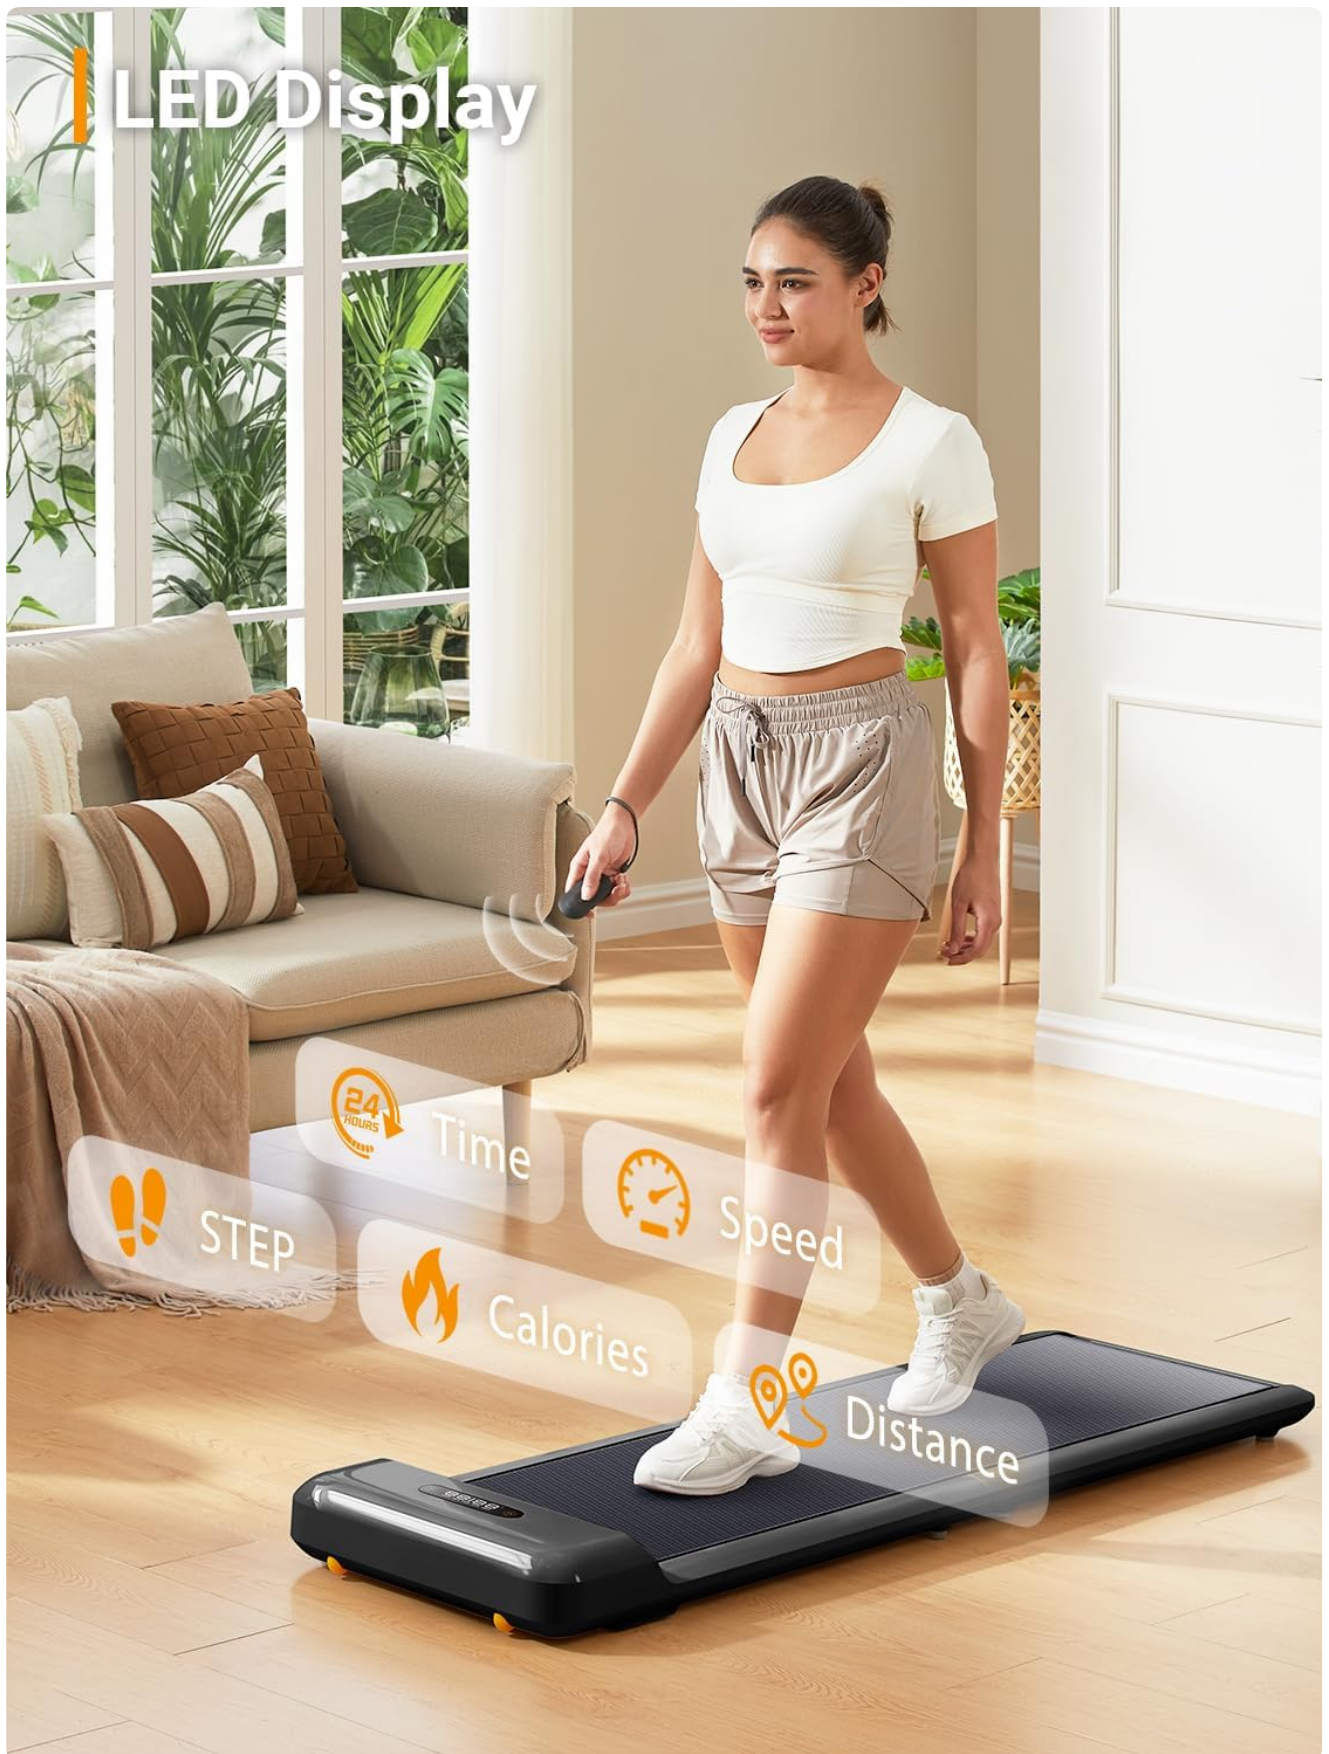


Figure 5.1: The integrated LED display provides real-time workout data including steps, time, speed, calories burned, and distance.

0.5 - 3.7 mph Speed Range

Smooth, safe & adjustable



Jogging



Walking

Figure 5.2: The WalkingPad C2 supports both walking and jogging, with a speed range of 0.5 to 3.7 mph.

Video 5.1: Official product video demonstrating the WalkingPad C2's features, including its folding design, quiet operation, and ease of use in various settings.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your WalkingPad C2.

- **Cleaning:** Regularly wipe down the treadmill with a damp cloth to remove dust and sweat. Avoid using abrasive cleaners.
- **Belt Lubrication:** Apply specialized treadmill lubricant to the running belt every few months, or as indicated by usage. Refer to the included tool kit for lubrication instructions.
- **Belt Adjustment:** If the running belt starts to shift to one side, use the provided tool to adjust the belt tension according to the instructions in the detailed user manual (if separate). Proper belt alignment is crucial for safe operation and to prevent wear.
- **Storage:** When not in use, fold the treadmill and store it in a dry, cool place away from direct sunlight and moisture.

8-Layer Composite Running Belt



- 1 PVC Anti-Slip Layer
- 2 Stretch-Resistant Fabric Layer
- 3 PET Wear-Resistant Layer
- 4 EVA Cushioning Layer
- 5 Polymer Protective Layer
- 6 MDF Cushioning Layer
- 7 Rubber Shock-Absorbing Layer
- 8 Alloy Support Layer

Figure 6.1: The 8-layer composite running belt provides comfort and durability, requiring periodic lubrication for optimal performance.

7. TROUBLESHOOTING

If you encounter issues with your WalkingPad C2, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Treadmill does not power on.	Power cord not properly connected; power outlet issue.	Ensure power cord is securely plugged into both the treadmill and a working electrical outlet. Check the circuit breaker.
Belt stops or slows down unexpectedly.	Overload (exceeding max weight); insufficient lubrication; software glitch.	Ensure user weight is within limits (220 lbs). Apply belt lubricant. If using an extender, try plugging directly into a different outlet. Restart the treadmill.
Belt is off-center.	Uneven tension; improper usage.	Adjust the belt tension using the provided tool. Refer to the detailed manual for specific adjustment steps.
Unusual noise (e.g., squeaking).	Lack of lubrication; loose parts.	Lubricate the running belt. Check for any loose screws or components and tighten them.

For issues not listed here or if solutions do not resolve the problem, please contact customer support.

8. SPECIFICATIONS

Attribute	Detail
Brand	WALKINGPAD
Model Name	WALKINGPAD C2
Product Dimensions (Unfolded)	56.9"D x 20.4"W x 4.9"H
Folded Size	32.5" x 20.4" x 5.4"
Item Weight	55 Pounds
Material	Aluminum
Maximum Speed	3.7 Miles per Hour
Minimum Speed	0.5 Miles per Hour
Maximum Horsepower	2 Horsepower
Maximum Weight Recommendation	220 Pounds
Display Type	LED
Power Source	Corded Electric
Assembly Required	No
Metrics Measured	Calories Burned, Distance, Speed, Time

9. WARRANTY AND SUPPORT

The WALKINGPAD C2 Foldable Walking Pad Treadmill comes with a **One year warranty** from the date of purchase.

For warranty claims, technical support, or any inquiries regarding your product, please contact WALKINGPAD customer service through the official website or the contact information provided in your purchase documentation. Please retain your proof of purchase for warranty validation.