

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FOHERE](#) /

› [FOHERE Portable 4-in-1 Hot Air Fryer Instruction Manual](#)

## FOHERE 4-in-1 Portable Hot Air Fryer

# FOHERE Portable 4-in-1 Hot Air Fryer Instruction Manual

Model: 4-in-1 Portable Hot Air Fryer

## 1. INTRODUCTION

Thank you for choosing the FOHERE Portable 4-in-1 Hot Air Fryer. This appliance is designed to provide a versatile and efficient cooking experience, allowing you to bake, recrisp, max crisp, and air fry your favorite foods with less oil. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.

### 1.1 What's in the Box

- FOHERE Portable Hot Air Fryer Main Unit
- Large Glass Container (4 Liters)
- Small Glass Container (1.5 Liters)
- 2 Non-stick Crisper Plates
- 2 Storage Lids for Glass Containers
- Instruction Manual



*Image 1.1: The FOHERE Portable 4-in-1 Hot Air Fryer, showcasing the main unit and both the large and small glass cooking containers.*

## **2. IMPORTANT SAFETY INSTRUCTIONS**

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure adequate ventilation around the appliance during use.

## 3. SETUP AND FIRST USE

---

### 3.1 Unpacking

Carefully remove all components from the packaging. Retain packaging materials for future storage or transport if needed. Remove any protective films or stickers from the appliance.

### 3.2 Initial Cleaning

Before first use, wash the glass containers, crisper plates, and storage lids with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.

### 3.3 Placement

Place the air fryer on a stable, heat-resistant surface. Ensure there is sufficient space (at least 10 cm) around the appliance for proper air circulation, especially at the rear exhaust vent.

### 3.4 Assembly

1. Place the desired glass container (4L or 1.5L) onto the base of the air fryer.
2. Insert a crisper plate into the glass container. Ensure it sits securely at the bottom.
3. Place the main heating unit (with the control panel) securely on top of the glass container. It should click into place.

# Einfach zu bedienen



Image 3.1: Visual guide to the air fryer's components, including the main unit, two glass containers, and crisper plates, illustrating easy assembly.

## 4. OPERATING INSTRUCTIONS

### 4.1 Control Panel Overview

The FOHERE Air Fryer features an intuitive touch screen control panel with pre-set programs and manual

settings.



Image 4.1: The digital control panel, displaying temperature, time, and dedicated buttons for Bake, Recrisp, Max Crisp, and Air Fry functions.

- **Bake:** For baking items like muffins, cakes, or casseroles.
- **Recrisp:** Ideal for reheating and restoring crispiness to leftovers.
- **Max Crisp:** Achieves maximum crispiness at high temperatures for foods like fries or chicken wings.
- **Air Fry:** General air frying function for a wide range of foods with minimal oil.

- **TIME/TEMP:** Button to switch between time and temperature settings.
- **+/- Buttons:** Adjust time or temperature values.
- **START/STOP:** To begin or pause the cooking process.
- **MENU:** To cycle through pre-set cooking programs.

## 4.2 Powering On and Initial Settings

1. Plug the power cord into a grounded electrical outlet. The display will illuminate.
2. Press the power button (if available, or any button to activate the display).
3. Select a cooking function by pressing the corresponding button (Bake, Recrisp, Max Crisp, Air Fry) or cycle through pre-set programs using the MENU button.
4. Adjust the temperature using the **TIME/TEMP** button and **+/-** buttons. The temperature range is typically 60°C to 200°C.
5. Adjust the cooking time using the **TIME/TEMP** button and **+/-** buttons.
6. Press **START/STOP** to begin cooking.

## 4.3 Cooking Functions

The FOHERE Air Fryer offers 4 primary cooking functions:

# Ungiftig, Kochen & Lagern

Thermoschockbeständig, in Minuten schnelle gefroren und knusprig



Image 4.2: Illustration of the 4-in-1 functionality, showing examples for baking (muffins), recrisping (fries), max crisp (chicken), and air frying (fried chicken).

- **Bake:** Use for items that require oven-like cooking, such as pastries, small cakes, or roasted vegetables.
- **Recrisp:** Perfect for revitalizing previously cooked foods, giving them a fresh, crispy texture.
- **Max Crisp:** For achieving an extra crispy exterior on foods like frozen fries, chicken nuggets, or onion rings.
- **Air Fry:** The primary function for cooking a wide variety of foods with hot air, reducing the need for excessive oil.

## 4.4 Using Different Container Sizes

The air fryer comes with two glass containers to accommodate different meal sizes.



Schnappen



Servieren



Knusprig  
machen



Aufbewahren

*Image 4.3: The two interchangeable glass bowls: a 1.5-liter bowl for individual servings and a 4-liter bowl suitable for family-sized meals.*

- The **4-liter glass container** is suitable for larger portions, such as a whole chicken or family-sized meals.
- The **1.5-liter glass container** is ideal for single servings, side dishes, or smaller items.

Always ensure the correct crisper plate is inserted into the chosen glass container before placing the main heating unit on top.



Image 4.4: The air fryer in action, demonstrating quick and healthy cooking with a maximum temperature of 200°C and up to 85% less oil.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your FOHERE Air Fryer.

## 5.1 Cleaning the Glass Containers and Crisper Plates



## Schüsseln in zwei Größen

Einfach austauschbare Schüsseln – Abendessen für eine Person oder alle

*Image 5.1: The glass container, highlighting its non-toxic properties (No PFAS, No PTFE) and suitability for both freezing and crisping food.*

- Always unplug the appliance and allow it to cool completely before cleaning.
- The glass containers, crisper plates, and storage lids are dishwasher safe.
- For hand washing, use warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.

- Avoid using metal scouring pads or harsh abrasive cleaners, as these can damage the non-stick coating on the crisper plates.

## **5.2 Cleaning the Main Unit**

- Wipe the exterior of the main unit with a damp cloth.
- Clean the interior heating element and fan area with a soft brush or cloth to remove any food residue. Do not use water directly on the heating element.
- Never immerse the main unit in water or any other liquid.

## **5.3 Storage**

# Tragbare Glasschüssel

Für die Küche zu Hause oder unterwegs



*Image 5.2: The portable glass bowl being placed into a bag, illustrating its convenience for transport and use outside the home kitchen.*

Ensure all parts are clean and dry before storing. Store the air fryer in a cool, dry place. The glass containers with their lids can be used for storing cooked food in the refrigerator.

## 6. TROUBLESHOOTING

If you encounter any issues with your FOHERE Air Fryer, please refer to the following common problems and

solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; main unit not properly seated.	Ensure the power cord is securely plugged into a working outlet. Check if the main heating unit is correctly placed on the glass container.
Food is not cooked evenly.	Overcrowding the basket; incorrect temperature/time settings.	Do not overcrowd the basket. Cook in smaller batches if necessary. Shake or flip food halfway through cooking. Adjust temperature and time as per recipe recommendations.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the crisper plate and glass container thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Food is not crispy.	Too much moisture; insufficient cooking time/temperature.	Pat food dry before air frying. Increase cooking time or temperature. Ensure crisper plate is used.

If the problem persists after trying these solutions, please contact customer support.

## 7. SPECIFICATIONS

Feature	Specification
Brand	FOHERE
Model	4-in-1 Portable Hot Air Fryer
Color	Blue
Capacity	4 Liters (large container), 1.5 Liters (small container), Total 5.5 Liters
Power	1500 W
Dimensions (Product)	29.2 x 25 x 27.5 cm
Weight	7.46 Kilograms
Material	Metal and Plastic (main unit), Glass (containers)
Special Features	Portable, 4 cooking functions (Bake, Recrisp, Max Crisp, Air Fry), 2 glass containers, 2 non-stick crisper plates, 2 storage lids, Dishwasher-safe parts

## 8. WARRANTY AND SUPPORT

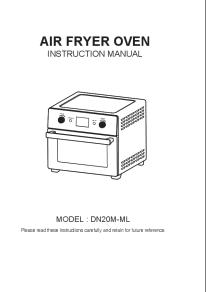
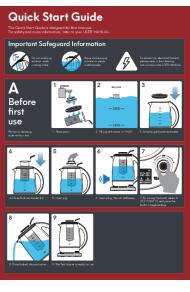
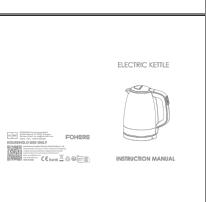
The FOHERE Portable 4-in-1 Hot Air Fryer comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact FOHERE customer service through the retailer where you purchased the product or visit the official FOHERE website for contact

information.

© 2025 FOHERE. All rights reserved.

## Related Documents - 4-in-1 Portable Hot Air Fryer

	<p><a href="#"><b>FOHERE KEG8041-UL Electric Kettle User Manual</b></a></p> <p>Comprehensive user manual for the FOHERE KEG8041-UL Electric Kettle, detailing specifications, safety instructions, operation, features like Keep Warm and Custom Temp, maintenance, and troubleshooting.</p>
	<p><a href="#"><b>FOHERE Air Fryer Oven FM9015 Instruction Manual</b></a></p> <p>Comprehensive instruction manual for the FOHERE Air Fryer Oven Model FM9015, covering specifications, safety precautions, operation, cleaning, and troubleshooting for optimal use.</p>
	<p><a href="#"><b>FOHERE DN20M-ML Air Fryer Oven Instruction Manual</b></a></p> <p>User manual for the FOHERE DN20M-ML Air Fryer Oven, detailing setup, operation, safety, maintenance, and troubleshooting for household use.</p>
	<p><a href="#"><b>FOHERE KC211 Coffee Maker User Manual - Hot &amp; Iced Coffee Brewer Instructions</b></a></p> <p>Comprehensive user manual for the FOHERE KC211 Coffee Maker, detailing operation, safety, cleaning, and troubleshooting for both hot and iced coffee brewing. Includes product parameters and indicator light explanations.</p>
	<p><a href="#"><b>FOHERE Tea Master KT-Z1 Quick Start Guide: Brewing Perfect Tea</b></a></p> <p>Learn how to set up and use your FOHERE Tea Master KT-Z1 electric kettle with this quick start guide. Includes safety information, initial cleaning, and brewing instructions for perfect tea.</p>
	<p><a href="#"><b>Foheré Electric Kettle Instruction Manual - Safety, Usage, and Maintenance Guide</b></a></p> <p>This comprehensive instruction manual for the Foheré electric kettle provides essential safety guidelines, operating instructions, temperature settings, and cleaning and maintenance procedures. Learn how to safely use and care for your appliance.</p>

