

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LEXiBOOK](#) /

› [LEXiBOOK Moana Nightlight Alarm Clock \(Model RL800VN\) User Manual](#)

LEXiBOOK RL800VN

LEXiBOOK Moana Nightlight Alarm Clock (Model RL800VN) User Manual

Model: RL800VN

INTRODUCTION

This manual provides instructions for the LEXiBOOK Moana Nightlight Alarm Clock, Model RL800VN. This device combines an alarm clock with a nightlight feature, offering various sounds and melodies for a personalized experience.

Key features include:

- **Heroic Nightlight:** Moana figure lights up when pressed, creating a captivating visual.
- **Sleep-Friendly LCD Screen:** Option to turn the LCD screen on or off during the night for glare-free sleep.
- **Moana-Inspired Sounds and Ringtones:** Six distinct sounds and six ringtones from the world of Moana, with adjustable volume.
- **Intuitive Controls:** Easy alarm deactivation and snooze function by pressing the top of the clock or the Moana figure.
- **Low Battery Indicator:** Alerts when batteries need replacement.

SETUP

1. Battery Installation

The alarm clock requires 3 AA/LR6 batteries (not included). To install:

1. Locate the battery compartment on the underside of the clock.
2. Open the compartment cover.
3. Insert 3 AA/LR6 batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.







Image: Underside of the clock, showing the battery compartment and control buttons.

2. Initial Time Setting

To set the current time:

1. Press and hold the 'Time Set' button (usually indicated by a clock icon) on the back of the unit until the hour display flashes.
2. Use the '+' and '-' buttons on the front to adjust the hour.
3. Press the 'Time Set' button again to switch to minute adjustment.
4. Use the '+' and '-' buttons to adjust the minutes.
5. Press the 'Time Set' button one more time to confirm and exit time setting mode.

OPERATING INSTRUCTIONS

1. Nightlight Function

The Moana figure on top of the clock functions as a nightlight.

- To activate the nightlight, press down on the Moana figure.
- The nightlight will illuminate for a few minutes.
- The LCD screen can be set to remain on or off during the night. Refer to the specific settings on the back of the clock for this option.



Image: Moana nightlight illuminated, providing a soft glow.



Image: The clock in a bedroom setting, demonstrating its use as a nightlight.

2. Setting the Alarm

To set the alarm time and select a melody:

1. Press and hold the 'Alarm Set' button (usually indicated by a bell icon) on the back of the unit until the alarm hour display flashes.
2. Use the '+' and '-' buttons on the front to adjust the alarm hour.
3. Press the 'Alarm Set' button again to switch to alarm minute adjustment.
4. Use the '+' and '-' buttons to adjust the alarm minutes.
5. Press the 'Alarm Set' button again to cycle through the 6 available Moana-inspired ringtones and sounds.
6. Use the '+' and '-' buttons to adjust the alarm volume.
7. Press the 'Alarm Set' button one more time to confirm and activate the alarm. An alarm icon will appear on the display.

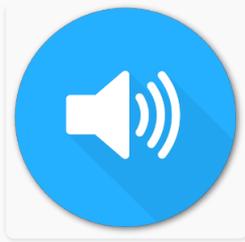


Image: Volume control icon.

3. Snooze Function

When the alarm sounds, you can activate the snooze function for a few extra minutes of sleep:

- Press down on the Moana figure or the top of the clock.
- The alarm will pause and sound again after a short interval.

4. Turning Off the Alarm

To turn off the alarm completely:

- Press the 'Alarm Off' button (often the same as the 'Alarm Set' button, or a dedicated button on the back).
- The alarm icon on the display will disappear, indicating the alarm is deactivated.

MAINTENANCE

1. Cleaning

To clean your alarm clock:

- Wipe the surface with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as these may damage the finish.

2. Battery Replacement

When the low battery indicator appears on the display, replace the batteries promptly to ensure continuous operation. Follow the battery installation steps outlined in the Setup section.

TROUBLESHOOTING

- **Clock not displaying time:** Ensure batteries are correctly installed and not depleted. Replace if necessary.
- **Alarm not sounding:** Verify that the alarm time is set correctly and the alarm function is activated (alarm icon visible). Check the alarm volume.
- **Nightlight not working:** Ensure the Moana figure is pressed firmly. Check battery level.
- **Incorrect time display:** Reset the time as per the 'Initial Time Setting' instructions.

SPECIFICATIONS

Feature	Detail
Brand	LEXiBOOK
Model Number	RL800VN

Display Type	Digital
Power Source	Battery Powered (3 AA batteries required, not included)
Special Feature	Alarm, Nightlight, Snooze
Product Dimensions	3.6"W x 7.3"H
Item Weight	7.84 ounces
Material	Plastic
Theme	Moana

WARRANTY INFORMATION

For information regarding product warranty, please refer to the documentation included with your purchase or contact LEXiBOOK customer support. Standard manufacturer warranties typically cover defects in materials and workmanship for a specified period from the date of purchase.

SUPPORT

For further assistance, product registration, or to explore other LEXiBOOK products, please visit the official LEXiBOOK store:

Visit the LEXiBOOK
Store