

## ANJANK KX213-Black

# ANJANK Super Loud Alarm Clock with Wireless Bed Shaker (Model KX213-Black) Instruction Manual

Model: KX213-Black | Brand: ANJANK

## INTRODUCTION

This manual provides detailed instructions for the ANJANK Super Loud Alarm Clock with Wireless Bed Shaker. This innovative bedside digital companion features a gradual orange light, a powerful wireless bed shaker, and extra-loud front-facing alarm sounds designed to help users wake up effectively. It is suitable for deep sleepers, individuals with hearing impairment, the elderly, and teens. Please read this manual thoroughly before use to ensure proper operation and maintenance.

## PACKAGE CONTENTS

- ANJANK Super Loud Alarm Clock Unit
- Wireless Bed Shaker (Rechargeable)
- Power Adapter (for alarm clock)
- USB-C Charging Cable (for bed shaker)
- User Manual (this document)



Image: All components included in the ANJANK Super Loud Alarm Clock package.

## PRODUCT FEATURES

- **Triple-Tech Wake-Up System:** Combines loud sound (up to 112dB), strong wireless vibration, and a gradual light for effective waking.
- **Wireless Bed Shaker:** Features a 10m (32.8ft) wireless range, 1500mAh rechargeable battery (2-3 months use per charge), magnetic or Type-C charging, and 3 adjustable vibration intensity levels (High, Medium, Low).
- **Dual Alarms & Sound Options:** Set two independent alarms with 5 gradual sounds (chime, bird chirp, buzzer, 2 sharp sounds for hearing impaired) and 10-level precise volume control.
- **RGB Time Display & Dimmer:** Time display in White, Red, Blue, or RGB gradient colors, with 0-100% brightness adjustment.
- **9-Color Dimmable Night Light:** Offers 9 vibrant colors (Orange, Yellow, Red, Green, Cyan, Blue, Purple, White, Rainbow Flow) with 6 brightness levels, including an Off Mode for complete darkness.
- **USB-C Phone Charging:** Equipped with a Type-C output port to charge your phone.



Image: Visual representation of the alarm clock's triple-tech wake-up system, combining sound, vibration, and light.

## SETUP

1. **Power Connection:** Connect the provided power adapter to the "AC Input" port on the back of the alarm clock unit and plug it into a wall outlet. *Note: The alarm clock requires continuous power and does not have battery backup for its main functions.*
2. **Bed Shaker Charging:** The wireless bed shaker can be charged in two ways:
  - **Magnetic Charging:** Attach the bed shaker to the magnetic charging area on the back of the alarm clock unit.
  - **Type-C Charging:** Use the provided USB-C cable to connect the bed shaker directly to a power source.

Even the deepest sleepers feel it  
—thanks to front-directed sound



Image: The wireless bed shaker can be charged magnetically on the alarm clock or via a USB-C cable.

3. **Initial Time Setting:** Upon first power-up, the display will show a default time. Use the time setting buttons (usually indicated by a clock icon or arrows) on the top panel to adjust the current time.

## OPERATING INSTRUCTIONS

### 1. Setting Time and Display

- **Set Time:** Press the "Time" button (clock icon) on the top panel. Use the arrow buttons to adjust hours and minutes. Press the "Time" button again to confirm.
- **Time Display Color:** Press the "RGB Time Display" button (often a color wheel icon) to cycle through White, Red, Blue, or RGB gradient colors for the time digits.
- **Display Dimmer:** Use the "Display Dimmer" slider or button on the side of the unit to adjust the brightness of the time display from 0% (off) to 100% (full brightness).

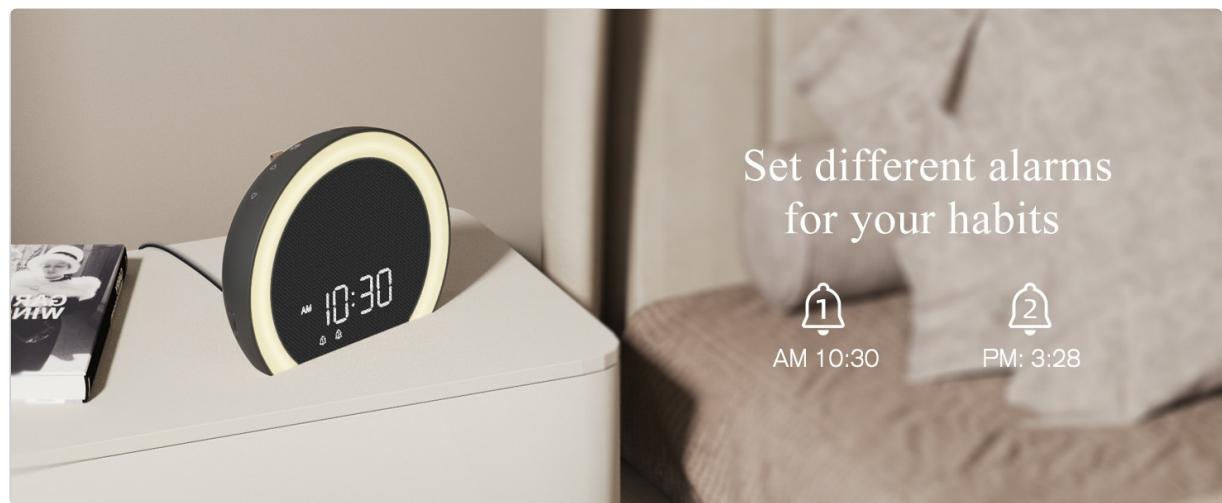


Image: The alarm clock's display can be dimmed from 0% to 100% for personalized viewing.

### 2. Setting Alarms

1. **Select Alarm:** Press either the "Alarm 1" or "Alarm 2" button (bell icons) on the top panel. The alarm time will flash.
2. **Set Alarm Time:** Use the arrow buttons to adjust the desired alarm hour and minute. Press the "Alarm" button again to confirm the time.
3. **Choose Alarm Sound:** After setting the time, press the "Sound" button (music note icon) to cycle through the 5 available alarm sounds: Chime, Bird Chirp, Buzzer, and 2 Sharp Sounds.

4. **Adjust Alarm Volume:** Use the volume slider on the side of the unit to set the desired alarm volume (10 levels, up to 112dB). The alarm will gradually increase in volume to the set level.
5. **Activate Bed Shaker:** Ensure the wireless bed shaker is charged and placed under your pillow. When the alarm activates, the bed shaker will vibrate according to its set intensity.
6. **Snooze Function:** Press the large snooze button on the top of the unit when the alarm sounds to activate snooze.
7. **Turn Off Alarm:** Press the corresponding "Alarm 1" or "Alarm 2" button to turn off the alarm completely.



Image: The alarm clock offers 8 sound choices and 10-level volume control for personalized wake-up experiences.

Your browser does not support the video tag.

Video: This video demonstrates the bed shaker functionality and various features of the alarm clock, including sound options and settings.

### 3. Using the Wireless Bed Shaker

- **Placement:** Place the charged wireless bed shaker under your pillow or mattress.
- **Vibration Intensity:** Use the selector switch on the side of the bed shaker to choose between High, Medium, or Low vibration intensity.
- **Battery Life:** The bed shaker's 1500mAh rechargeable battery provides up to 2-3 months of use on a single charge.



Image: The wireless bed shaker offers three levels of vibration intensity: High, Medium, and Low.

Your browser does not support the video tag.

Video: This short preview video demonstrates the bed shaker in action, highlighting its vibration feature.

## 4. Night Light Operation

- **Turn On/Off:** Press the "Night Light" button (light bulb icon) on the top panel to turn the night light on or off.
- **Change Color:** Press the "Night Light" button repeatedly to cycle through the 9 vibrant colors and Rainbow Flow mode.
- **Adjust Brightness:** Use the "Brightness" button (sun icon) to adjust the night light's brightness through 6 levels. The lowest setting provides complete darkness.

### Easy to set

No menus, No app



Image: The alarm clock features vibrant mood lighting with 9 colors and 6 brightness levels.

## 5. USB-C Charging Port

- Locate the Type-C output port on the back of the alarm clock.
- Connect your phone or other compatible device using a USB-C cable to charge it conveniently overnight.

## MAINTENANCE

- **Cleaning:** Wipe the alarm clock and bed shaker with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place when not in use for extended periods.
- **Battery Care (Bed Shaker):** To prolong battery life, avoid fully discharging the bed shaker's battery frequently. Recharge when the battery indicator is low.

## TROUBLESHOOTING

- **Alarm Clock Not Turning On:** Ensure the power adapter is securely plugged into both the alarm clock and a working wall outlet.
- **Bed Shaker Not Vibrating:**
  - Check if the bed shaker is fully charged.
  - Verify that the alarm is correctly set and activated.
  - Ensure the bed shaker's intensity switch is not set to "Off".
- **Display Too Bright/Dim:** Adjust the "Display Dimmer" slider on the side of the unit.
- **Alarm Sound Too Low/High:** Adjust the volume slider on the side of the unit.

- **If the unit malfunctions or there are other operational issues:** Please contact customer support at [customer01@kerchanstar.com](mailto:customer01@kerchanstar.com).

## SPECIFICATIONS

<b>Brand</b>	ANJANK
<b>Model Number</b>	KX213-Black
<b>Display Type</b>	Digital
<b>Power Source</b>	Corded Electric (Adapter included)
<b>Bed Shaker Battery</b>	1500mAh Rechargeable (included)
<b>Alarm Volume</b>	Max 112dB, 10-level control
<b>Night Light Colors</b>	9 vibrant colors + Rainbow Flow
<b>Night Light Brightness</b>	6 levels + Off Mode
<b>Time Display Brightness</b>	0-100% Dimmer
<b>USB Output</b>	Type-C (for phone charging)
<b>Product Dimensions</b>	3.2"W x 5.7"H
<b>Item Weight</b>	1.54 pounds

## WARRANTY AND SUPPORT

For any product inquiries, technical support, or warranty claims, please contact ANJANK customer service directly.

- **Customer Support Email:** [customer01@kerchanstar.com](mailto:customer01@kerchanstar.com)
- **Return Policy:** This product typically comes with a 30-day return policy. Please refer to your purchase platform for specific return and warranty details.