

## **Emerio AF-132658.3**

# **Emerio AF-132658.3 Digital XXL Hot Air Fryer User Manual**

Model: AF-132658.3

## **1. INTRODUCTION**

---

Thank you for purchasing the Emerio AF-132658.3 Digital XXL Hot Air Fryer. This appliance allows you to fry, bake, grill, and roast your favorite foods with little to no oil, offering a healthier alternative to traditional frying methods. Please read this manual carefully before first use to ensure safe and optimal operation. Keep these instructions for future reference.

## **2. IMPORTANT SAFETY INSTRUCTIONS**

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Supervise children closely when the appliance is in use.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before adding or removing parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the manufacturer.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- The appliance features a cool-touch housing for safe operation, but internal components become very hot. Avoid touching hot surfaces.

### 3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Emerio Digital XXL Hot Air Fryer.




Figure 1: Front view of the Emerio AF-132658.3 Digital XXL Hot Air Fryer, showing the digital color display and handle.

#### Components:

- **Main Unit:** Houses the heating element and fan.
- **Digital Color Display:** Touch-sensitive panel for setting time, temperature, and selecting programs.
- **Frying Basket/Container:** The main cooking compartment.
- **Crisper Plate:** Inserted into the frying basket to allow air circulation and drain excess fat.
- **Handle:** For safely pulling out and inserting the frying basket.



**Figure 2:** The 6.5-liter frying basket of the Emerio AF-132658.3 Hot Air Fryer, designed for large capacity cooking.

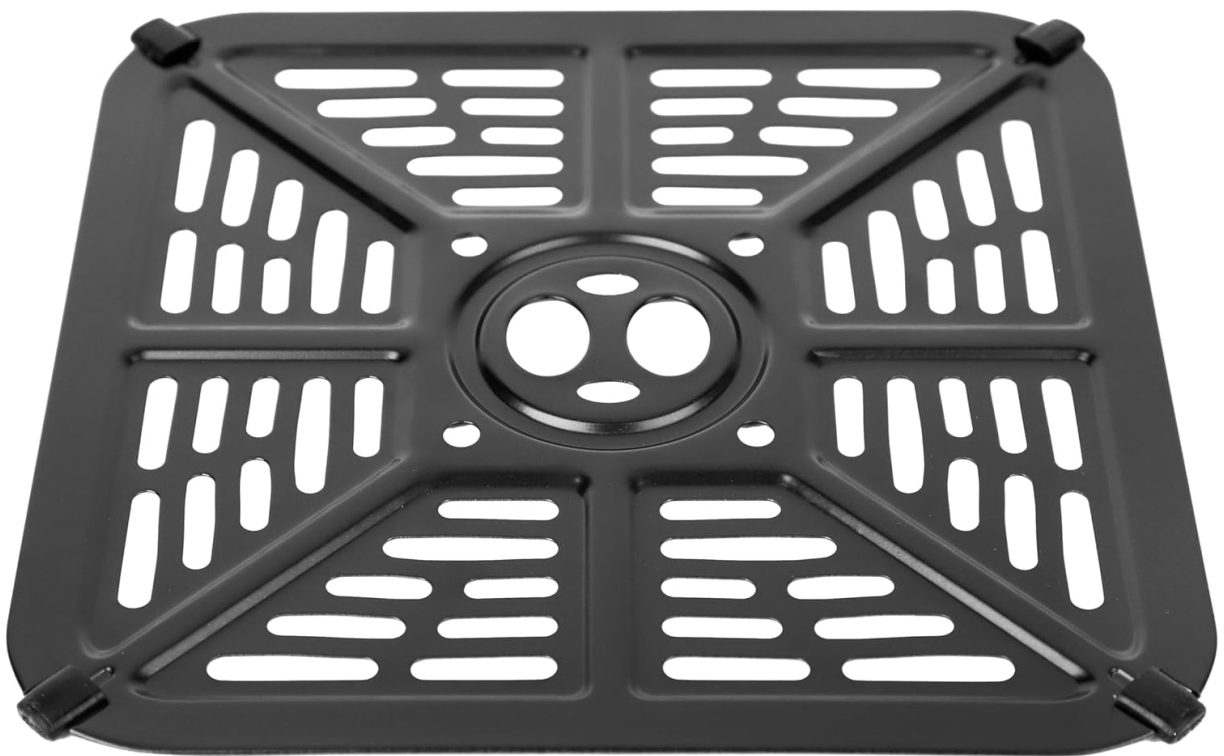

**Figure 3:** The crisper plate, which fits inside the frying basket to ensure even cooking and fat separation.

#### **4. SETUP AND FIRST USE**

---

Before using your air fryer for the first time, follow these steps:

1. **Unpack:** Remove all packaging materials and stickers.
2. **Clean Components:** Wash the frying basket and crisper plate with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. The container and grate are dishwasher safe.
3. **Wipe Main Unit:** Wipe the inside and outside of the main unit with a damp cloth. Do not immerse the main unit in water.
4. **Position:** Place the appliance on a stable, horizontal, and heat-resistant surface. Ensure there is at least 10 cm of free space at the back and sides, and above the appliance, for proper ventilation.
5. **Initial Heating (Optional):** For the first use, some users prefer to run the air fryer empty for about 10 minutes at 180°C (350°F) to burn off any manufacturing residues. A slight odor may be present; this is normal. Ensure good ventilation.

## 5. OPERATING INSTRUCTIONS

---

### Control Panel:

The digital color display allows for intuitive control. It features touch controls for power, temperature, time, and 10 preset programs.

### General Operation:

1. **Prepare Food:** Place the crisper plate into the frying basket. Place your ingredients into the frying basket. Do not overfill the basket beyond the MAX indication.
2. **Insert Basket:** Slide the frying basket back into the main unit until it clicks into place.
3. **Power On:** Plug the power cord into a grounded wall outlet. The appliance will beep, and the display will illuminate.
4. **Select Program or Manual Settings:**
  - **Automatic Programs:** Touch the icon for one of the 10 preset programs (Fries, Poultry, Steak, Meat, Shrimp, Fish, Cake, Pizza, Vegetables, Defrosting). The display will show the default time and temperature for that program.
  - **Manual Settings:** Use the temperature and time adjustment icons to set your desired cooking temperature (80°C to 200°C) and time (up to 60 minutes).
5. **Start Cooking:** Press the Start/Pause button to begin the cooking process. The fan and heating element will activate.
6. **Shake Basket (Optional):** For some foods, especially smaller items like fries, shaking the basket halfway through cooking helps ensure even crisping. Pull out the basket by the handle (the appliance will pause automatically), shake it, and then slide it back in. The cooking will resume.
7. **Cooking Complete:** The timer will count down to zero, and the appliance will beep several times. The heating element will turn off.
8. **Remove Food:** Carefully pull out the frying basket. Use heat-resistant tongs to remove the cooked food. Do not tip the basket upside down, as excess oil may drip onto the food.
9. **Power Off:** Unplug the appliance from the wall outlet.



**Figure 4:** The Emerio AF-132658.3 Hot Air Fryer in use, showing cooked fries and chicken nuggets in the basket.

## 6. COOKING GUIDE

The following table provides general guidelines for common foods. Cooking times and temperatures may vary based on food quantity, size, and desired crispness. Always ensure food is cooked thoroughly to safe internal temperatures.

Food Item	Temperature	Time (Approx.)	Notes
Frozen Fries (500g)	200°C (390°F)	15-20 min	Shake basket halfway.
Chicken Drumsticks	180°C (350°F)	20-25 min	Flip halfway.
Steak (medium)	200°C (390°F)	8-12 min	Flip halfway.
Frozen Fish Fillets	180°C (350°F)	12-18 min	
Vegetables (fresh)	160°C (320°F)	10-15 min	Toss with a little oil.

For best results, preheat the air fryer for 3-5 minutes before adding food. A small amount of oil can be added to fresh ingredients for extra crispiness.

## 7. MAINTENANCE AND CLEANING

---

Clean the air fryer after every use to prevent food residue buildup and ensure optimal performance.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Clean Basket and Plate:** The frying basket and crisper plate are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak them in hot water for about 10 minutes.
3. **Clean Interior:** Wipe the inside of the appliance with a damp cloth. If necessary, use a mild detergent. Avoid abrasive cleaners or metal scouring pads.
4. **Clean Exterior:** Wipe the exterior of the appliance with a damp cloth.
5. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.
6. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

## 8. TROUBLESHOOTING

---

If you encounter issues with your air fryer, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in. Power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Basket overloaded. Food not shaken.	Do not overload the basket. Shake or flip food halfway through cooking.
Food is not crispy.	Too much food. Insufficient oil (for fresh food). Temperature too low.	Cook in smaller batches. Lightly brush fresh food with oil. Increase temperature slightly.
White smoke coming from appliance.	Grease residue from previous use. Fatty ingredients.	Clean the basket and crisper plate thoroughly. Remove excess fat from ingredients.
Appliance smells during first use.	Manufacturing residues.	This is normal. Run the appliance empty for 10 minutes in a well-ventilated area. The smell will dissipate.

## 9. SPECIFICATIONS

---

Technical details for the Emerio AF-132658.3 Digital XXL Hot Air Fryer.

Feature	Specification
Model Number	AF-132658.3
Capacity	6.5 Liters
Output Wattage	1700 Watts
Voltage	230 Volts
Control Method	Touch (Digital Color Display)
Temperature Range	80°C - 200°C
Timer	Up to 60 minutes
Dimensions (D x W x H)	28.8D x 35.5W x 31.4H centimetres
Item Weight	4.59 Kilograms
Material	Plastic, Metal
Dishwasher Safe Parts	Container and grate



Figure 5: Dimensions of the Emerio AF-132658.3 Hot Air Fryer, showing height, width, and depth measurements.



**Figure 6:** An informational graphic highlighting the energy efficiency of the Smart Fryer, indicating it uses up to 50% less energy compared to a conventional oven.

## 10. WARRANTY AND SUPPORT

---

For warranty information, please refer to the warranty card included with your purchase or contact your retailer. If you require technical support or have questions not covered in this manual, please contact Emerio customer service through their official website or the contact details provided with your product documentation.