

Bear DFB-S12E6

Bear DFB-S12E6 Mini Rice Cooker Instruction Manual

Model: DFB-S12E6

INTRODUCTION

Thank you for purchasing the Bear DFB-S12E6 Mini Rice Cooker. This appliance is designed to simplify your cooking process, offering effortless preparation of various rice types and other dishes. Please read this manual thoroughly before use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- This appliance is for household use only.
- To prevent overflow, use the provided measuring cup for rice quantity and the scale on the inner pot for water quantity.

PACKAGE CONTENTS

Upon unpacking, please ensure all items listed below are present and in good condition:

- Bear DFB-S12E6 Mini Rice Cooker
- Rice Spoon
- Measuring Cup
- Instruction Manual

If any items are missing or damaged, please contact customer support.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Bear DFB-S12E6 Mini Rice Cooker:

Mini Bollitore Riso Smart - Semplicemente Compatto

Progettato per 1-2 persone



Capacità di

2
tazze



1 CUP ≈ 3/4 US CUP

Image: Bear DFB-S12E6 Mini Rice Cooker with its lid open, revealing the inner pot and the control panel. A person is shown scooping rice into a bowl, demonstrating its compact size and ease of use. The image highlights its 2-cup capacity.

1. Lid
2. Steam Vent
3. Inner Pot (Non-stick)
4. Heating Plate
5. Control Panel (with display, PRESET, START/STOP, MENU buttons)
6. Main Body
7. Handles
8. Power Cord Socket

SETUP

1. **Unpack:** Carefully remove all packaging materials and accessories.
2. **Clean:** Before first use, wash the inner pot, rice spoon, and measuring cup with warm, soapy water. Wipe the exterior of the rice cooker with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
4. **Connect Power:** Plug the power cord into the rice cooker's power socket, then into a suitable wall outlet.

OPERATING INSTRUCTIONS

The Bear DFB-S12E6 Mini Rice Cooker features simple one-button operation for various cooking functions.

1. Cooking Rice (White Rice / Brown Rice)

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. For 1-2 servings, up to 2 cups of uncooked rice can be used.
2. **Wash Rice:** Rinse the rice thoroughly under cold water until the water runs clear.
3. **Add to Inner Pot:** Place the washed rice into the non-stick inner pot.
4. **Add Water:** Refer to the water level markings inside the inner pot. For example, for 1 measuring cup of raw rice, add water up to the "1" mark. For 2 cups, add water up to the "2" mark. Adjust water quantity based on desired rice consistency.
5. **Place Inner Pot:** Insert the inner pot into the main body of the rice cooker. Close the lid securely.
6. **Select Mode:** Press the **MENU** button repeatedly to select either "WHITE RICE" or "BROWN RICE". The selected mode will be indicated on the display.
7. **Start Cooking:** Press the **START/STOP** button to begin cooking. The indicator light will illuminate, and the display will show the cooking progress.
8. **Automatic Keep Warm:** Once cooking is complete, the rice cooker will automatically switch to "KEEP WARM" mode. The "KEEP WARM" indicator will light up.
9. **Serve:** Open the lid carefully, avoiding steam. Fluff the rice with the rice spoon and serve.



Image: The control panel of the Bear DFB-S12E6 Mini Rice Cooker, displaying options for "WHITE RICE", "BROWN RICE", "PORRIDGE", and "KEEP WARM". This illustrates the various cooking modes available.

2. Cooking Porridge

1. **Prepare Ingredients:** Add desired ingredients for porridge (e.g., oats, water/milk) to the inner pot.
2. **Place Inner Pot:** Insert the inner pot into the main body and close the lid.
3. **Select Mode:** Press the **MENU** button to select "PORRIDGE".
4. **Start Cooking:** Press the **START/STOP** button.
5. **Serve:** Once cooking is complete, the cooker will switch to "KEEP WARM". Serve carefully.

3. Using the Preset Function (12-Hour Pre-setting)

The preset function allows you to schedule cooking to start at a later time, up to 12 hours in advance.

1. **Prepare Ingredients:** Add rice and water (or other ingredients for porridge) to the inner pot as described above.
2. **Place Inner Pot:** Insert the inner pot and close the lid.
3. **Select Mode:** Press the **MENU** button to select the desired cooking mode (e.g., "WHITE RICE").
4. **Set Preset Time:** Press the **PRESET** button. The display will show a flashing time. Use the **PRESET** button to adjust the desired delay time in hours. Each press increases the time.
5. **Confirm Preset:** Once the desired delay time is set, press the **START/STOP** button. The timer will begin counting down, and cooking will start automatically after the set delay.



Image: Illustration of the 12-hour preset function. It shows adding rice in the morning (6 AM) and the meal being ready by evening (6 PM), highlighting the convenience of planning meals in advance.

4. Keep Warm Function

After cooking, the appliance automatically switches to "KEEP WARM" mode to maintain the food at an optimal serving temperature. This function can also be manually selected by pressing the **MENU** button until "KEEP WARM" is selected, then pressing **START/STOP**.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your rice cooker.

1. **Unplug:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot:** The non-stick inner pot is removable and easy to clean. Wash it with warm, soapy water using a soft sponge or cloth. Do not use abrasive cleaners or metal scouring pads, as these can

damage the non-stick coating. Rinse thoroughly and dry completely.

3. **Inner Lid:** The inner lid is also removable for easy cleaning. Wash it with warm, soapy water, rinse, and dry.
4. **Main Body:** Wipe the exterior of the rice cooker with a damp cloth. Do not immerse the main body in water or any other liquid.
5. **Steam Vent:** Ensure the steam vent is clear of any food debris.
6. **Storage:** Store the rice cooker in a dry place when not in use.

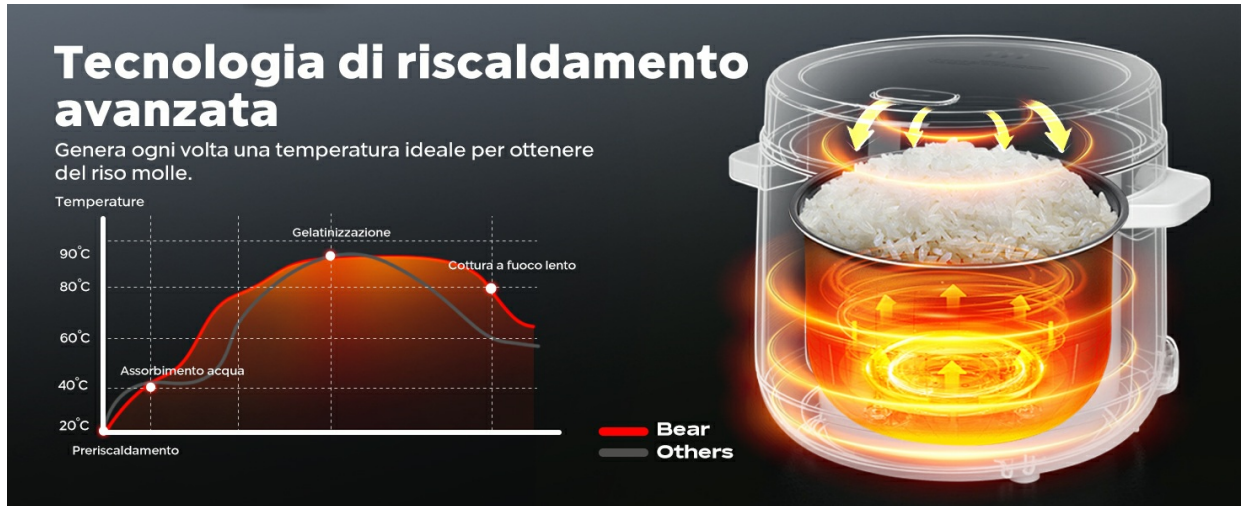


Image: The non-stick inner pot of the Bear DFB-S12E6 Mini Rice Cooker being cleaned under running water, demonstrating its easy-to-clean design. Insets show the non-stick coating and BPA-free material.

TROUBLESHOOTING

Here are some common issues and their solutions:

Problem	Possible Cause	Solution
Rice is undercooked or too hard.	Insufficient water.	Add slightly more water next time. Ensure the water level matches the rice quantity according to the inner pot markings.
Rice is overcooked or too soft/mushy.	Too much water.	Reduce water quantity next time. Ensure the water level matches the rice quantity according to the inner pot markings.
Water overflows from the steam vent during cooking.	Too much water or too much rice.	Reduce the amount of water or rice. Ensure you are using the measuring cup and following the inner pot markings.
Rice cooker does not turn on.	Not plugged in correctly; power outage.	Check if the power cord is securely plugged into both the appliance and the wall outlet. Check your household's power supply.
Rice sticks to the bottom of the pot.	Not enough water; rice not rinsed properly; inner pot coating damaged.	Ensure correct water-to-rice ratio. Rinse rice thoroughly. If coating is damaged, contact support.

SPECIFICATIONS

Feature	Detail
Brand	Bear
Model Name	DFB-S12E6
Model Number	DFB-S12E6-WHITE
Capacity	1.2 Liters (up to 2 cups uncooked rice)
Power Source	Corded Electric (300W)
Product Dimensions (DxWxH)	22.8P x 20.3l x 19.5H cm (approximately 8.98"D x 7.99"W x 7.68"H)
Material	Non-stick inner pot
Special Features	Automatic Keep Warm, Preset Function
Color	White
UPC	199284063655



Image: The Bear DFB-S12E6 Mini Rice Cooker displayed with its dimensions (22.8cm x 20.3cm x 19.5cm), emphasizing its space-saving design suitable for small kitchens or dorms.

WARRANTY AND SUPPORT

Your Bear DFB-S12E6 Mini Rice Cooker comes with a **365-day worry-free warranty** and **lifetime technical support**.

For any questions, concerns, or technical assistance, please contact Bear customer support. Details for contacting support can typically be found on the product packaging or the official Bear website.